16603PLAY

- NOTICE -
This playset product is not intended for public use. It is intended for residential application and is not warranted for public or commercial use.

Call Us First!
DO NOT RETURN TO STORE.

For immediate help with assembly or product information
call our toll-free number:
1-800-437-0784
April through October M - F 8:00 AM to 6:00 PM EST
Saturday 8:30 AM to 4:30 PM EST
November through March M - F 8:00 AM to 5:00 PM EST
or email:
customerservice@backyard-play.com
Our staff is ready to provide assistance.

(This page intentionally left blank.)

kid's creations
QUALITY REDWOOD SWING SETS

SINGLE TOWER

Base Playset

16603PLAY

LDR: 1/30/2013

Recommended for ages 3 to 11

- BEFORE YOU BEGIN -

First...

- Check with your homeowner's association before assembling.
- Read instructions thoroughly before you begin. If you have purchased accessories to accompany this play set, please read all installation instructions before beginning assembly of this structure.

Check All Parts

- If a part is missing, circle the part in question and call 1-800-437-0784.

Adult Assistance required
Assistance is necessary to handle, fit, and secure some components.

Squareness Is very Important!
Start with a level surface and keep 90° corners and 90° perpendiculars throughout the assembly to ensure all components fit together.

Safety!

- Check for protruding screws and bolts, verify all screw and bolt lengths during assembly.

Always wear OSHA-APPROVED safety glasses throughout assembly process.

Tools Required

- Level
- Hammer
- Star Drive Bit (included)
- Framing Square
- Tape Measure
- Drill
- Impact Driver
- Ladder
- Socket Set

5/16" DIAMETER X 6" MINIMUM LENGTH DRILL BIT (Not Included) REQUIRED TO COMPLETE YOUR SWING BEAM INSTALLATION.

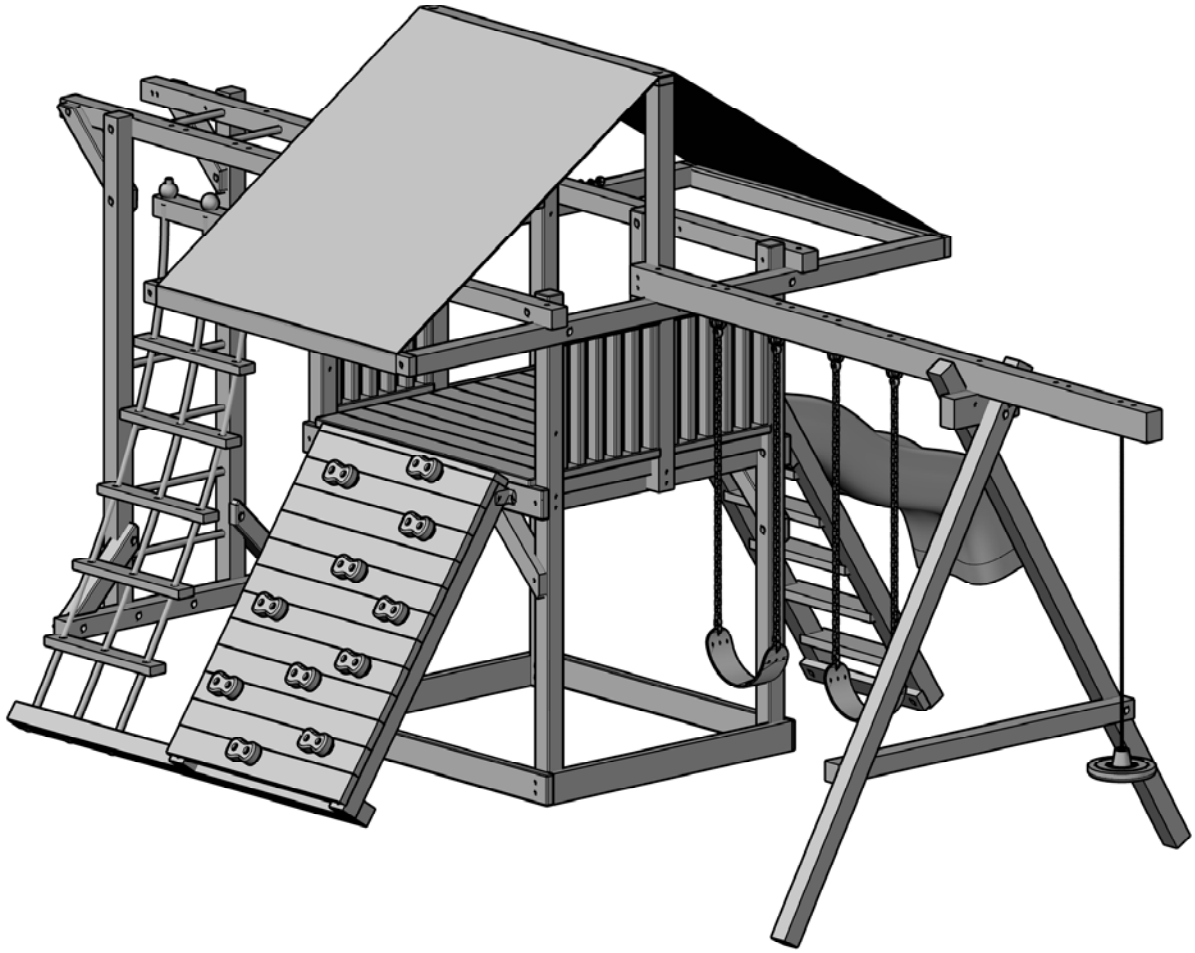

Note: Use this manual to assemble your base playset. Refer to manuals packed into other boxes for playset accessories. Your model may differ from the one shown.

ASSEMBLY SAFETY and HELPFUL HINTS

STOP! ***STOP!!!*** **Check all parts and hardware before beginning. If any parts are missing or damaged please circle and call the phone number listed.** STOP!

DO NOT CONTACT THE STORE OR RETURN YOUR PLAYSET !

KEEP THIS INSTALLATION MANUAL FOR FUTURE CARE AND MAINTENANCE REFERENCE.

To aid in making your playset assembly easier, here is a listing of some helpful hints.

- ❑ Wear safety glasses during drilling, assembly of your playset.
- ❑ Children should not be allowed in the playset assembly and build area.
- ❑ Note the hole orientation on parts to avoid having to take parts apart later.
- ❑ Some steps require the assistance of two people to ensure proper assembly, safety during assembly, as well as preventing any damage to the playset.

STOP! ***IMPORTANT HARDWARE INFORMATION*** STOP!

- ❑ All hex bolts and lag bolts require a lock washer or lock nut.
- ❑ To properly install lock nuts, two to three threads must protrude past the lock nut and be exposed once tightened.
- ❑ Make sure all fasteners used are as specified. Using a fastener not specified in a particular application may result in too much thread exposure or not enough thread engagement.
- ❑ **DO NOT OVERTIGHTEN LAG BOLTS**

NOTE: Attach all bolts as pictured below to prevent the bolt end from harming anyone.

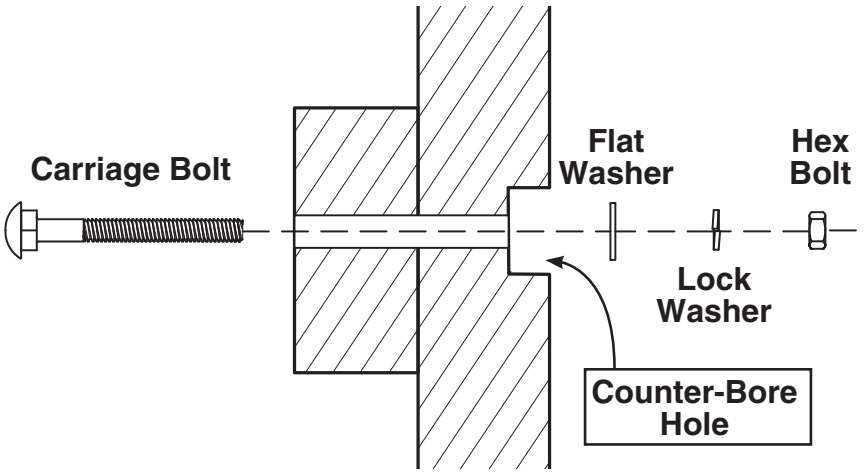

ASSEMBLY SAFETY and HELPFUL HINTS

Please read carefully. Observing the following statements and warnings reduces the likelihood of serious or fatal injury.

- ❑ This playset has been designed for use by a maximum of eight occupants at one time having a combined weight of 1,200 pounds. (This weight does not include occupants in the sandbox area.)
- ❑ This playset is recommended for children (3) through (11) years of age.
- ❑ On-site adult supervision for children of all ages is recommended.
- ❑ Instruct children not to walk close to, in front of, behind, or between moving items.
- ❑ Instruct children not to twist swing chains or ropes or loop them over the top support bar since this may reduce the strength of the chain or rope.
- ❑ Instruct children to avoid swinging empty seats.
- ❑ Teach children to sit in the center of the swings with their full weight on the seats.
- ❑ Instruct children not to use the equipment in a manner other than intended.
- ❑ Instruct children not to get off equipment while it is in motion.
- ❑ Parents should dress children appropriately (examples would include the use of well- fitting shoes and the avoidance of ponchos, scarves, and other loose-fitting clothing that is potentially hazardous while using equipment).
- ❑ Instruct children not to climb when the equipment is wet. Slippery surfaces may cause a hazard.
- ❑ Verify that suspended climbing ropes, chain, or cable are secured at both ends.
- ❑ Verify that suspended climbing ropes, chain, or cable cannot be looped back on itself.
- ❑ Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
- ❑ Instruct children to remove their bike or other sports helmet before playing on the playground equipment.
- ❑ Instruct children to not walk or run up slides.
- ❑ Instruct children to not pick up slides or ramps as this may cause damage or breakage.
- ❑ Place the equipment on level ground not less than six (6) feet from any obstructions. Be sure to look overhead for any obstructions above the playset.
- ❑ Do not use the equipment until fully erected per this playset instruction manual, bolts tightened and the playset is anchored to the ground.

NOTICE:
This playset product is not intended for public use. It is intended for residential application and is not warranted for public or commercial use.

MAINTENANCE

Periodic maintenance is required to ensure safe enjoyment of your playset and optional accessories. Observing the following procedures reduces the likelihood of serious or fatal injury.

- ❑ **Activity on your playset and optional accessories may loosen fasteners. Check all lock nuts, hex and lag bolts, quick clips, spring clips, acorn nuts, wood screws, and swing hangers for tightness and tighten as required. T-nuts should be inspected for full and proper seating into the wood.**

- ❑ Checking, splitting and surface cracking are characteristics of all wooden playsets. This is caused by varying seasonal temperatures and moisture conditions. To minimize this checking and/or cracking you may coat your playset with a water repellent.

PLAYSET CHECKLIST

At the beginning of each play season:

- ☐ Tighten all hardware.
- ☐ Lubricate all metallic moving parts per manufacturer's instructions.
- ☐ Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- ☐ Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- ☐ Check metal parts for rust. If found, sand and repaint using a nonleaded-based paint meeting the requirements of 16 CFR 1303.
- ☐ Check all wood members for deterioration and splinters. Sand down splinters and replace deteriorating wood members.
- ☐ Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- ☐ Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Twice a month during play season:

- ☐ Tighten all hardware.
- ☐ Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- ☐ Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Once a month during play season:

- ☐ Lubricate all metallic moving parts per manufacturer's instructions.
- ☐ Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- ☐ At the end of each play season or when the temperature drops below 10°F remove plastic swing seats, tents, sandbox cover, tire swing, slide and other items as specified by the manufacturer and take indoors or do not use.
- ☐ Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth.Replace as necessary.

When you are ready to dispose of your playset, make sure that all metal, plastic and wood components are disposed of in accordance with local waste ordinances.

Buyer and/or owner should disassemble and dispose of the playground equipment in such a way that no unreasonable hazards will exist at the time the swing set is discarded.

PLAYGROUND SURFACING MATERIALS

SECTION 4 OF THE CONSUMER PRODUCT SAFETY COMMISSION'S OUTDOOR HOME PLAYGROUND SAFETY HANDBOOK[9]

Select Protective Surfacing

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM Specification F 1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing. Ground level equipment – such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface – does not need any protective surfacing.

Maximum fall height for this playset is 80".

Loose-Fill Materials:

- ❑ Maintain a minimum depth of 9 inches of loose- fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9 inches of sand or pea gravel for equipment up to 5 feet high. NOTE: An initial fill level of 12 inches will compress to about a 9- inch depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9- inch depth.
- ❑ Use a minimum of 6 inches of protective surfacing for play equipment less than 4 feet in height. If maintained properly, this should be adequate. (At depths less than 6 inches, the protective material is too easily displaced or compacted.)
- ❑ Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage. U.S Consumer Product Safety Commission, Washington, D.C., 20207 or call the toll-free hotline :1-800-638-2772
- ❑ Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose-fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing.
- ❑ **Do not** install loose fill surfacing over hard surfaces such as concrete or asphalt.

Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles:

You may be interested in using surfacing other than loose-fill materials – like rubber tiles or poured-in-place surfaces.

- ❑ Installations of these surfaces generally require a professional and are not "do-it-yourself" projects.
- ❑ Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacturer for a report showing that the product has been tested to the following safety standard: ASTM F 1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height – vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below – of your play equipment.
- ❑ Check the protective surfacing frequently for wear.

Placement

Proper placement and maintenance of protective surfacing is essential. Be sure to

- ❑ Extend surfacing at least 6 feet from the equipment in all directions.
- ❑ For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- ❑ For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 feet in all directions.

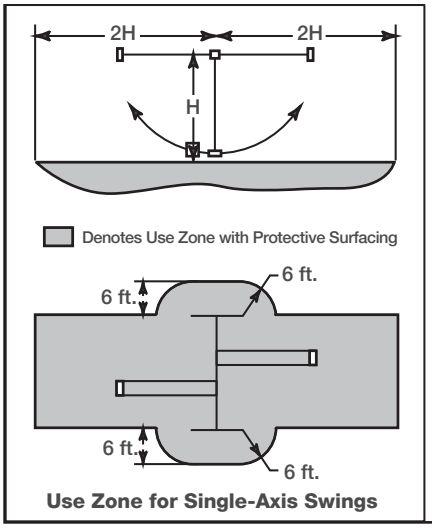

Use Zone for Single-Axis Swings

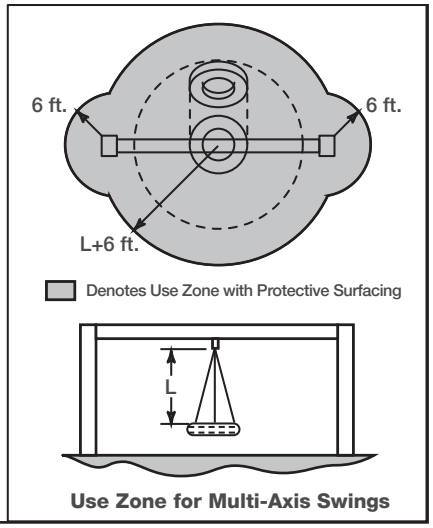

Use Zone for Multi-Axis Swings

9 **This information has been extracted from the CPSC publications "Playground Surfacing—Technical Information Guide" and "Handbook for Public Playground Safety." Copies of these reports can be obtained by sending a postcard to the: Office of Public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C., 20207 or call the toll-free hotline: 1-800-638-2772**

BASE PARTS LIST

NOTE: Each wood part is stamped with part identification number shown in box.

3-1/2 x 5-1/2 x 58"

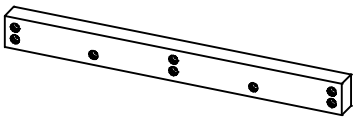

8 x2

3-1/2 x 3-1/2 x 34-1/2"



6 x1

1-1/2 x 5-1/2 x 58"



3 x3

1-1/2 x 5-1/2 x69"

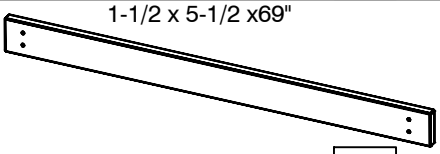

2 x2

1-1/2 x 5-1/2 x 66"

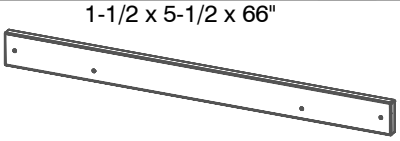

7 x2

1 x 5-1/2 x 59"



9 x11

3-1/2 x 3-1/2 x 24-7/16"



4 x2

3-1/2 x 3-1/2 x 24-7/16"

5 x2

3-1/2 x 3-1/2 x 77"



28 x2

1-1/2 x 3-1/2 x 23-5/8"

12 x2

1-1/2 x 3-1/2 x 30-1/2"

95 x1

3-1/2 x 3-1/2 x 75"



25 x2

3-1/2 x 3-1/2 x 95-3/4"



297 x2

3-1/2 x 3-1/2 x 95-3/4"



1 x2

HANDRAIL

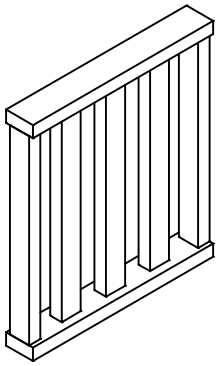

3135 x2

LADDER

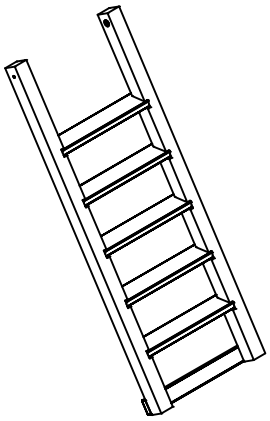

3139 x1

FOR PLAYSET ACCESSORIES (SWINGS, HANDLES, ROPE, ETC.)
SEE THE LISTING IN YOUR ACCESSORY BOX

FASTENER/HARDWARE IDENTIFICATION (Shown Actual Size)

3" Wood Screw

☐ **x84**

2 1/2" Wood Screw

☐ **x25**

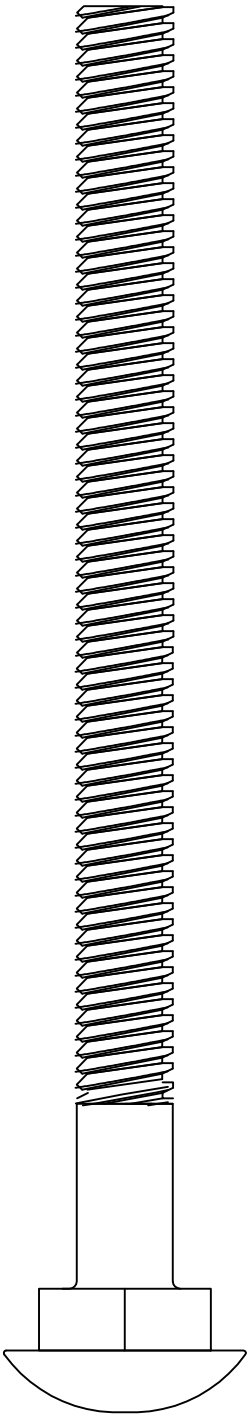

1/2 x 7" Carriage Bolt

☐ **x19**

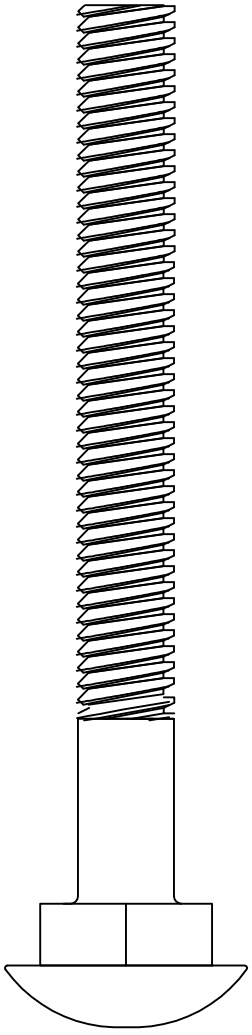

1/2 x 5" Carriage Bolt

☐ **x19**

Drive Bit



☐ **x1**

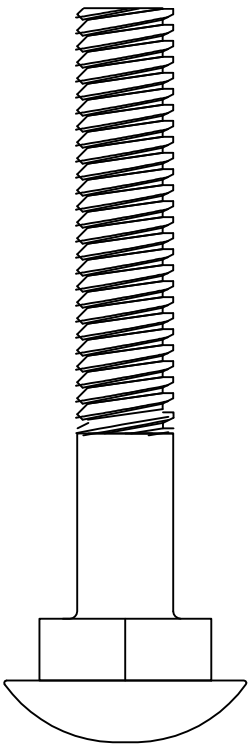

1/2 x 3-1/2" Carriage Bolt

☐ **x2**

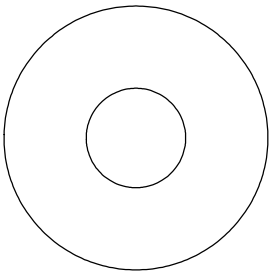

1/2" Flat Washer

☐ **x42**

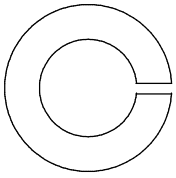

1/2" Lock Washer

☐ **x42**

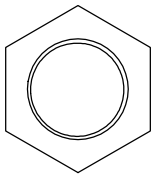

1/2" Hex Nut

☐ **x41**



1/2" Acorn Nut

☐ **x 4**

PLAYSET SAFETY ZONES

- **For safety a 6' safety zone is required on all sides of your playset.**

Locate your Playset Model's safety zone on the following pages to determine accessory locations and correct safety dimensions.

Page 8: OPENING ACT / OCEAN SIDE

Page 9: THREE RING / HANG TEN - GRAND STAND / TYPHOON

Page 10: OPENING STAR / CYCLONE - JUGGLING ACT / SAND DOLLAR

Page 11: BIG TOP

REFER TO PAGE 12 FOR CUSTOM PLAYSETS

OPENING ACT / OCEAN SIDE SAFETY ZONE

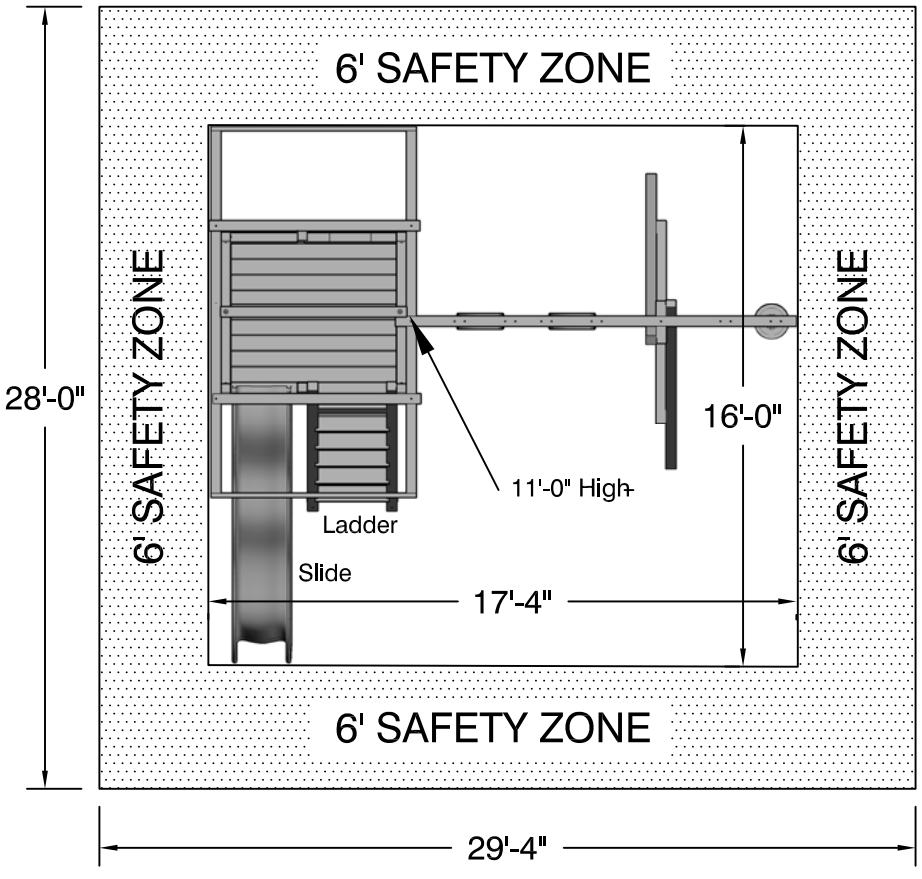

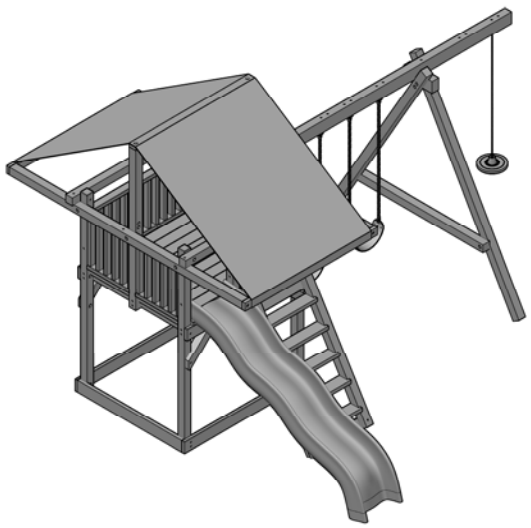

THREE RING ADVENTURE / HANG TEN SAFETY ZONE

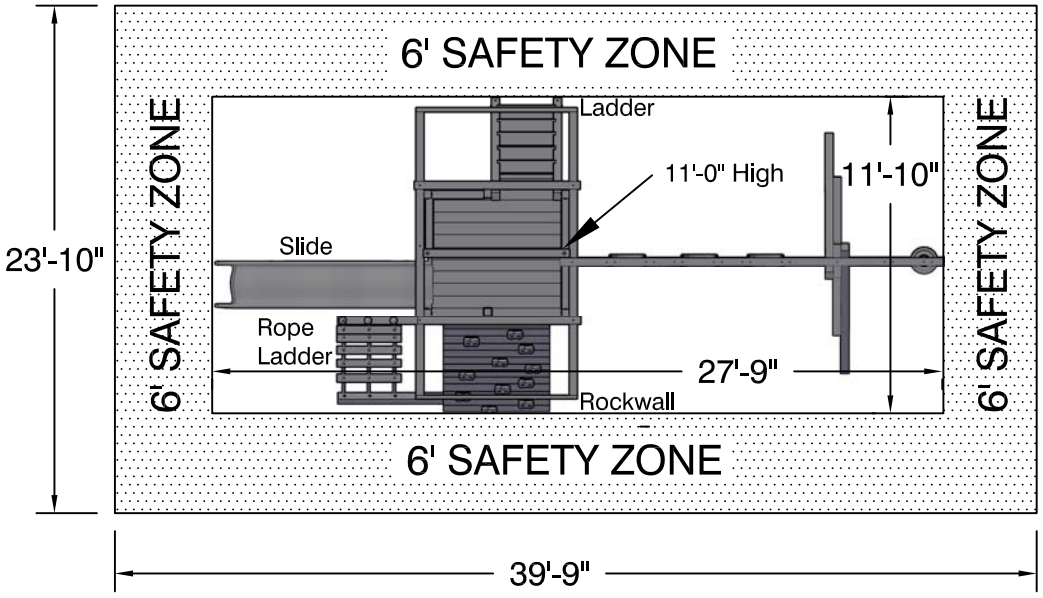

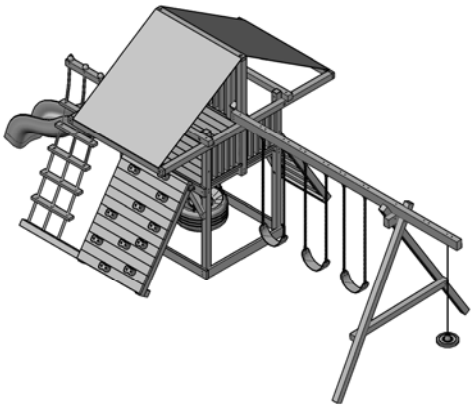

GRAND STAND / TYPHOON SAFETY ZONE

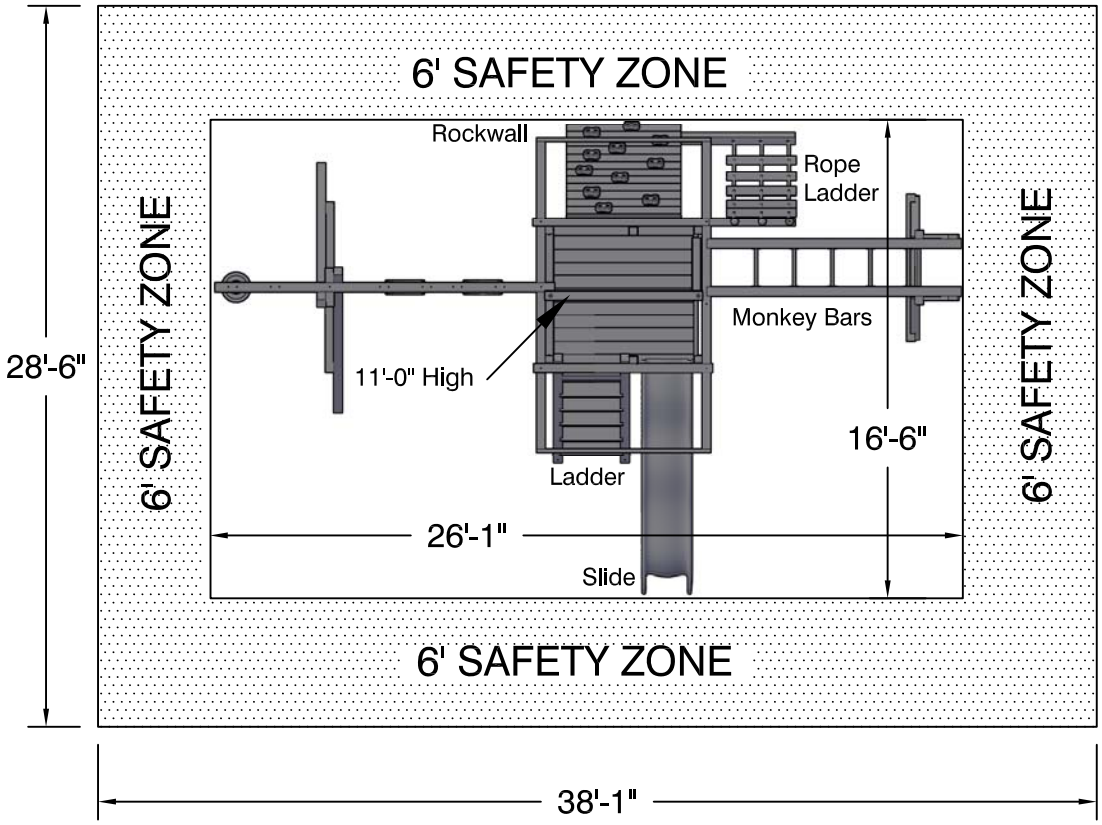

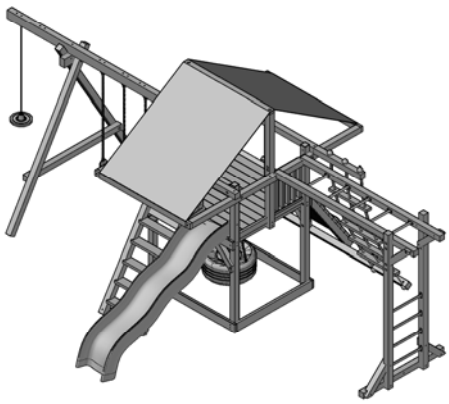

OPENING STAR / CYCLONE SAFETY ZONE

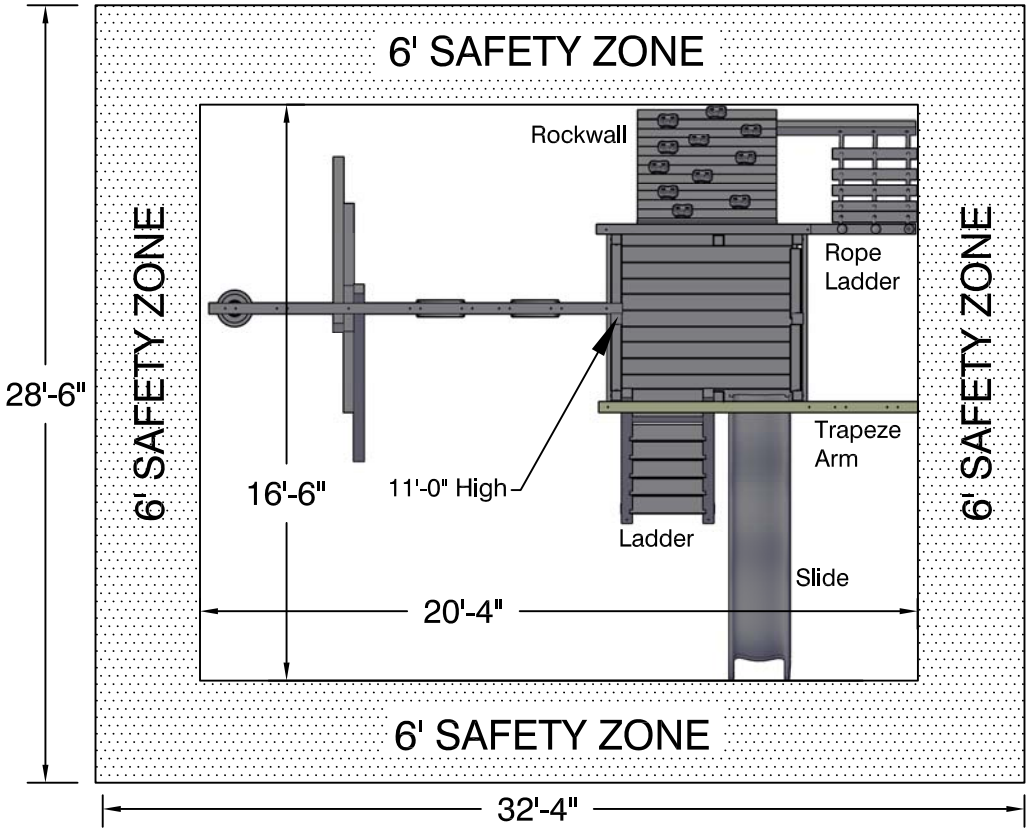

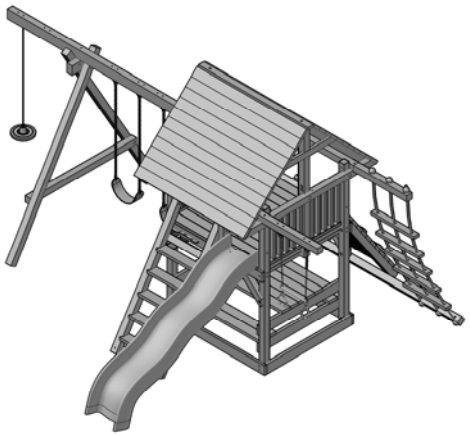

JUGGLING ACT / SAND DOLLAR SAFETY ZONE

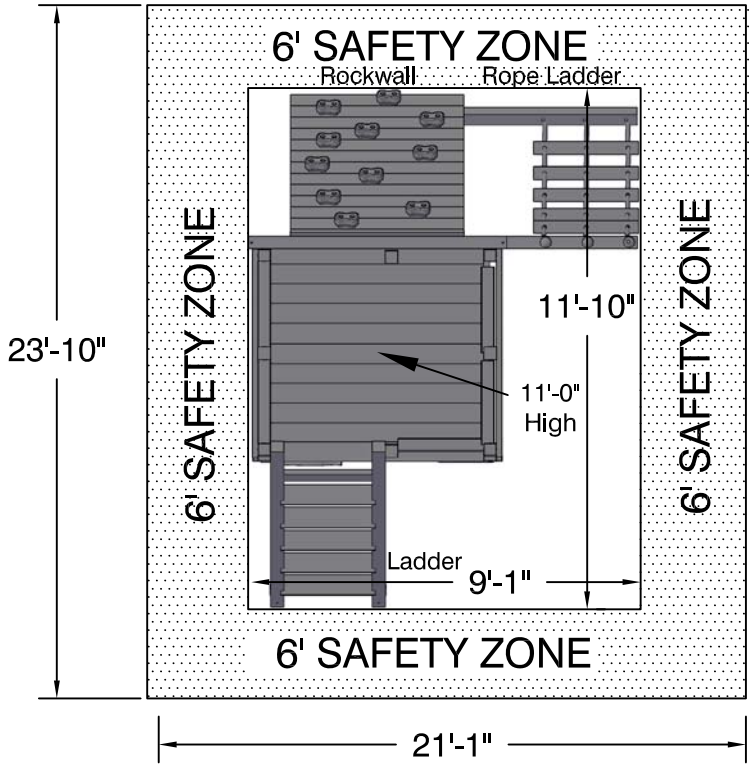

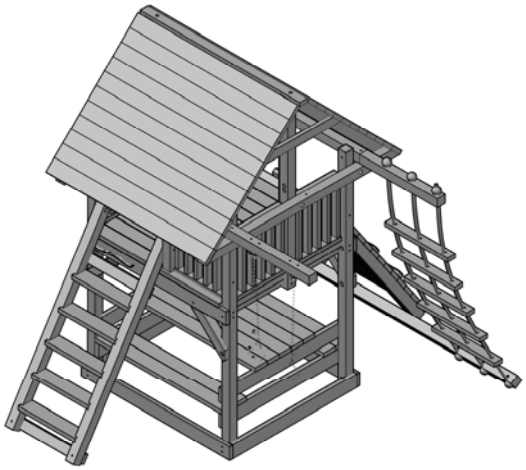

BIG TOP / WAVE RIDER SAFETY ZONE

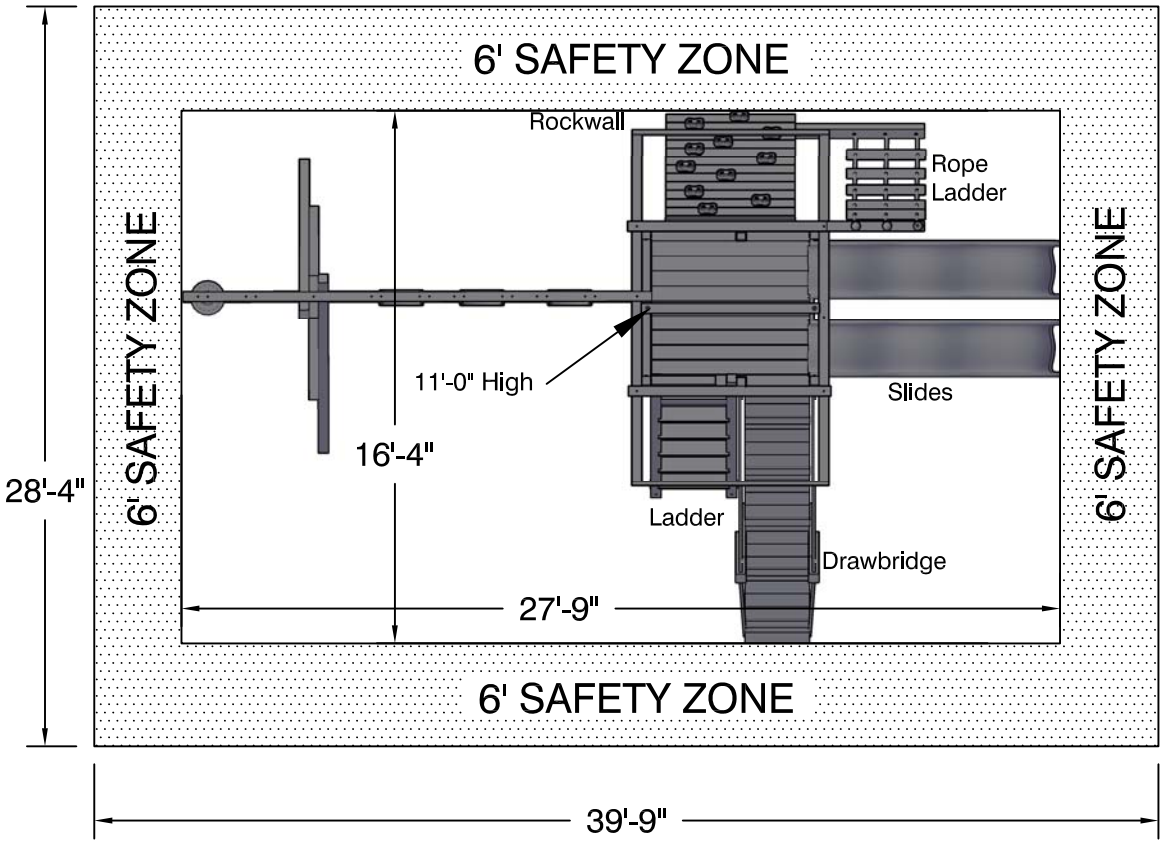

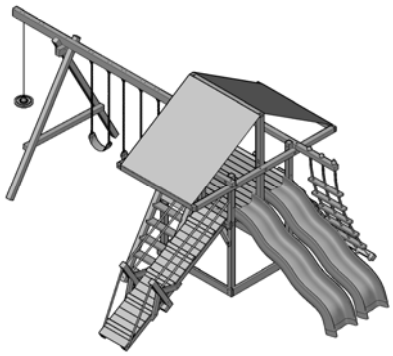

THIS SPACE INTENTIONALLY LEFT BLANK.

CUSTOM SAFETY ZONE CALCULATOR

- For safety a 6' safety zone is required on all sides of your playset.
- Due to various locations playset accessories may be installed you need to determine the safety zone.

Step 1. Determine the location of each playset accessory.
Step 2. Using the Accessory Key add the measurement of each accessory to the base size shown to determine your playset size.
Step 3. Add 6' per side or 12' overall to the length and width of your playset. This is the area with safety zone required for your playset.

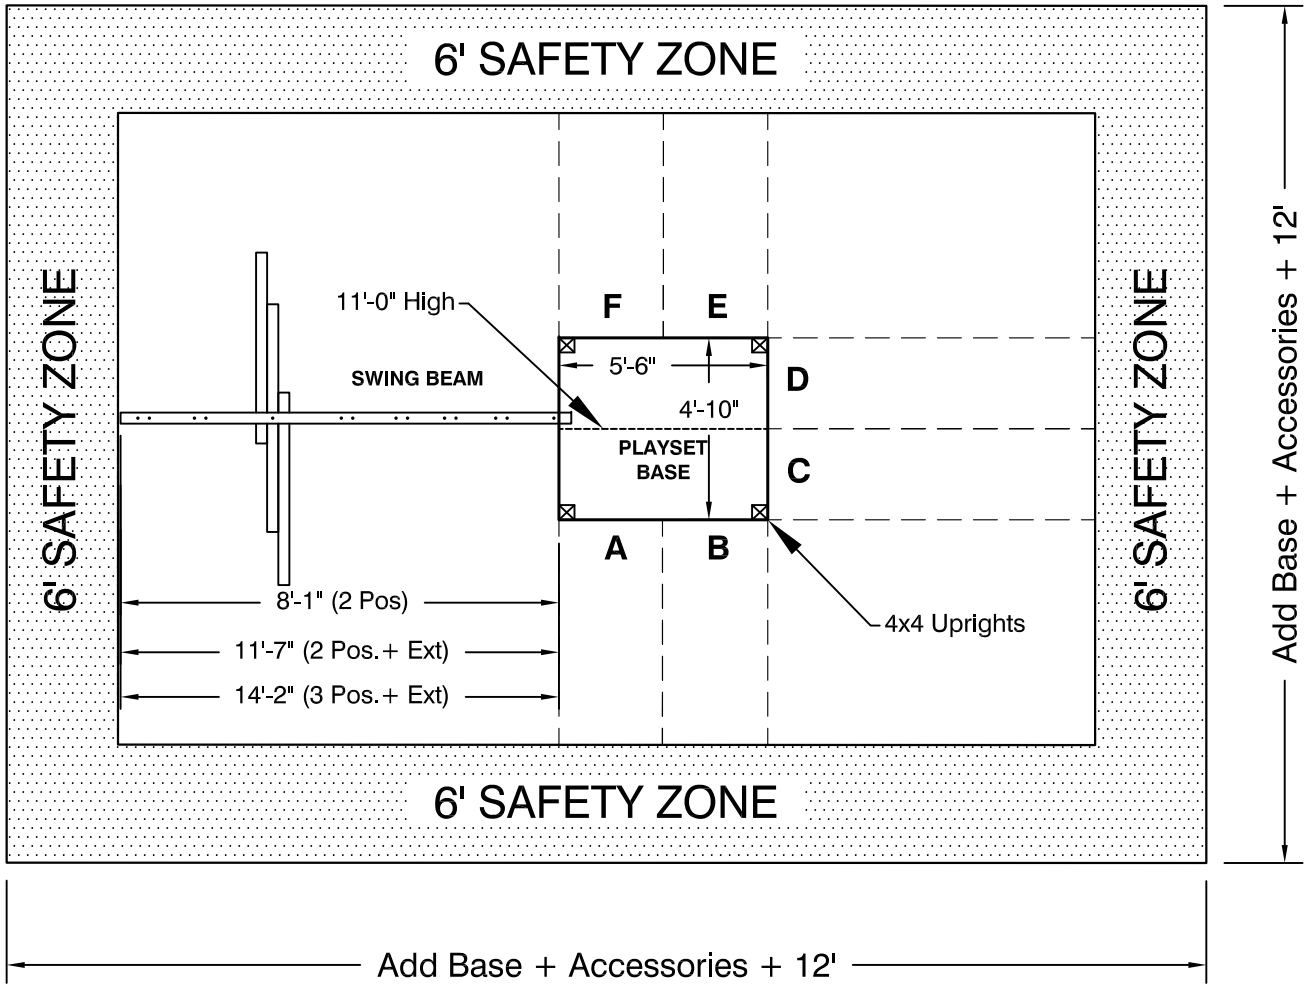

ACCESSORY KEY

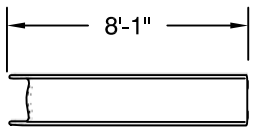

Slide Locations (**A,B,C,D,E,F**)

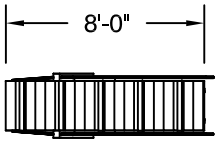

Drawbridge Locations (**A,B,C,D,E,F**)



Rockwall Locations (**AB , EF**)

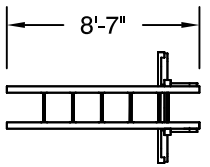

Monkey Bar Locations (**C,D**)

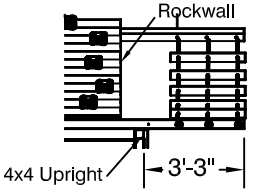

Rope Ladder Location (**C,D**)

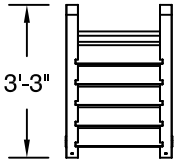

Ladder Locations(**A,B,E,F**)

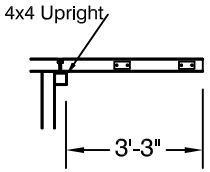

Trapeze Arm Location (**C,D**)

Intentionally Left Blank

TOWER ASSEMBLY

PARTS REQUIRED:

(2) 1 Tower Legs
(2) 297 Tower Legs
(2) 8 Deck Support
(2) 26 or 26A Canopy Support (In Separate Box)

x12 C3

Note: Assemble this swing beam wall first.

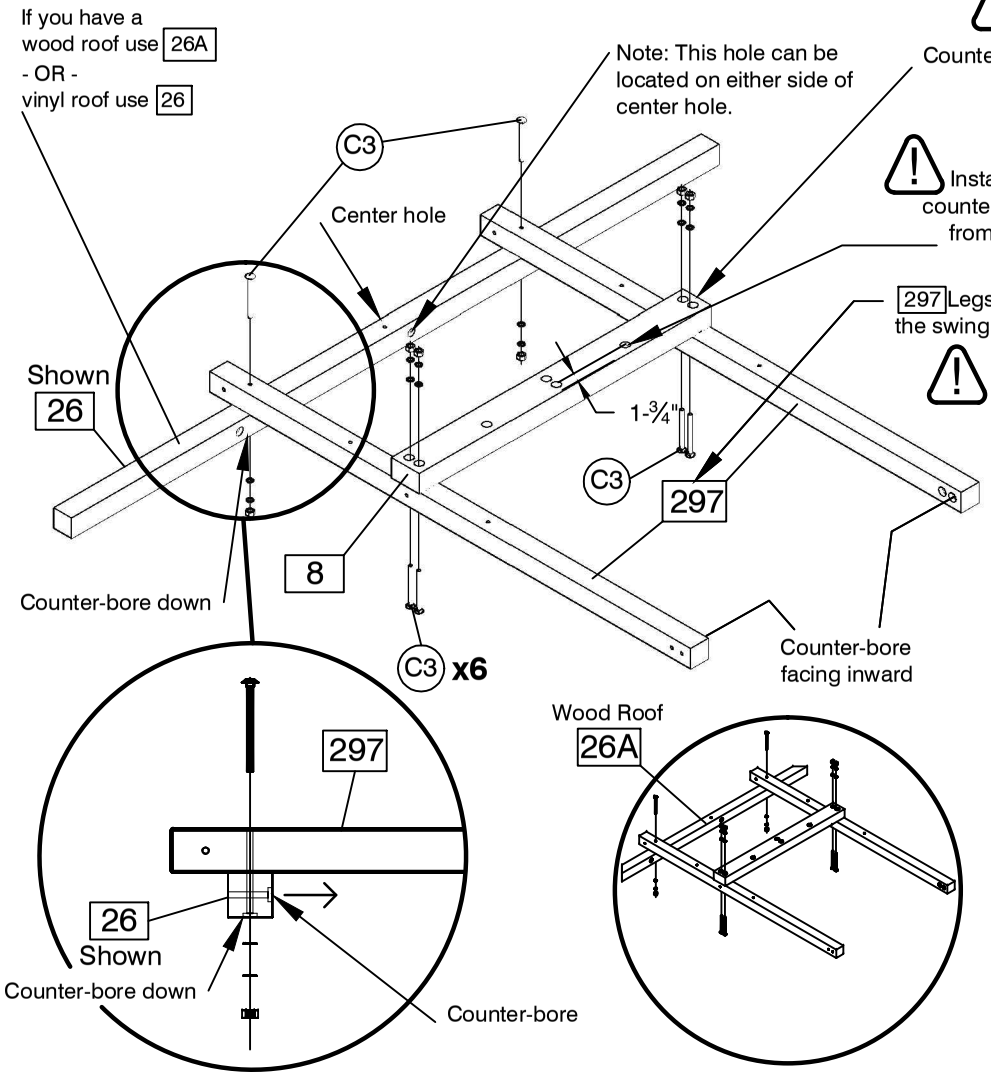

Note: Assemble this wall second. It will be erected opposite the swing beam wall.

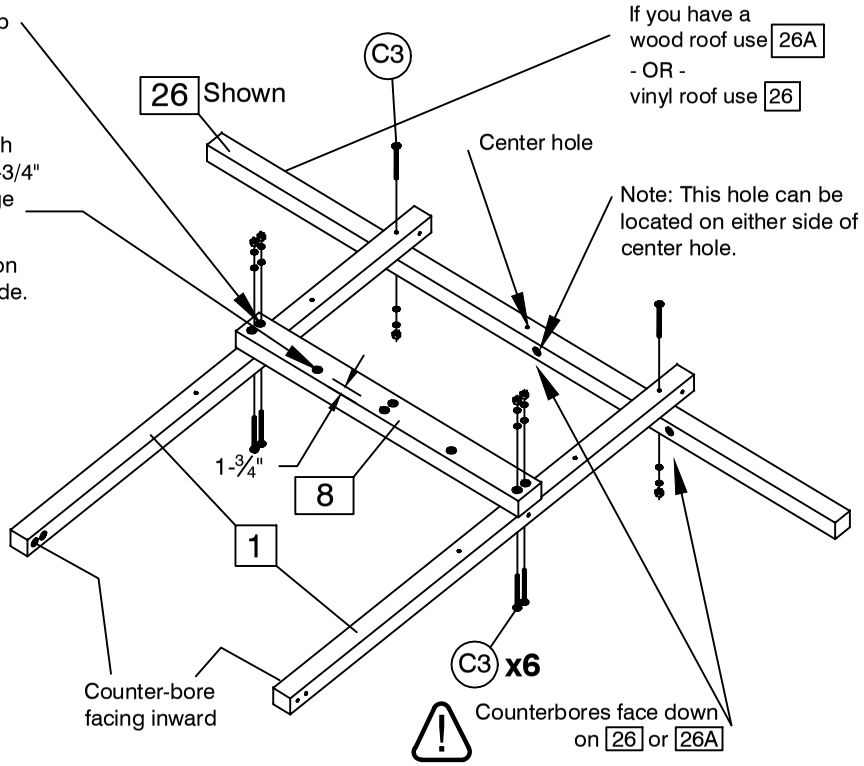

TOWER SUPPORT

PARTS REQUIRED:

(2) 3 Tower Base Board
(2) 4 Right Hand Brace
(2) 5 Left Hand Brace
(2) 7 Tower Facer Board
(2) 2 Tower End Board

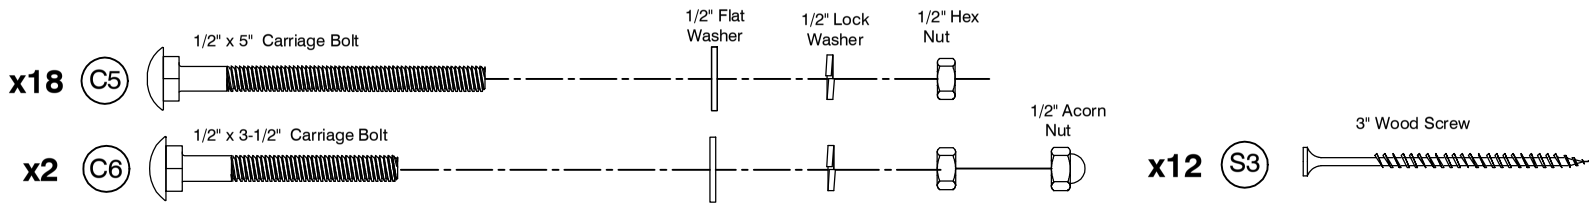

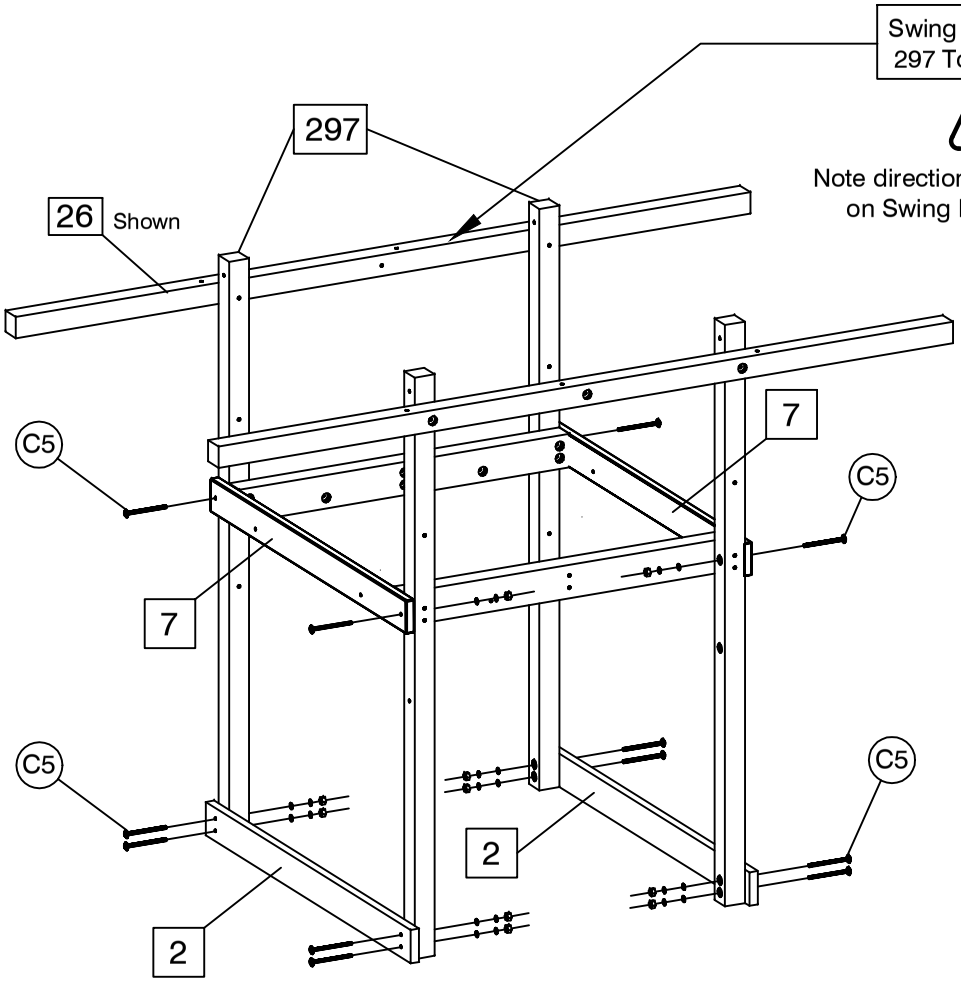

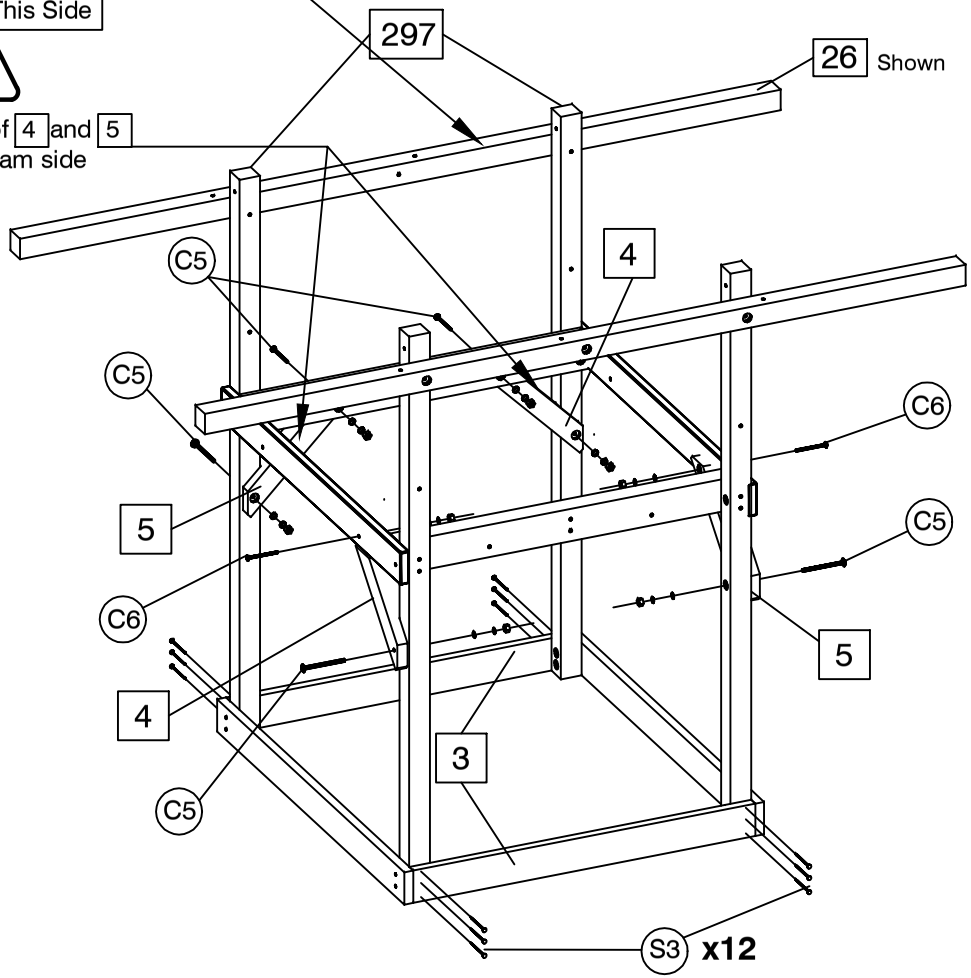

TOWER DECK

PARTS REQUIRED:
(11) 9 Deck Board

x44 S3 — 3" Wood Screw

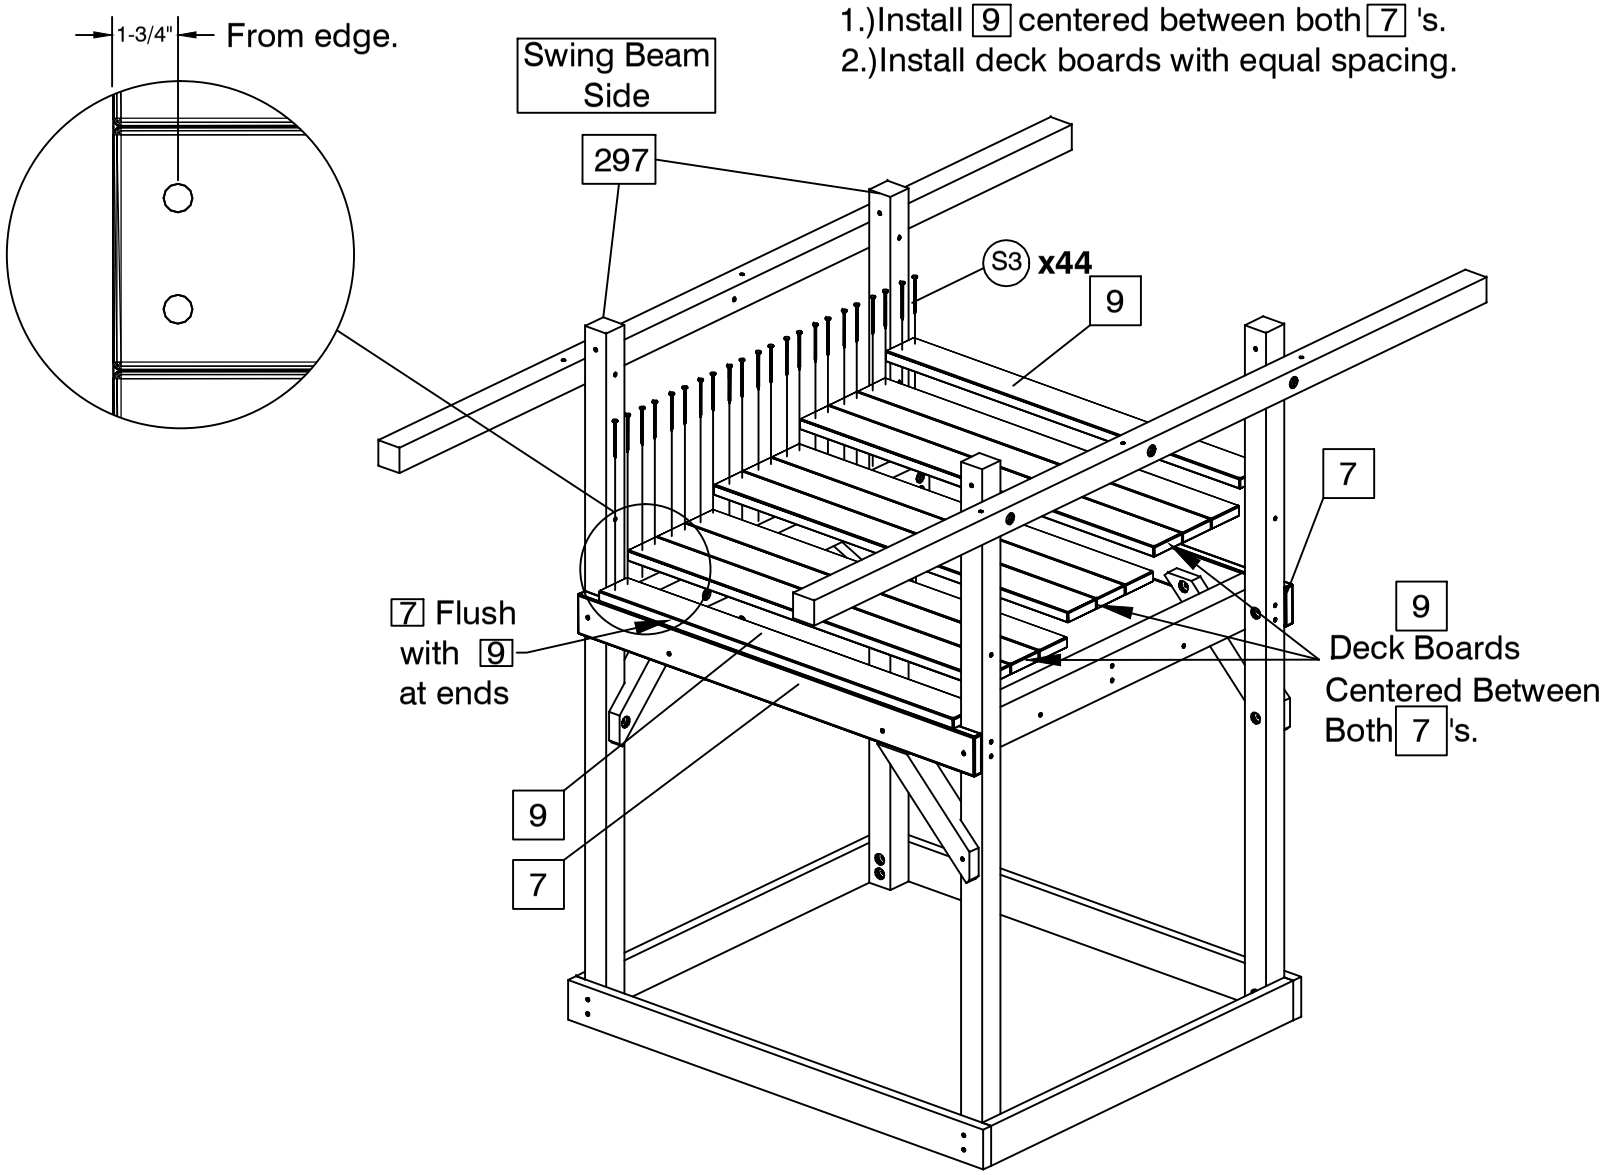

TOWER RAIL SUPPORTS (Optional TRAPEZE & ROPE LADDER)

PARTS REQUIRED:
(2) 25 Tower End Brace
For optional rope ladder or trapeze arm use:
(1) 38 Rope Ladder Arm -OR- (1) 40 Trapeze Arm
(Both In Seperate Boxes)
(1) 3 Deck Cleat

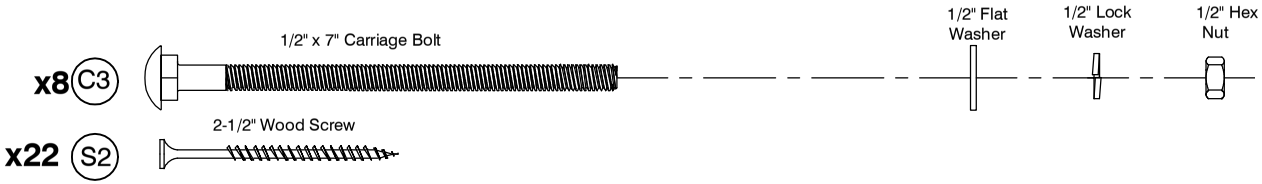

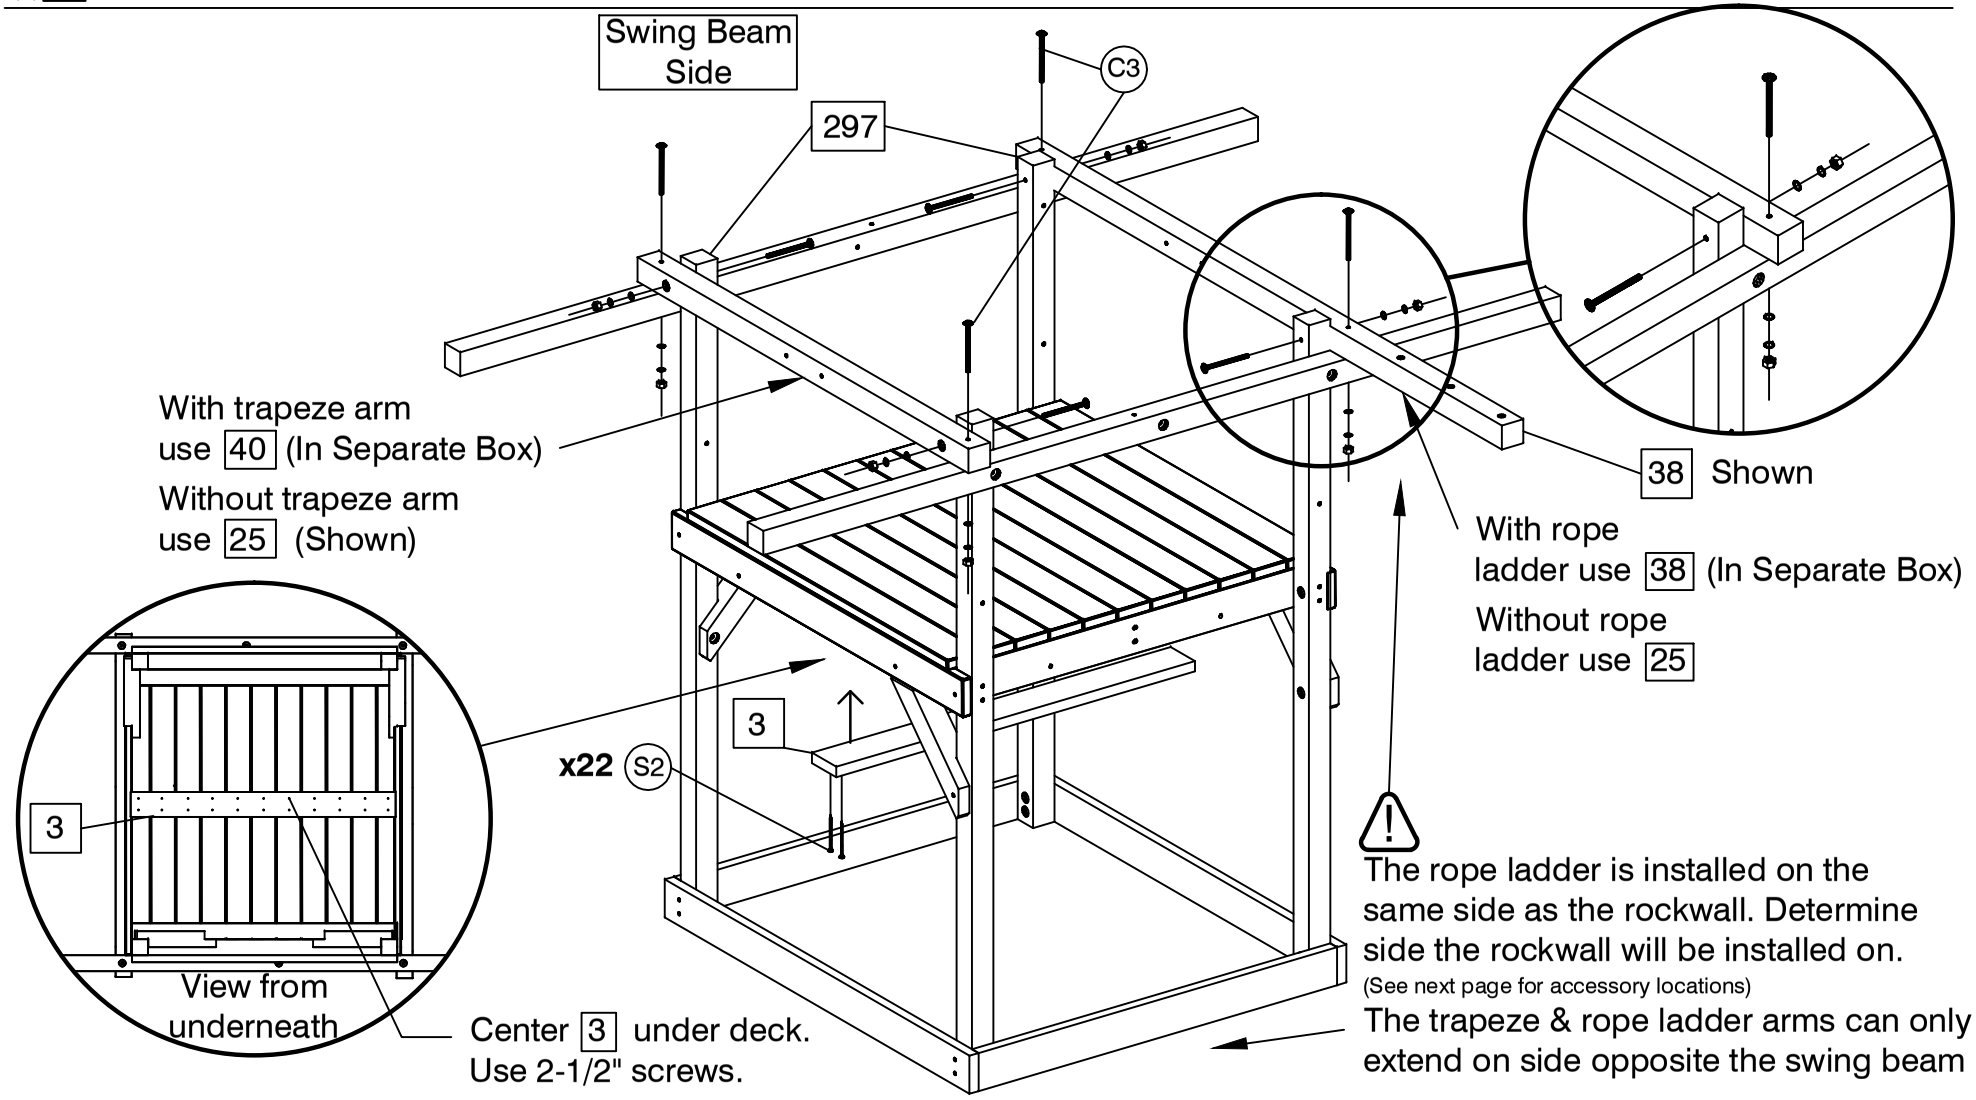

ACCESSORY LOCATION & INSTALLATION

Determine locations and install your accessories **BEFORE** installing hand rails and handrail support posts.
Note accessory option locations below. Refer to the instructions packed into the add-on and accessory cartons for proper installation .

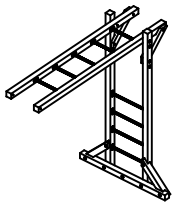

Monkey Bar
Locations (**C,D)**

Refer to next page for installation.

Ladder
Locations(**A,B,E,F)**

Refer to page 18 for installation.

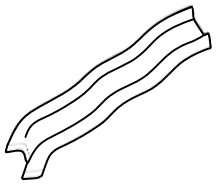

Slide
Locations (**A,B,C,D,E,F)**

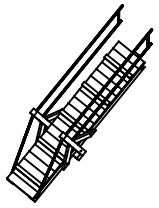

Drawbridge
Locations (**A,B,C,D,E,F)**

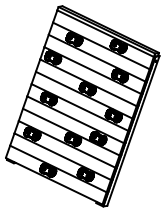

Rockwall
Locations (**AB , EF)**



Trapeze
Locations (**C,D)**



Rope Ladder
Location (**C,D)**

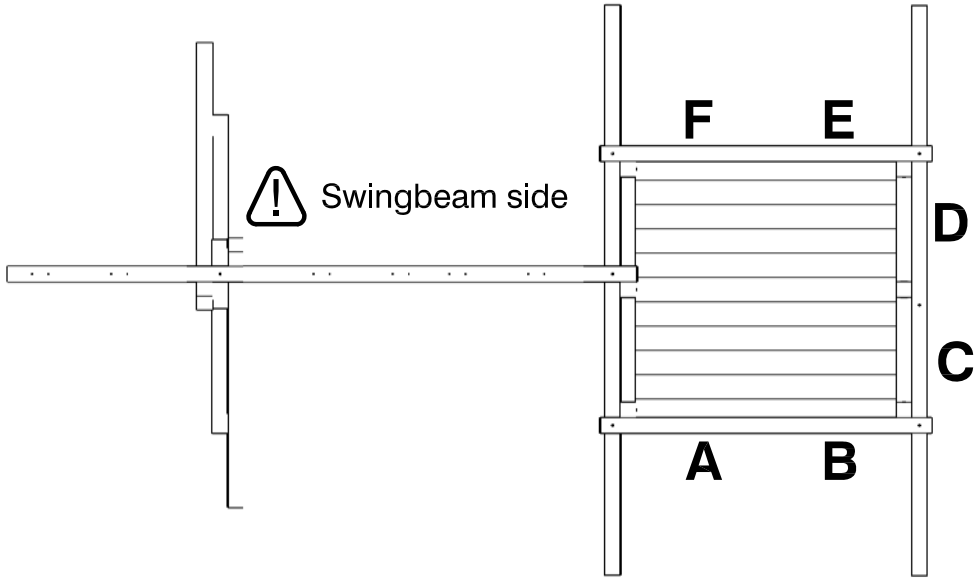

LADDER INSTALL

PARTS REQUIRED:

(1) 3135 Ladder Assembly
(1) 95 Ladder Brace
(1) 6 Handrail Post

1.) Determine your ladder location.
2.) Install 6 to measurement shown in pre-drilled hole.
3.) Install 3135 ladder

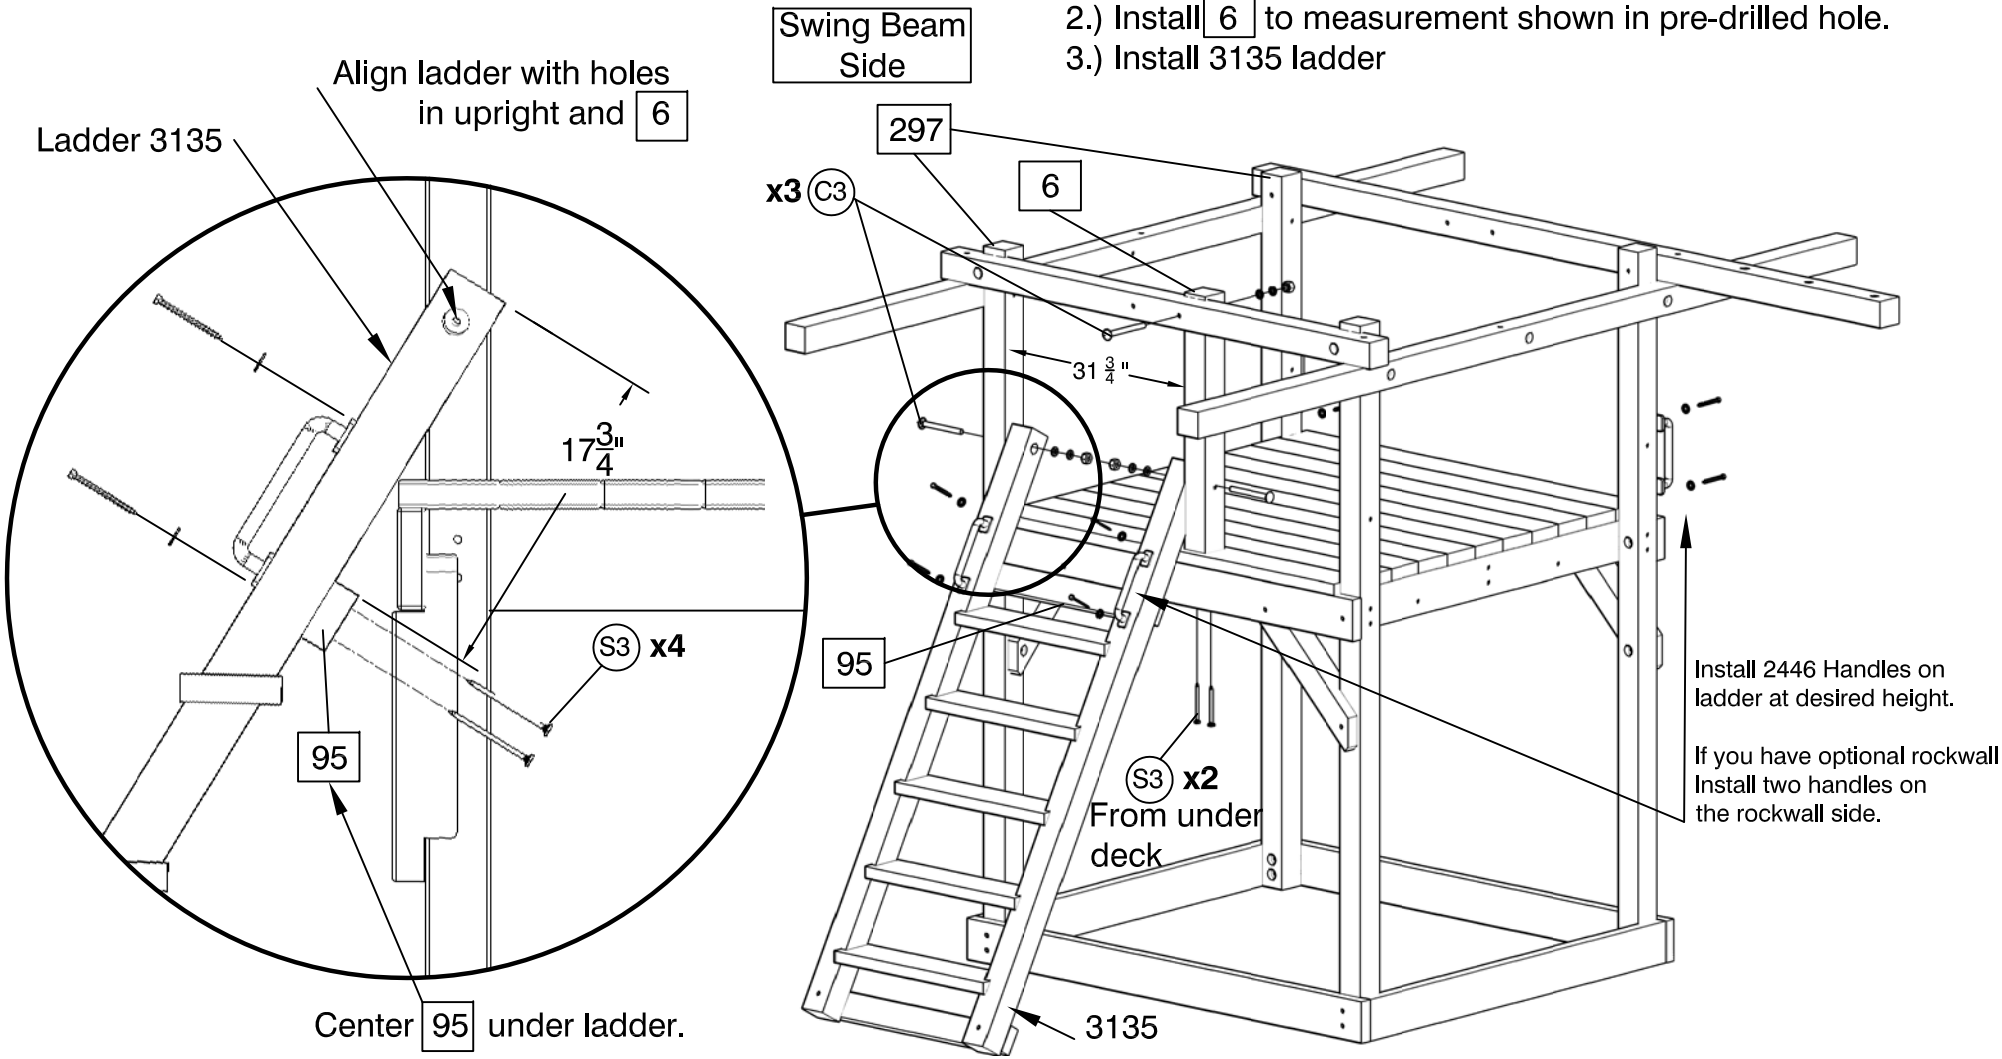

CANOPY UPRIGHT

PARTS REQUIRED:
(2) 28 Canopy Upright

x6 C3



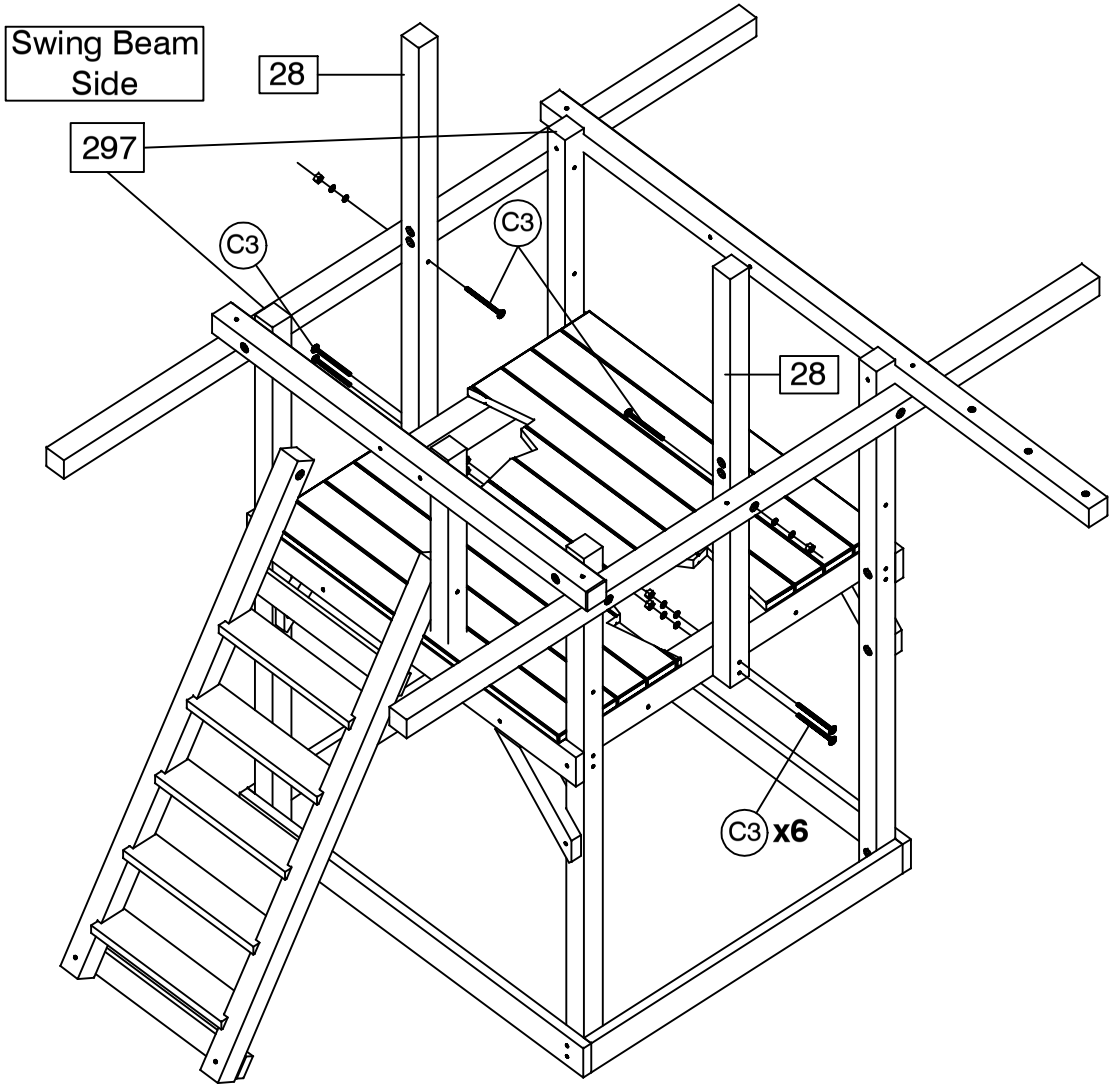

Note: Location of ladder may vary.

SWING BEAM / ROOF INSTALLATION

⚠ Refer to your vinyl roof instruction manual for assembly and installation.

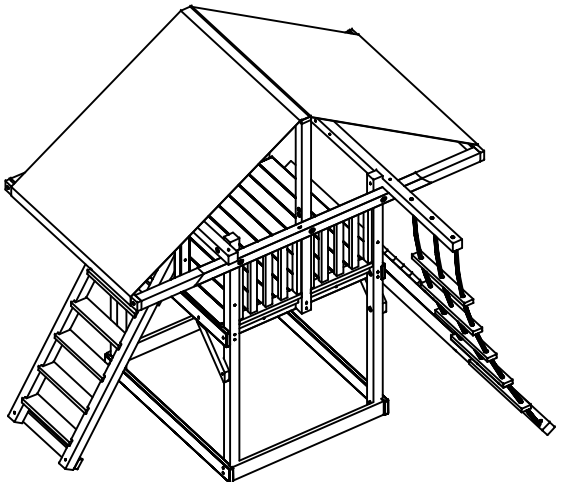

⚠ Refer to your wood roof instruction manual for assembly and installation.

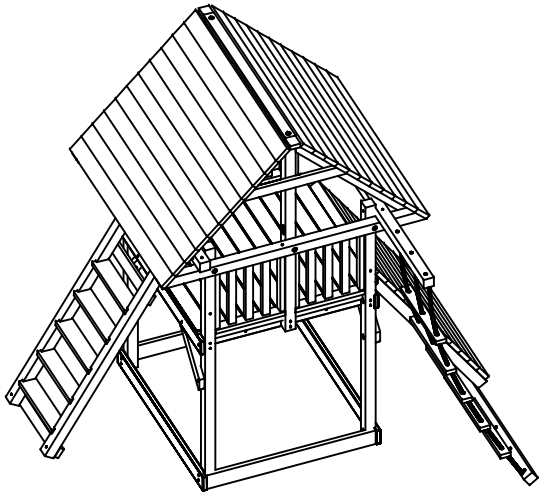

⚠ Refer to your swing beam instruction manual for assembly and installation.

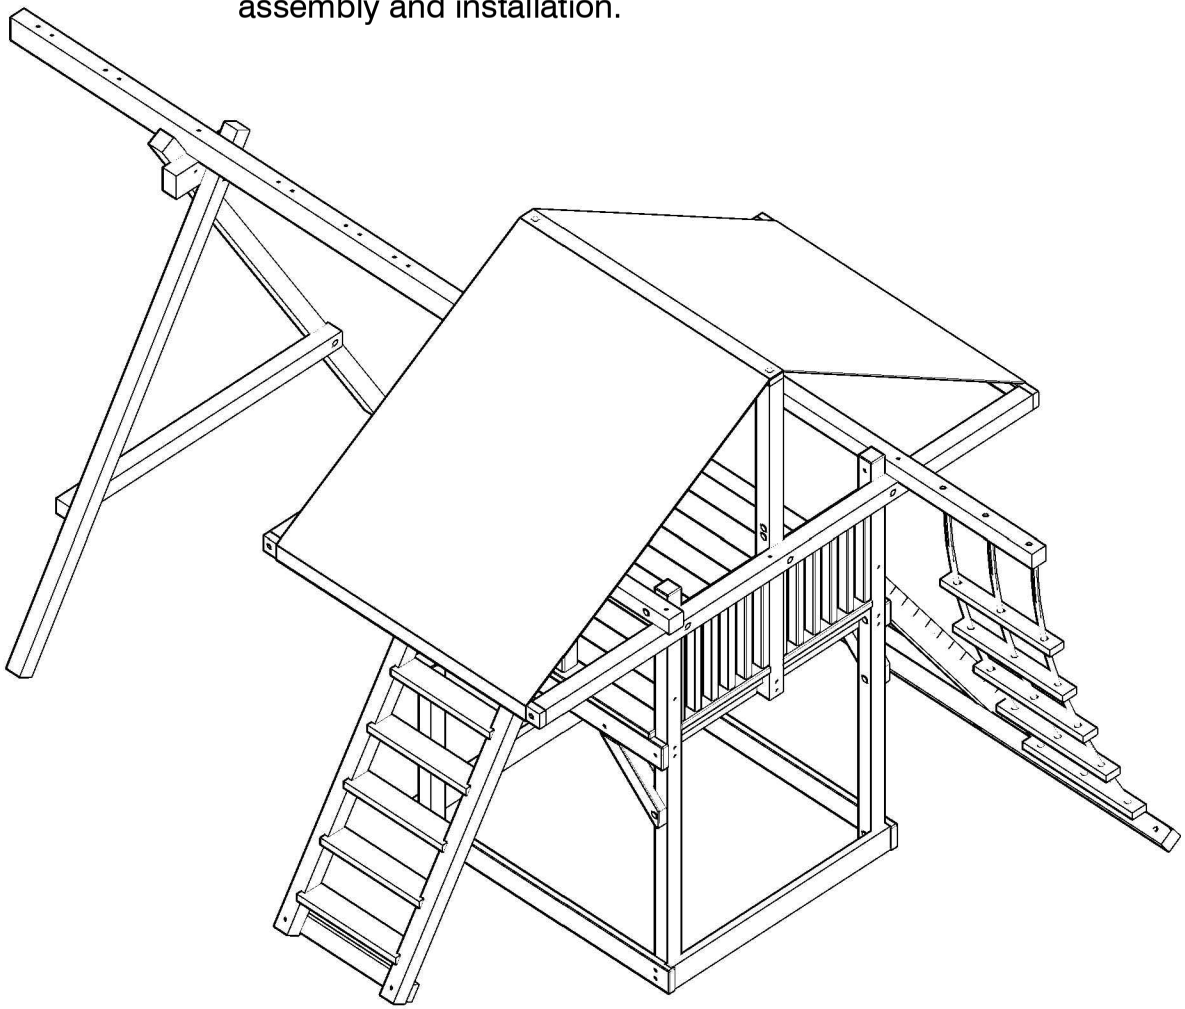

HANDRAIL INSTALLATION

PARTS REQUIRED:
(2) 12 Deck Facer Board
3135 Handrail Assembly

x28 (S3) 3" Wood Screw

Step 1

Install 12 flush with top of deck.

You must install two rails on the swing beam side .

Swing Beam Side

12

x4 (S3)

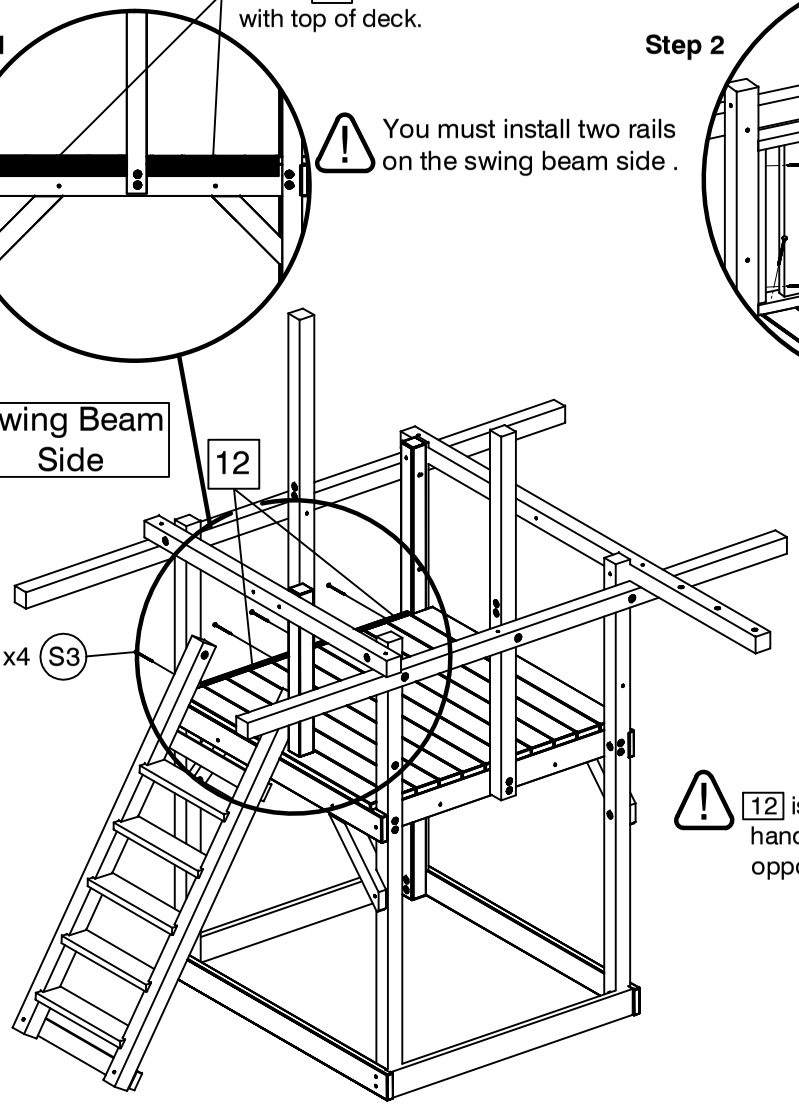

Step 2

(S3) (6) Per rail

Flush with uprights

Screw thru side rail into uprights and screw thru lower rail into 12

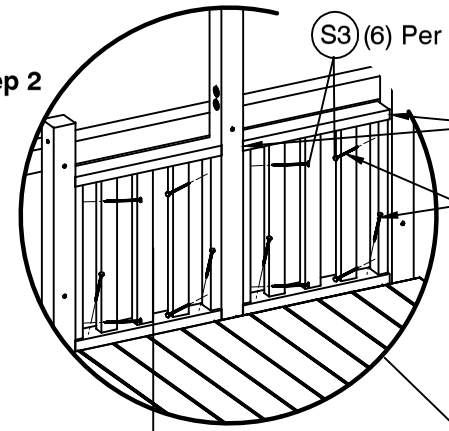

12 is not used under handrails on this or opposite side.

Step 3

Install rails in openings without accessories. (Your rails may vary than ones shown)

Swing Beam Side

3135

Top and bottom of rails flush to 4x4's

3135

Use 12 under handrails this side.

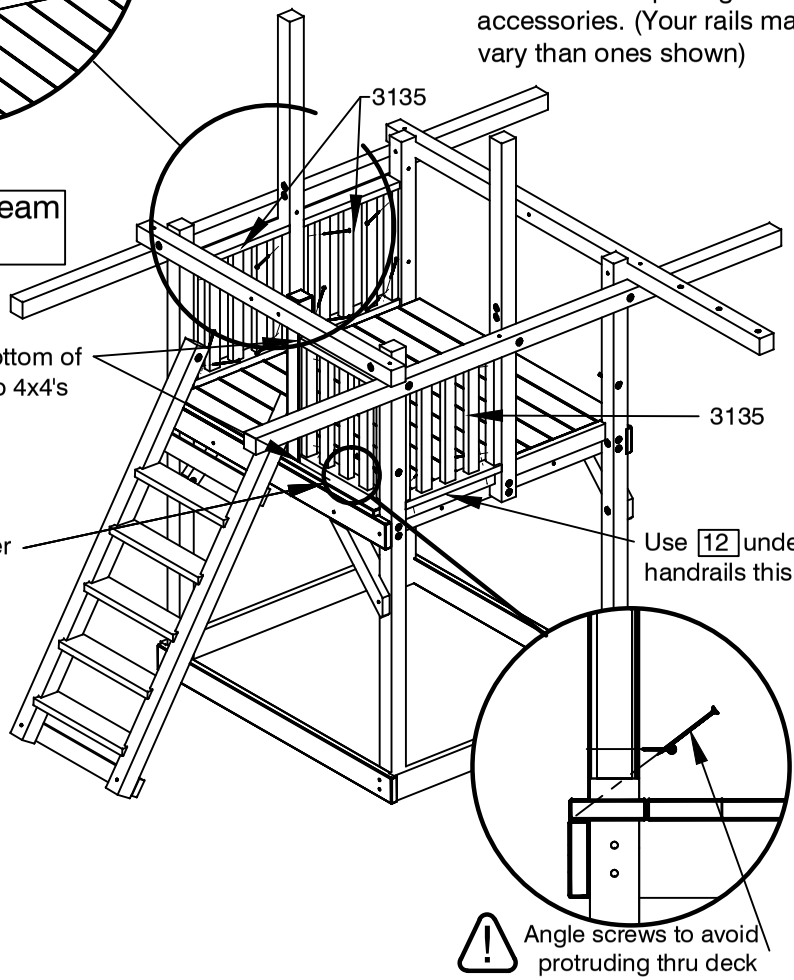

Angle screws to avoid protruding thru deck

ACCESSORIES INSTALLATION

PARTS REQUIRED:
(1) 10' Wave Slide
(1) 2454 Steering Wheel w/Lag Screw and Washer
(1) 2453 Telescope w/ Lag Screw and Washer



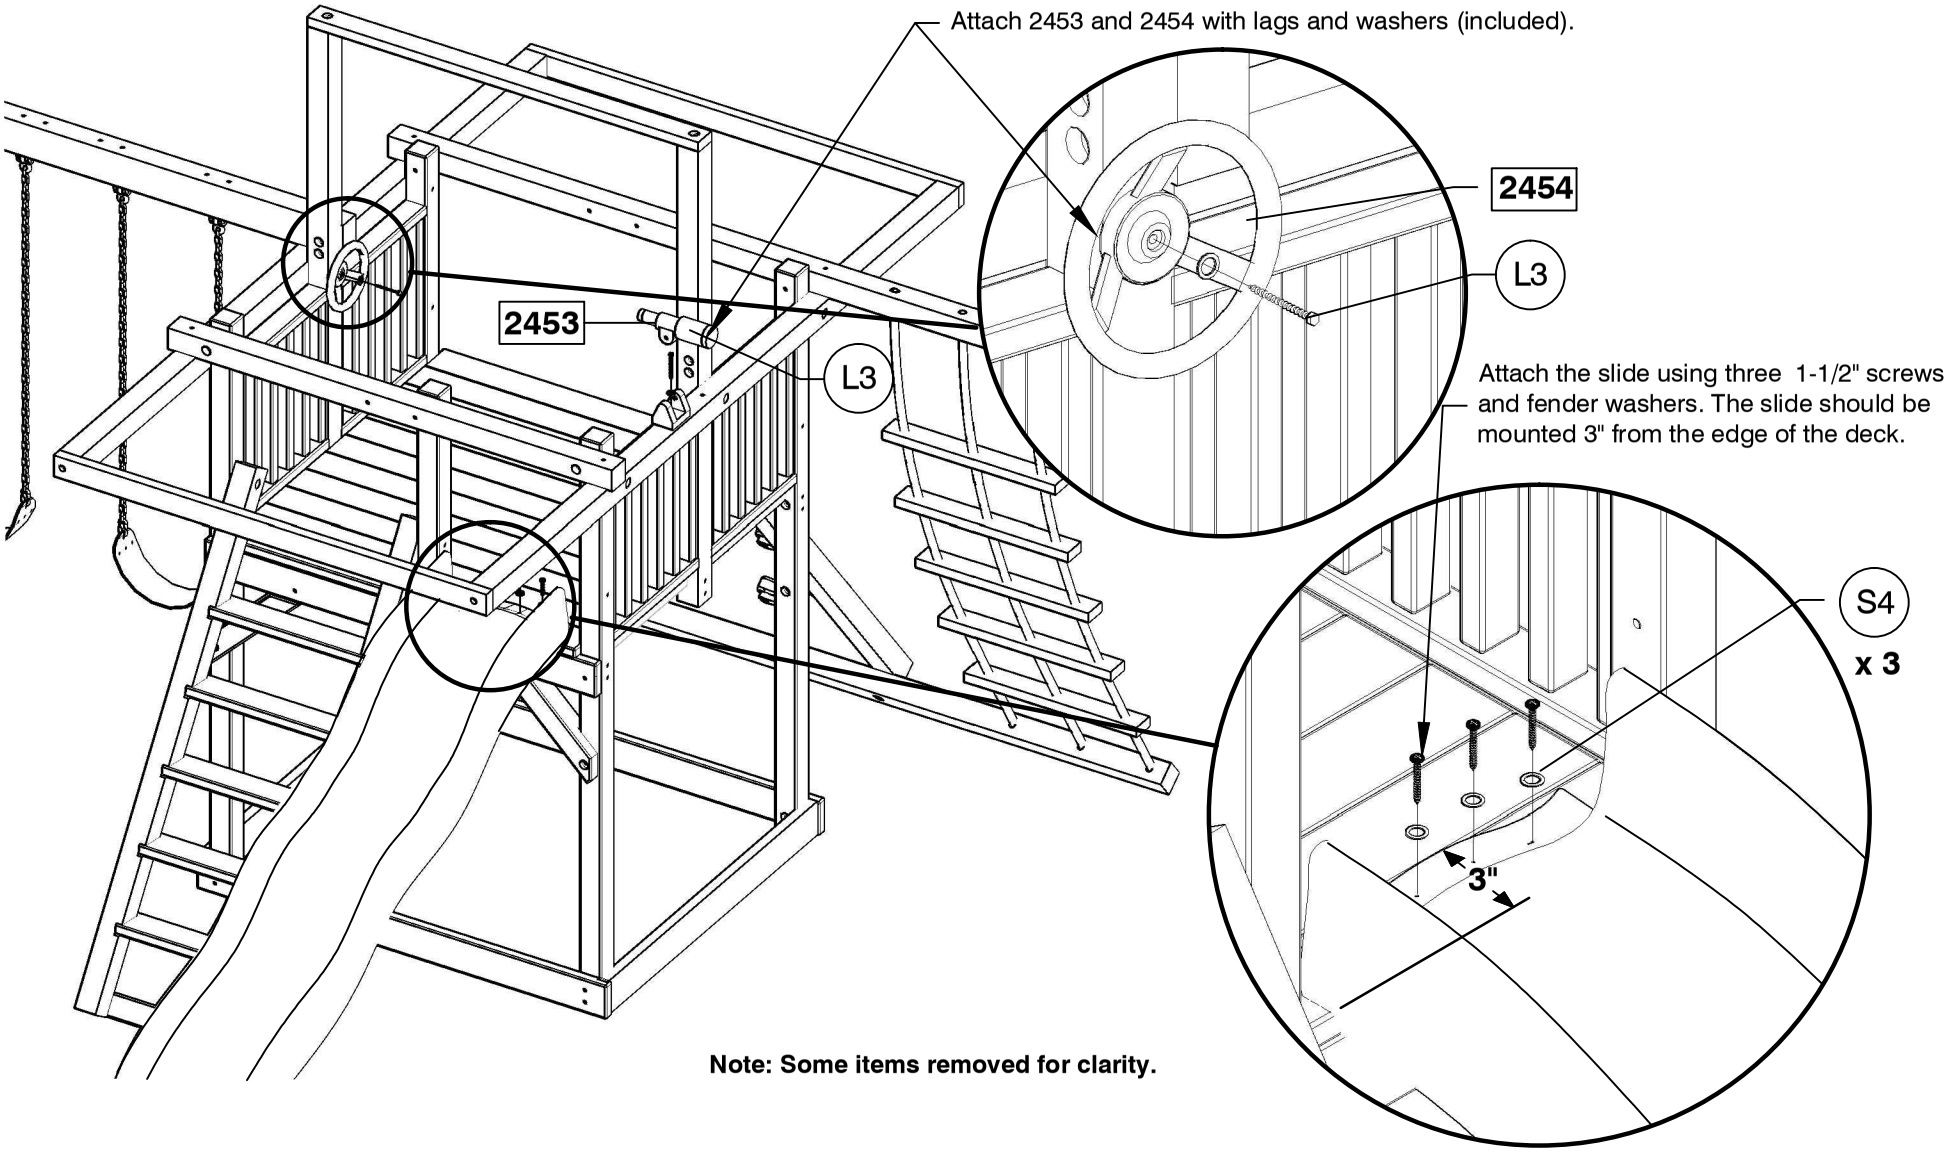

Note: Some items removed for clarity.

ACCESSORY INSTALLATION

Note: Instructions on how to install your additional playset accessories (Tire Swing, Picnic Table, etc) are packed into separate accessory cartons. Refer to those instructions for proper installation.

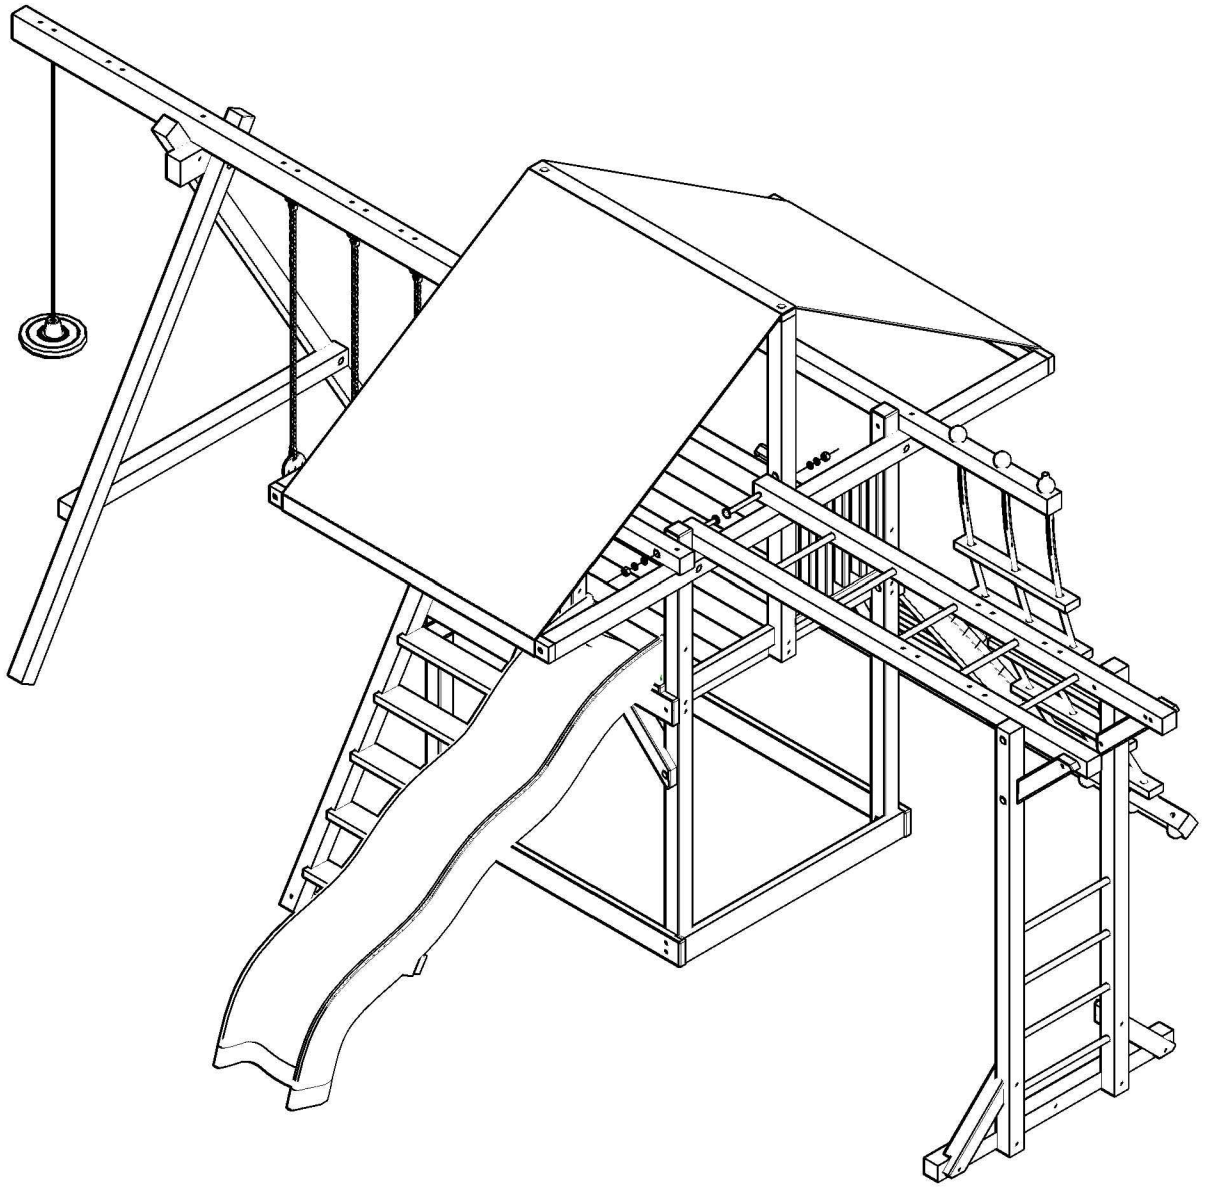

WARRANTY

Backyard Play Systems warrants the following:
1. All wood components have a Limited Lifetime Warranty.
• Wood - Backyard Play Systems will replace treated wood which becomes structurally unfit due solely to damage caused by fungal decay or termites.
2. All non-wood components* have a three year Limited Warranty.
***Ropes and canopy carry a one year Limited Warranty.**
3. Installation labor has a three year Limited Warranty applicable on playsets installed by Backyard Play Systems. Labor warranty does NOT apply to Do-It-Yourself playset kits or kits installed by a third party.

Backyard Play Systems will repair, replace or pay for the affected part at our discretion. In no event shall Backyard Play Systems pay the cost of labor or installation or any other costs related thereto.

Non-residential use of the system is prohibited and will void this warranty as the system is designed for residential use only.

Conditions
The warranty is effective only when:
1. The unit has been erected in accordance with the assembly instructions.
2. The unit has been regularly and properly maintained and inspected.
3. The failure occurs when the unit is owned by the original purchaser.
4. This warranty is non-transferable
5. Backyard Play Systems has received a copy of your original proof of purchase with any claims in writing.
6. Backyard Play Systems has had reasonable opportunity during the sixty (60) days following the receipt of notification to inspect and verify the failure prior to commencement of any repair work.
7. "Significant color changes" to wood components is at the discretion of Backyard Products and require proof in the form of photographs or inspection by Backyard Play Systems.

Wooden components may have imperfections such as checks and knots. These are natural blemishes and imperfections which are inherent to wood. The imperfections not resulting in structural failure are not covered under this warranty.

Requirements
To validate your warranty it is necessary to fill out and mail in the enclosed warranty card. And also to maintain and inspect your playset regularly. Regularly is defined as once per start and end of season.

Claim Procedure
To make a claim under this warranty, you can either call 1-866-890-2211 or prepare a letter.
Please have ready the information below when you call or include the information in writing:

1. The model and size of the product.
2. A list of the part(s) for which the claim is made.
3. Proof of purchase of the Backyard Play Systems item, as shown on the original invoice.
4. Run Code, as listed on the enclosed warranty card.

Mail the above information to:
Backyard Play Systems
Attn: Customer Service
1000 Ternes Dr.
Monroe, MI 48162

WARRANTY

Please feel free to call our Consumer Help Line Toll Free

1-866-890-2211
April through October M - F 8:00 AM to 6:00 PM EST
Saturday 8:30 AM to 4:30 PM EST
November through March M - F 8:00 AM to 5:00 PM EST

No warranty is offered on the following: (1) equipment subject to abuse, negligence, improper installation, vandalism, acts of God, unauthorized alteration or attachment to equipment other than our own: or (2) equipment subjected to improper use, service or repair by customer or any third party.

To the maximum extent permitted by law, this warranty and the remedies set forth herein are exclusive and expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for a particular purpose. If Backyard Play Systems cannot disclaim or exclude implied warranties under applicable law, then to the extent possible any claims under any such implied warranties shall expire on expiration of the applicable warranty period. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may or may not apply to you. Backyard Play Systems does not assume, or authorize any person to assume for us, any other liability in connection with the sale of our products.

To the maximum extent of the law, Backyard Play Systems assumes no responsibility for incidental or consequential damages which may arise from the purchase or use of our playset or equipment. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If any provision of this limited warranty is invalid, void or unenforceable in any instance or respect, the unenforceable provision will be severed and reformed to effect the intent of this limited warranty to the maximum extent possible, and the remaining provisions shall continue in full force and effect and shall be enforced to the full extent permitted by law.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

- **WARRANTY TERMS MAY VARY OUTSIDE THE U.S.A.**
- This manual is your warranty certificate. Please retain your original proof of purchase and this manual for any warranty claims.

16605PLAY

- NOTICE -
This playset product is not intended for public use. It is intended for residential application and is not warranted for public or commercial use.

Call Us First!
DO NOT RETURN TO STORE.

For immediate help with assembly or product information
call our toll-free number:
1-800-437-0784
April through October M - F 8:00 AM to 6:00 PM EST
Saturday 8:30 AM to 4:30 PM EST
November through March M - F 8:00 AM to 5:00 PM EST
or email:
customerservice@backyard-play.com
Our staff is ready to provide assistance.

(This page intentionally left blank.)

kid's creations
QUALITY REDWOOD SWING SETS

5' Rock Wall

16605PLAY

LDR: 1/11/2013

Recommended for ages 3 to 11

- BEFORE YOU BEGIN -

First...

- Check with your homeowner's association before assembling.
- Read instructions thoroughly before you begin. If you have purchased accessories to accompany this play set, please read all installation instructions before beginning assembly of this structure.

Check All Parts

- If a part is missing, circle the part in question and call 1-800-437-0784.

Adult Assistance required
Assistance is necessary to handle, fit, and secure some components.

Squareness is very Important!
Start with a level surface and keep 90° corners and 90° perpendiculars throughout the assembly to ensure all components fit together.

Safety!

- Check for protruding screws and bolts, verify all screw and bolt lengths during assembly.

Always wear OSHA-APPROVED safety glasses throughout assembly process.

STOP!

CALL US FIRST!! DO NOT RETURN TO STORE!!
For immediate help with assembly, damaged or missing parts call us toll free at 1-800-437-0784

STOP!

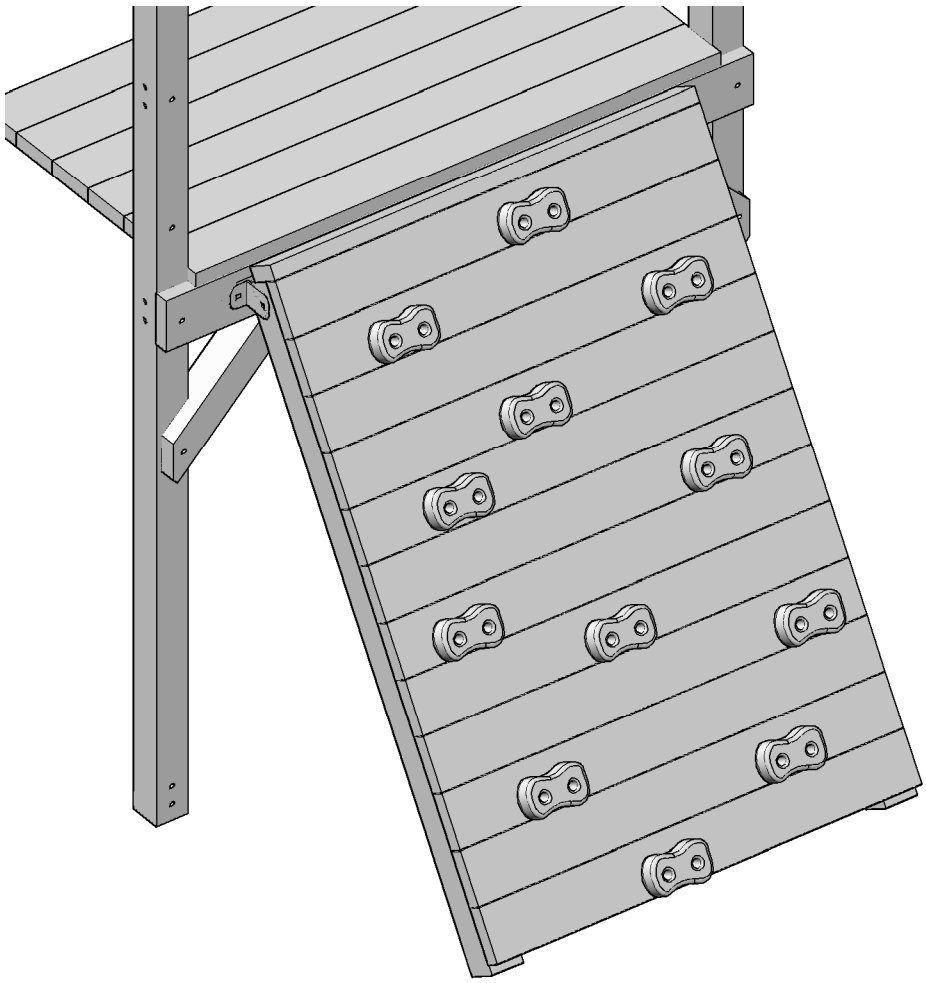

PARTS LIST

NOTE: Each wood part is stamped with part identification number.

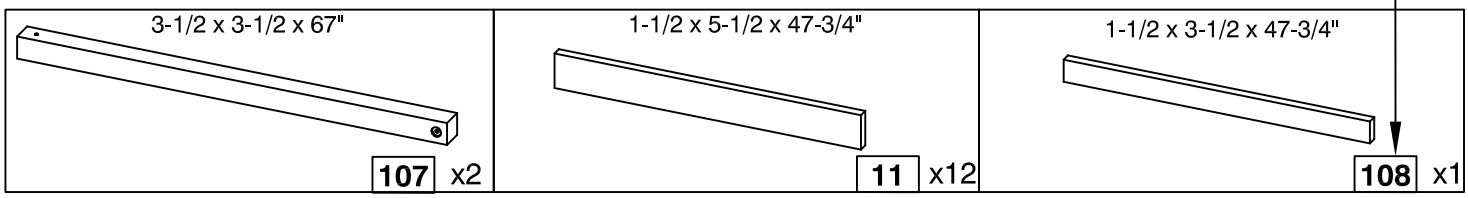

ACCESSORIES

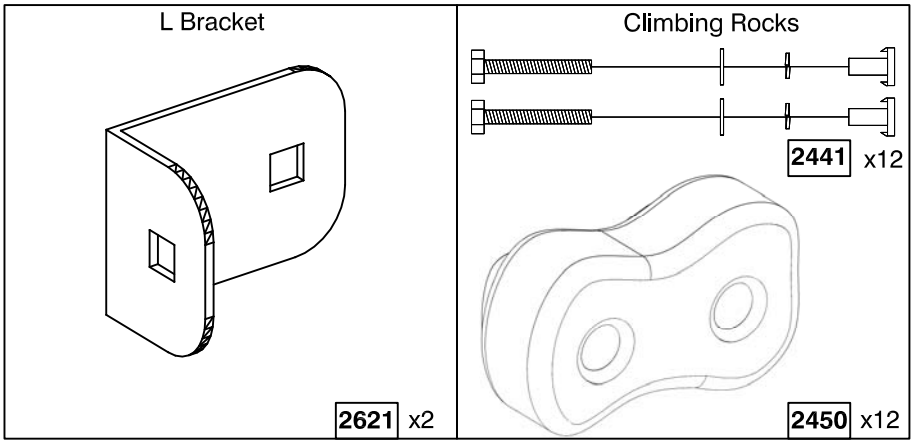

FASTENERS (Shown actual Size)

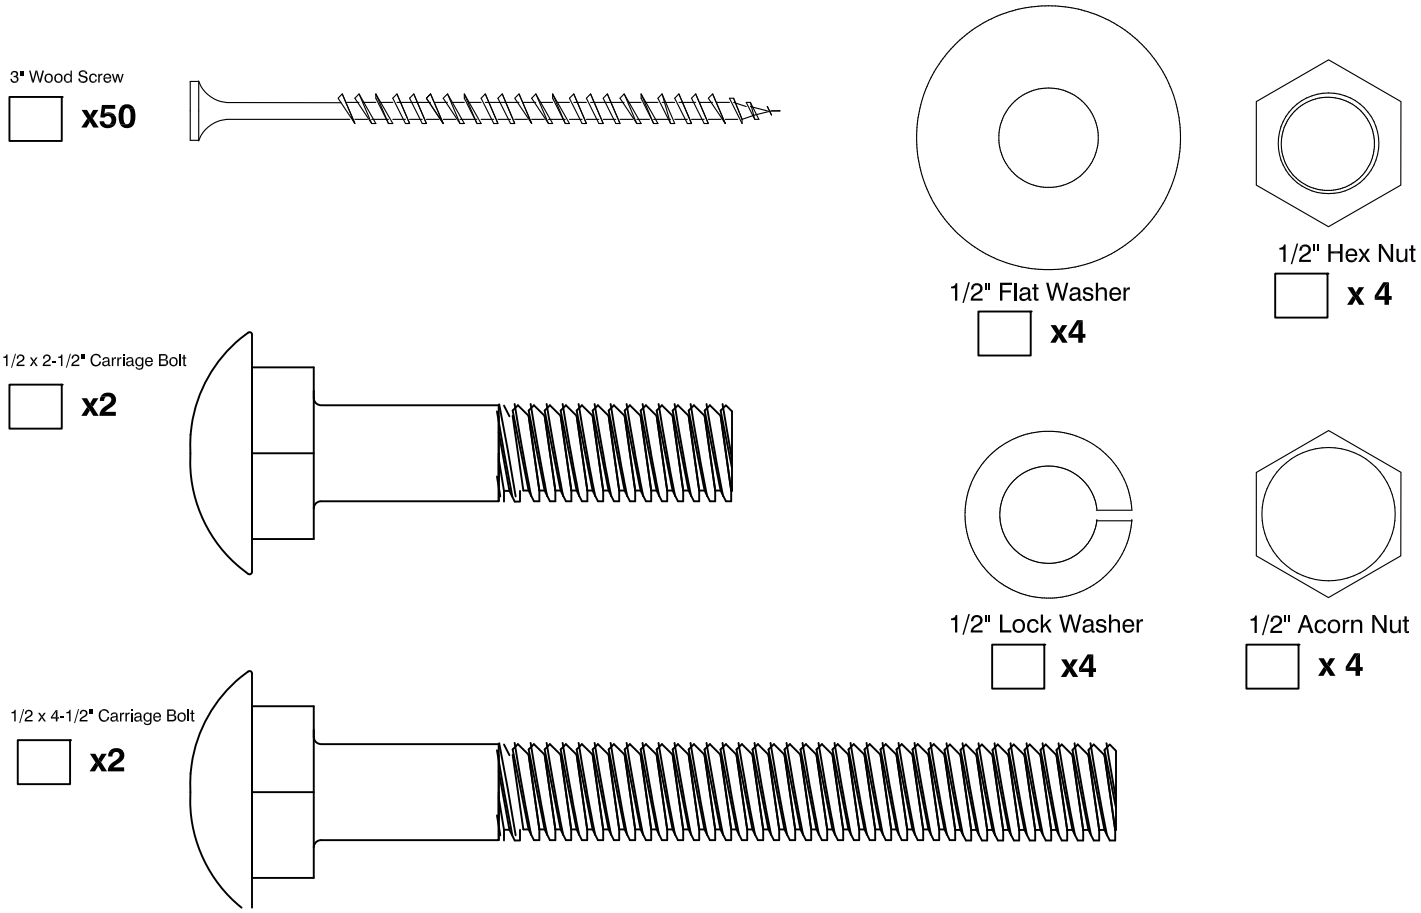

5' ROCKWALL ASSEMBLY

PARTS REQUIRED:
(2 [107] 5' Rockwall Frame
(2)2621 L-Bracket

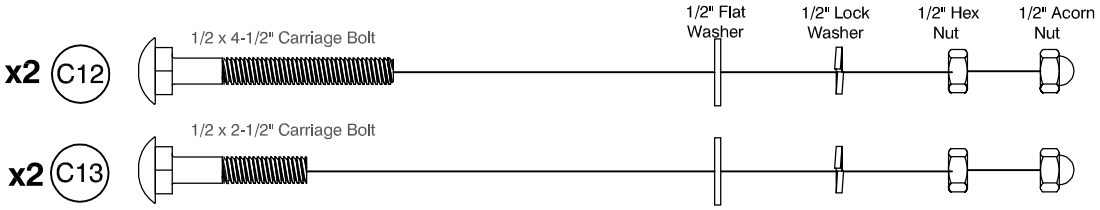

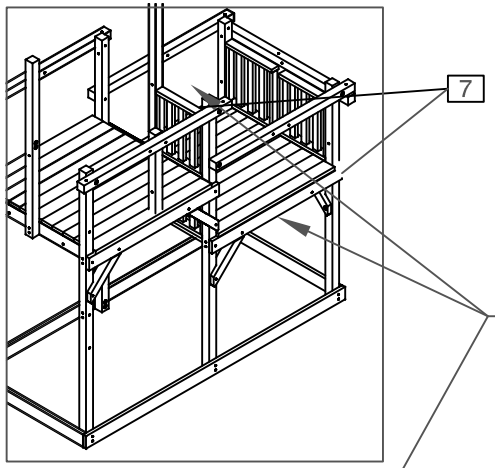

Note: Rockwall can only be installed on existing [7] on either side of the 5' deck on a Single or Double Tower Base (Double Tower shown)

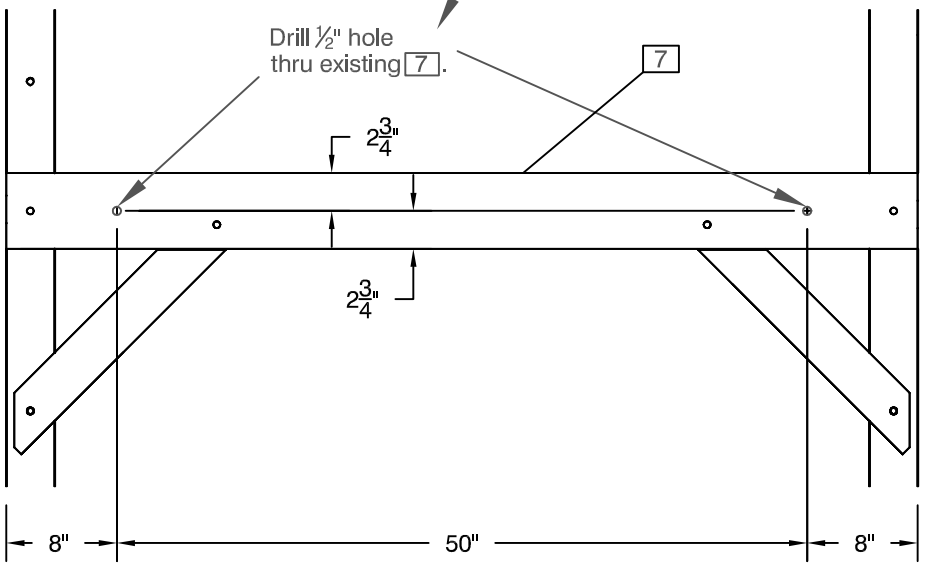

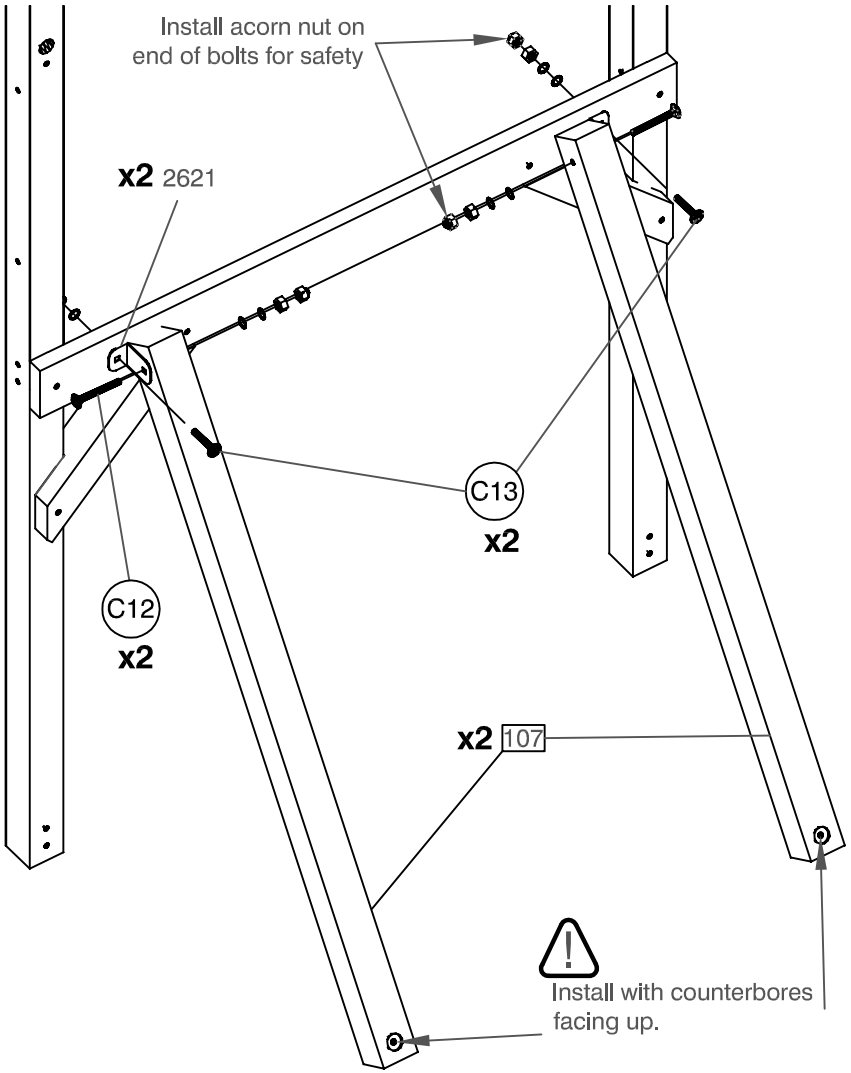

Note: Some objects removed for clarity.

5' ROCKWALL ASSEMBLY

PARTS REQUIRED:
(12) 11 Rockwall Decking
(1) 108 Rockwall Top
(12) 2450 Climbing Rocks

x52 (S3) 3" Wood Screw

x24 (H1) 1/4 x 1-1/2" Hex Bolt, 1/4 " Flat Washer, 1/4 " Lock Washer, 1/4 " T-Nut

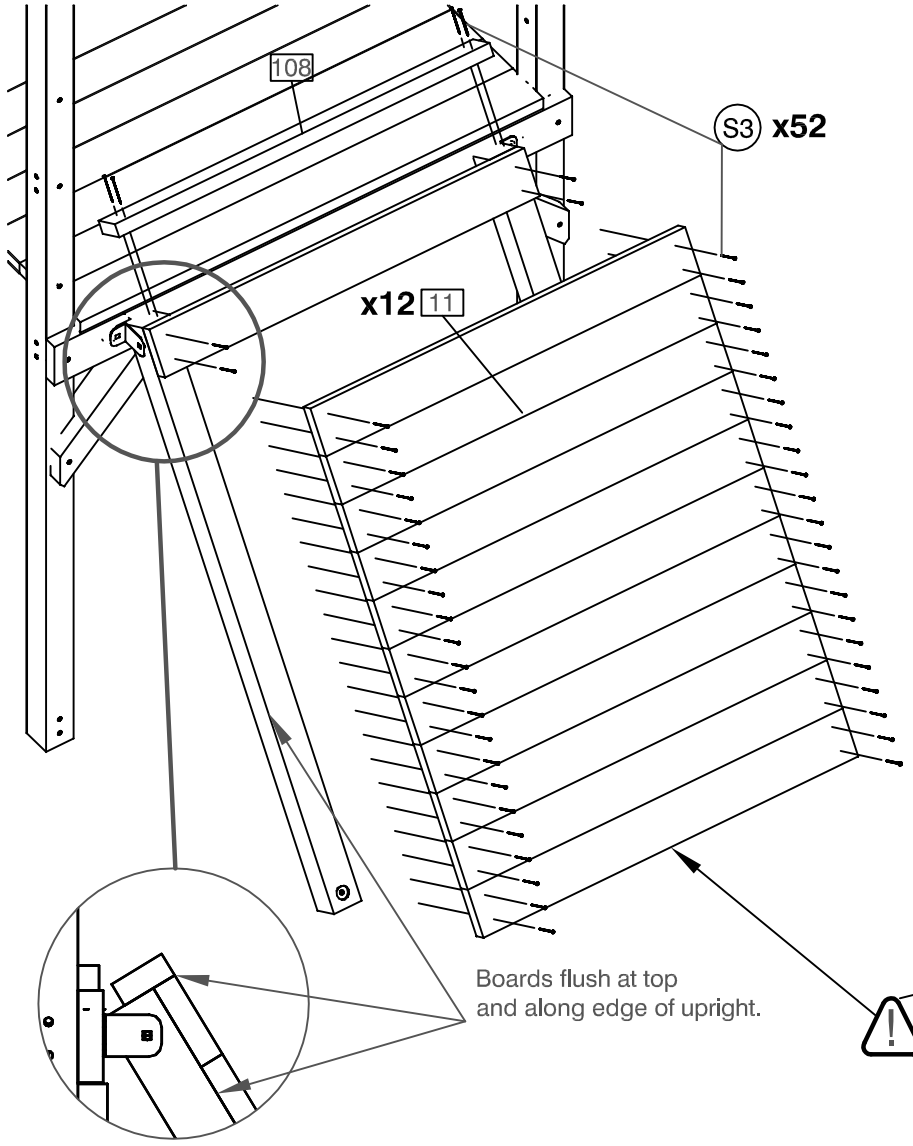

Locate rocks in a random pattern for climbing.
Mark and drill a 5/16" hole thru rockwall boards.
Pound T-nuts from behind wall and secure rocks.

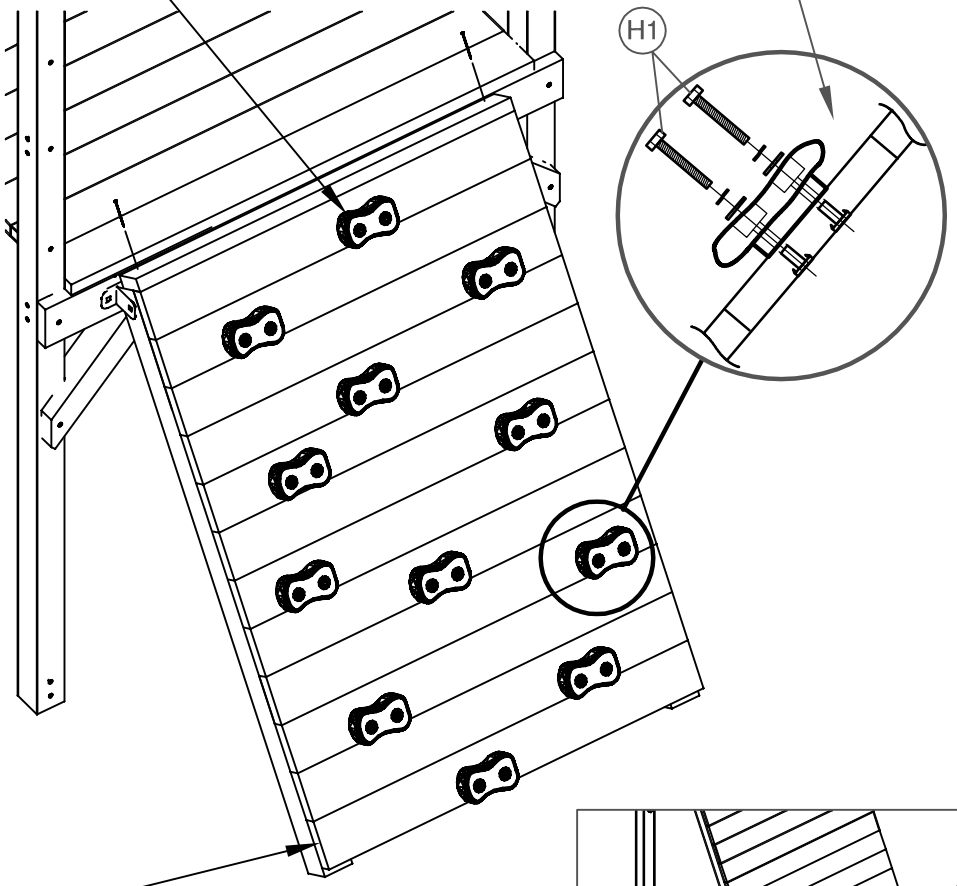

Note: If you will be installing a rope ladder leave this last board off until you have installed the lower rope ladder support. **Fig. A**

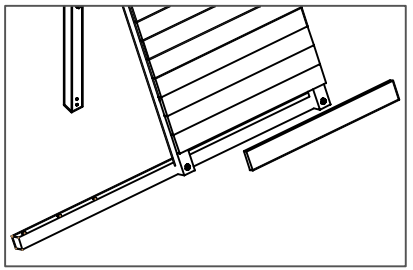

Fig. A

5' ROCKWALL RAIL (Optional - Not included)

PARTS REQUIRED (OPTIONAL - RAIL NOT INCLUDED WITH THIS ROCKWALL ACCESSORY):

(1) 3127 Rockwall Open Rail

x11 (S3) 3" Wood Screw



OPTIONAL ROCKWALL RAIL ASSEMBLY:

An optional Rockwall Rail (Not included) in an open style is available for limited access at this rockwall opening.

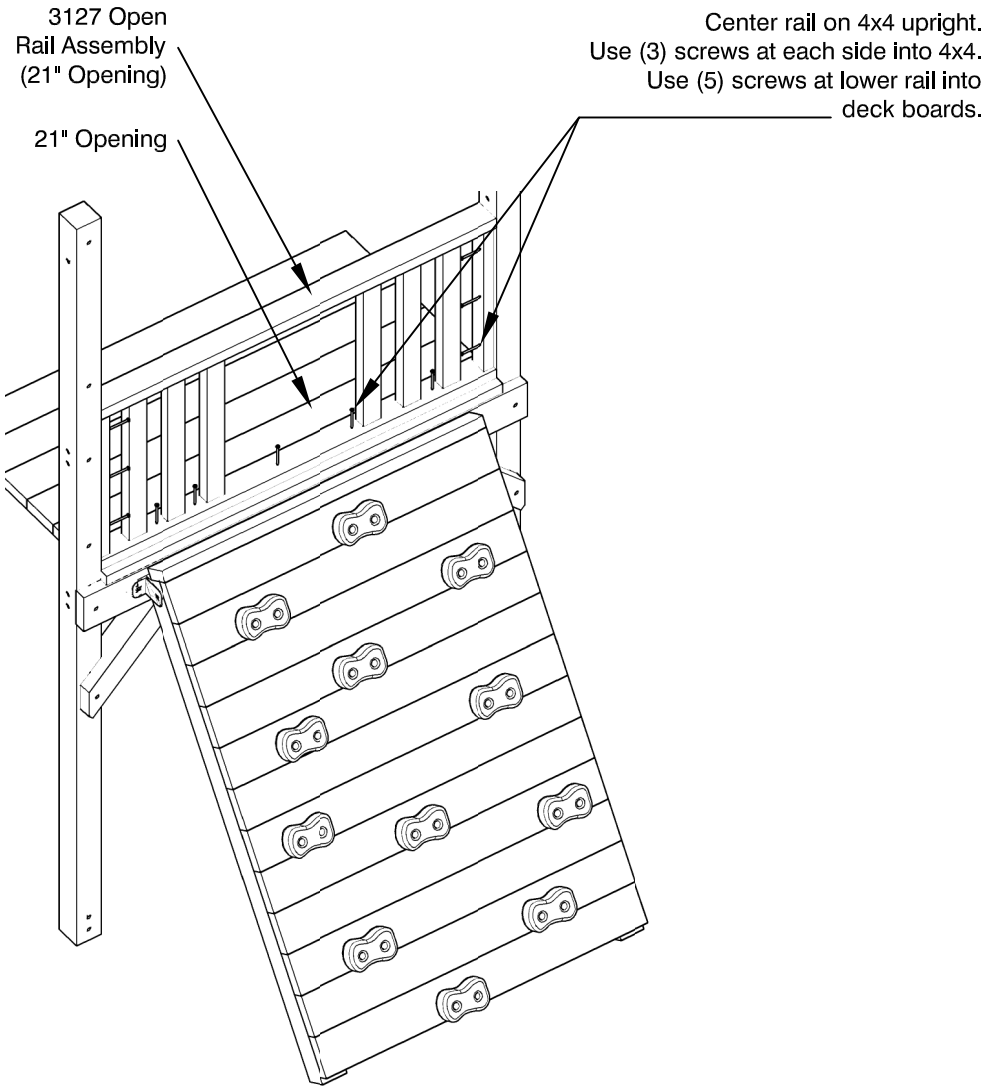

kid's creations
QUALITY REDWOOD SWING SETS

Picnic Table
Single and Double Tower

16608PLAY

LDR: 01/09/2013

Recommended for ages 3 to 11

- BEFORE YOU BEGIN -

First...

- Check with your homeowner's association before assembling.
- Read instructions thoroughly before you begin. If you have purchased accessories to accompany this play set, please read all installation instructions before beginning assembly of this structure.

Check All Parts

- If a part is missing, circle the part in question and call 1-800-437-0784.

Adult Assistance required
Assistance is necessary to handle, fit, and secure some components.

Squareness Is very Important!
Start with a level surface and keep 90° corners and 90° perpendiculars throughout the assembly to ensure all components fit together.

Safety!

- Check for protruding screws and bolts, verify all screw and bolt lengths during assembly.

Always wear OSHA-APPROVED safety glasses throughout assembly process.

STOP

CALL US FIRST!! DO NOT RETURN TO STORE!!
For immediate help with assembly, damaged or missing parts call us toll free at 1-800-437-0784

STOP

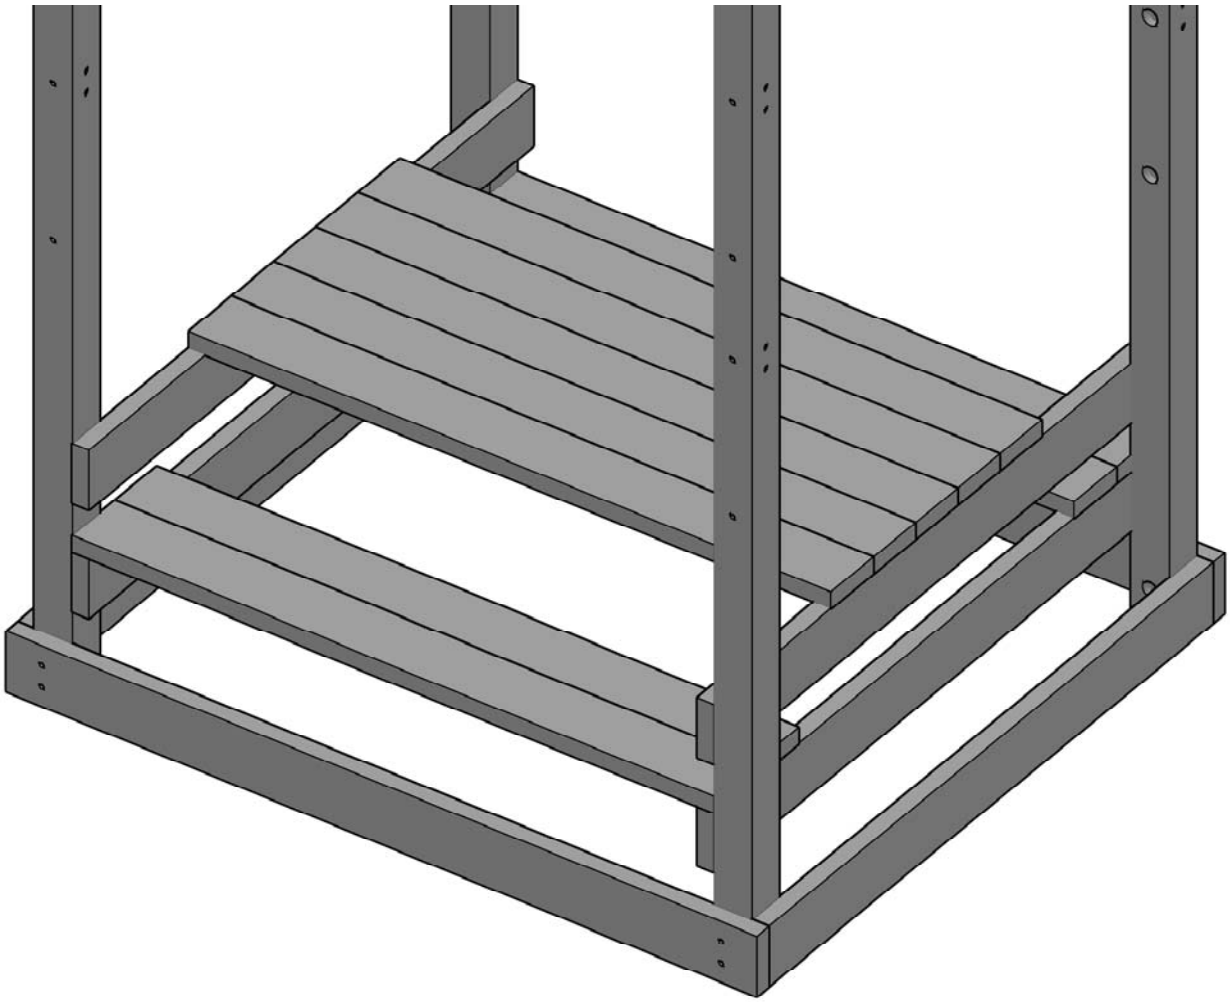

FASTENERS (Shown actual size)

#9 X 3" Wood Screw

x54

PARTS LIST

NOTE: Each wood part is stamped with part identification number.

1-1/2 x 5-1/2 x 58"



3 x4

1-1/2 x 5-1/2 x 59"



9 x9

PICNIC TABLE ASSEMBLY

PARTS REQUIRED:
(2) 3 Tower Base Board
(4) 9 Deck Board

x24 (S1) 3" Wood Screw

Single Tower Shown
(See Fig A. for Double Tower)

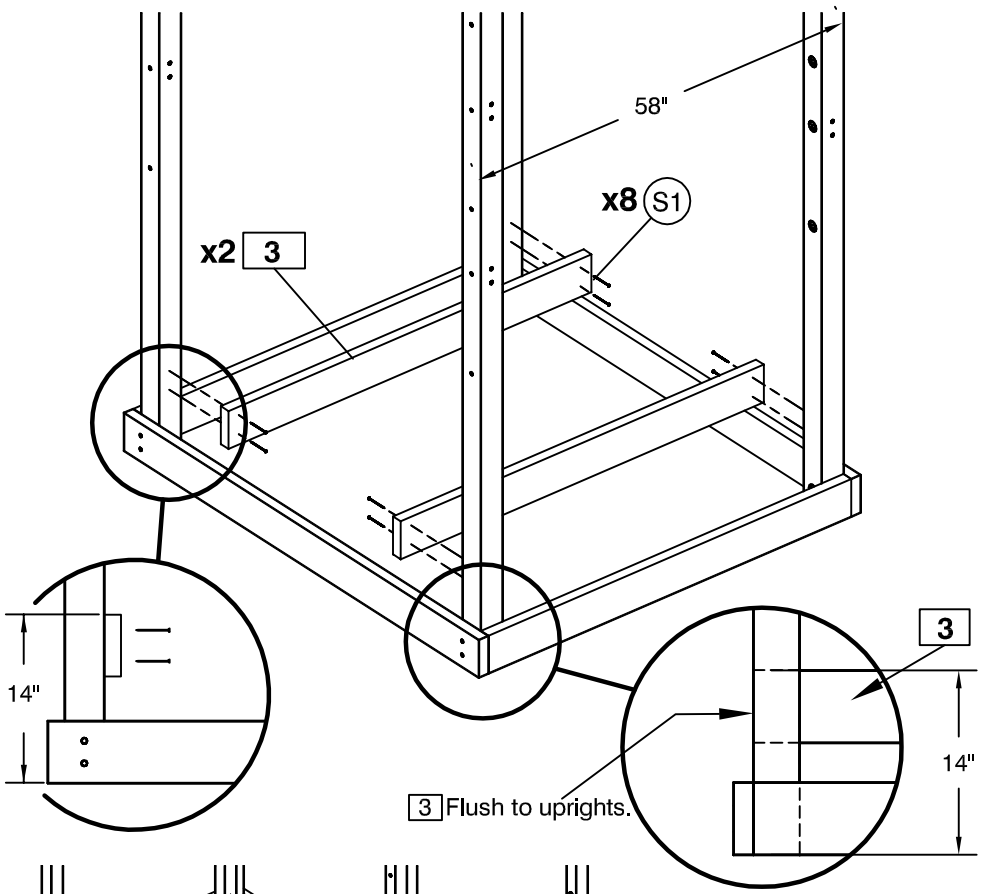

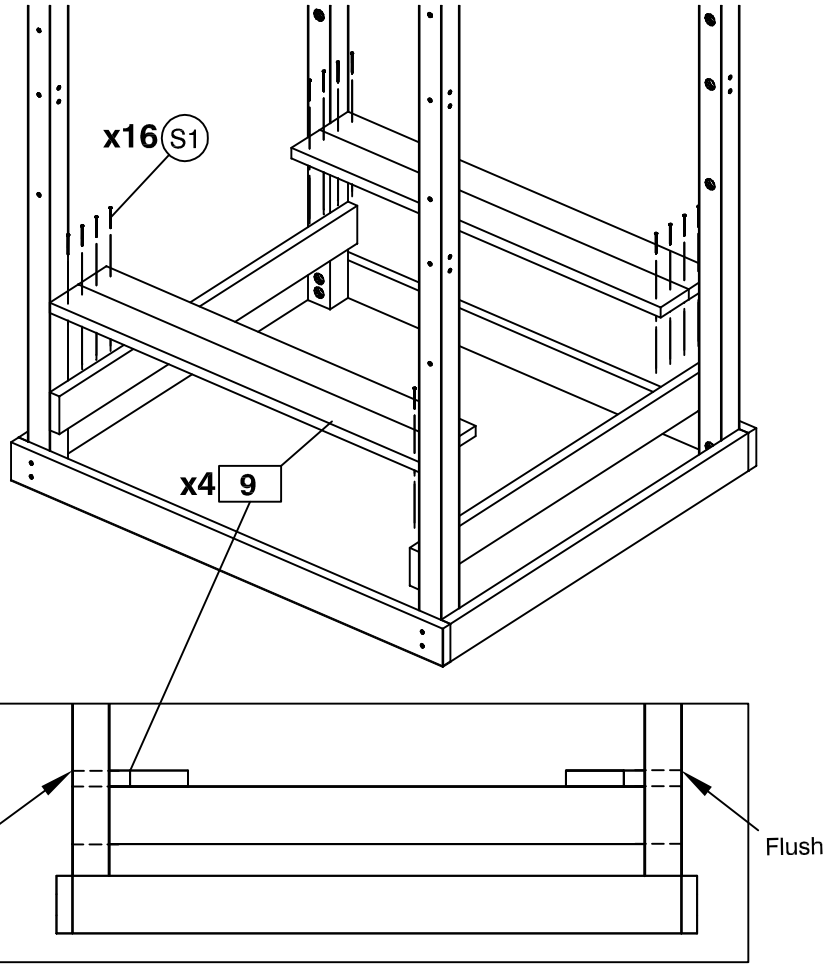

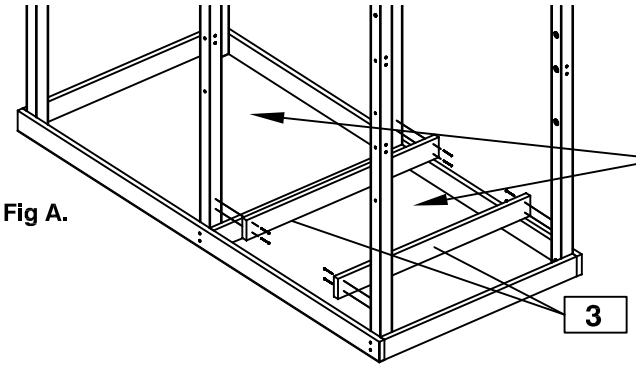

Fig A.

Note: The picnic table can be installed in either section of a Double Tower. Locate 3 's on the opposite side shown for installing in the opposite section.

FOR SAFETY - DO NOT INSTALL ANY OTHER UNDER-DECK ACCESSORIES IN THE SAME SECTION OF THE PICNIC TABLE.

PICNIC TABLE ASSEMBLY

PARTS REQUIRED:
(2) [3] Tower Base Board
(5) [9] Deck Board

x28 (S1)

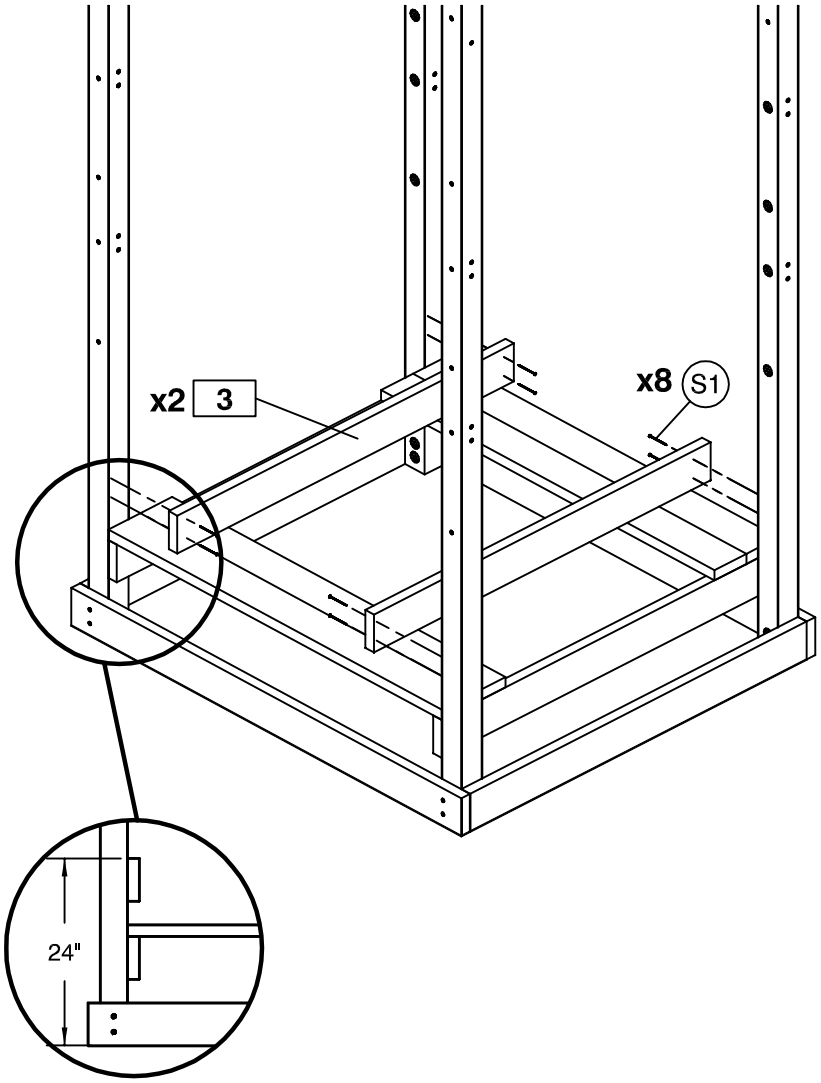

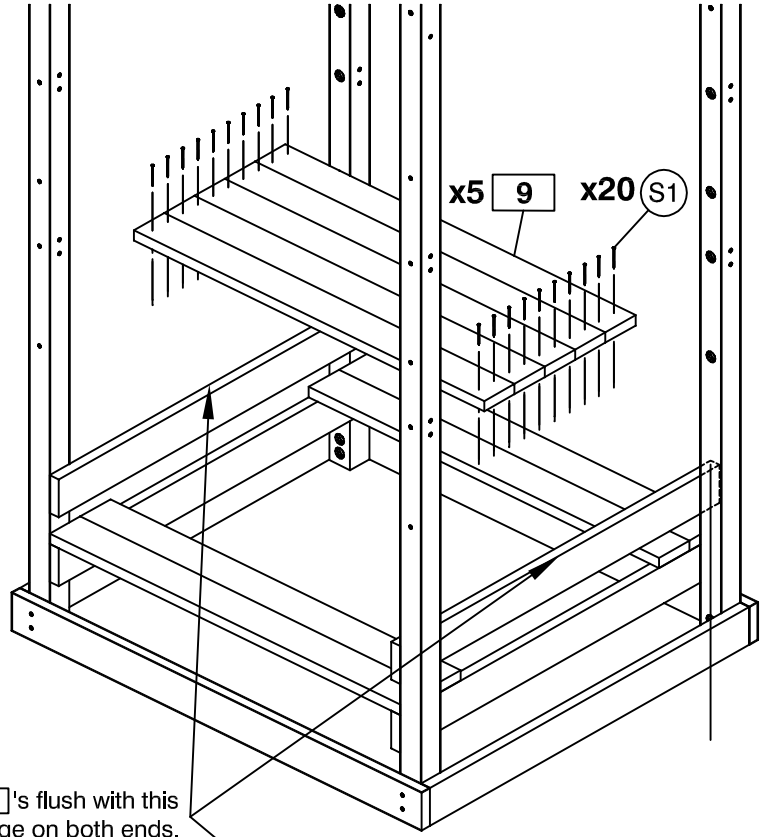

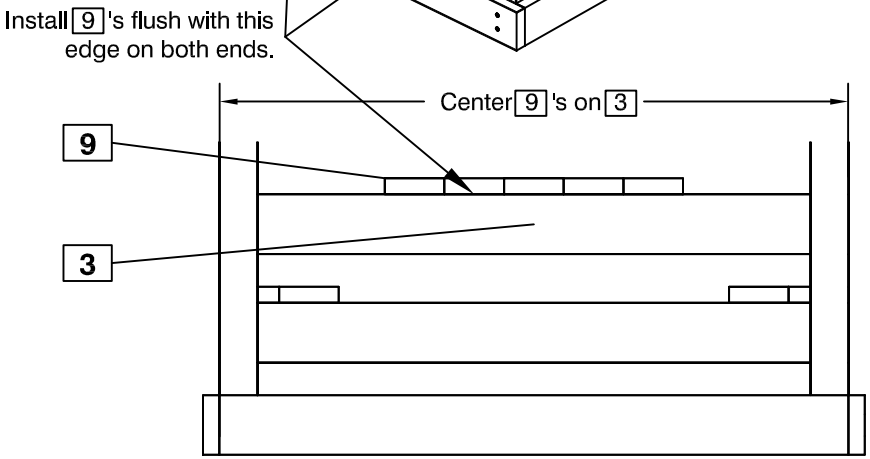

kid's creations
QUALITY REDWOOD SWING SETS

Deluxe Wood Roof

16610PLAY

LDR: 1-11-2013

Recommended for ages 3 to 11

- BEFORE YOU BEGIN -

First...

- Check with your homeowner's association before assembling.
- Read instructions thoroughly before you begin. If you have purchased accessories to accompany this play set, please read all installation instructions before beginning assembly of this structure.

Check All Parts

- If a part is missing, circle the part in question and call 1-800-437-0784.

Adult Assistance required
Assistance is necessary to handle, fit, and secure some components.

Squareness is very Important!
Start with a level surface and keep 90° corners and 90° perpendiculars throughout the assembly to ensure all components fit together.

Safety!

- Check for protruding screws and bolts, verify all screw and bolt lengths during assembly.

Always wear OSHA-APPROVED safety glasses throughout assembly process.

STOP

CALL US FIRST!! DO NOT RETURN TO STORE!!
For immediate help with assembly, damaged or missing parts call us toll free at 1-800-437-0784

STOP

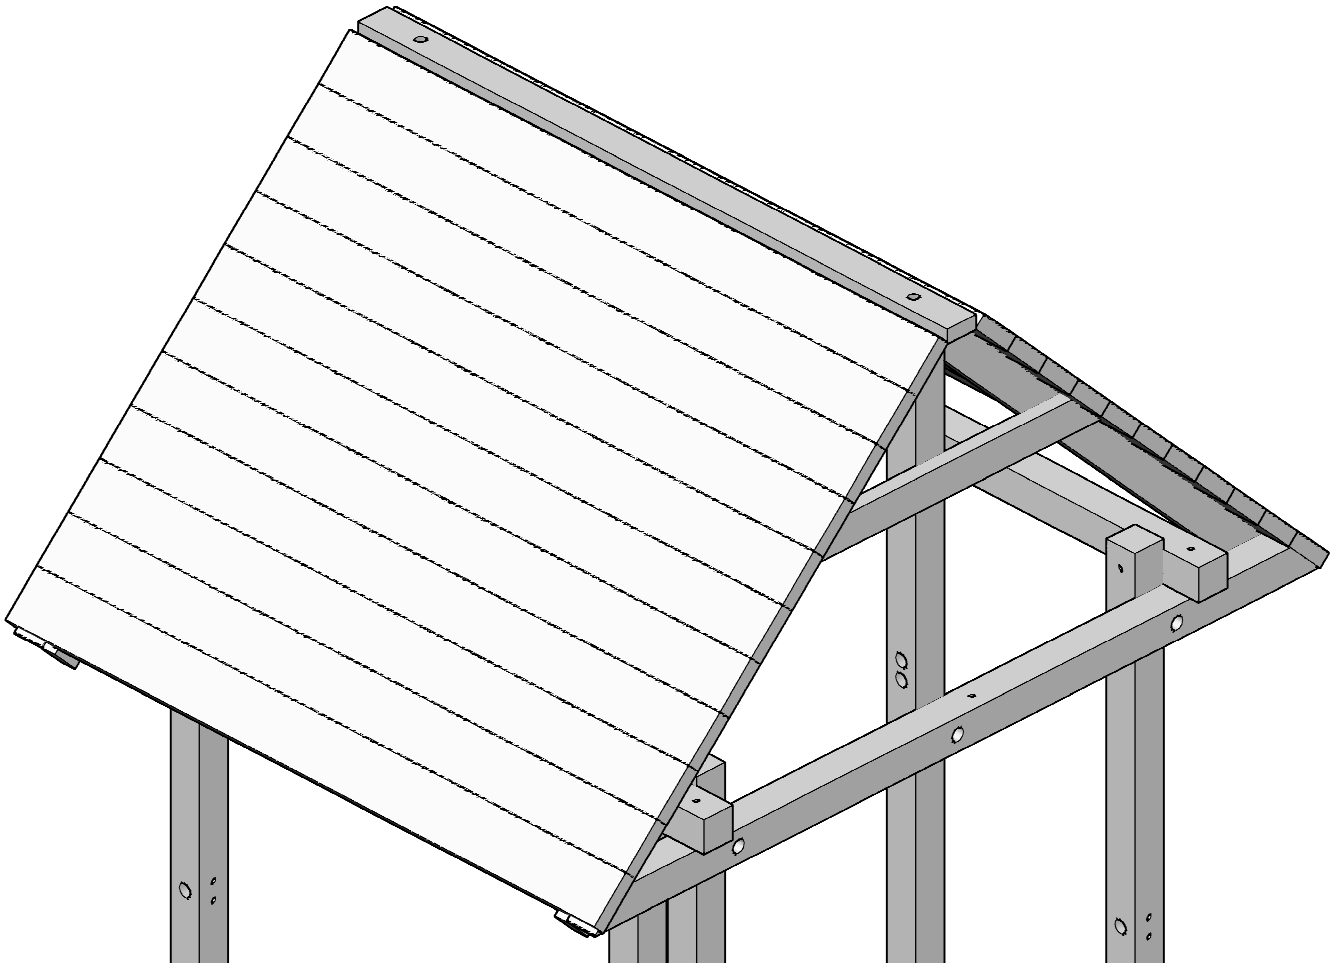

FASTENERS (Shown Actual Size)

3" Wood Screw

☐ **x116**

3/8 x 4" Zinc Lag Bolt

☐ **x2**

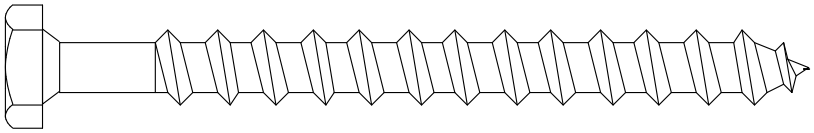

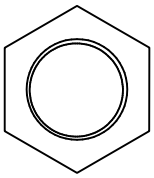

1/2" Hex Nut

☐ **x 10**

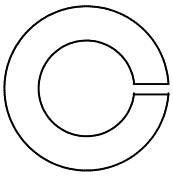

1/2" Lock Washer

☐ **x10**

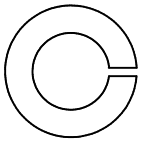

3/8" Lock Washer

☐ **x2**

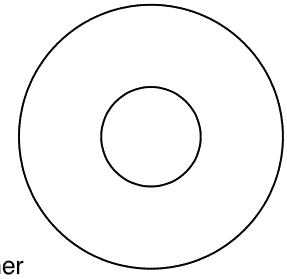

1/2" Flat Washer

☐ **x10**

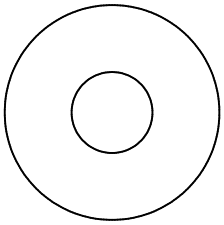

3/8" Flat Washer

☐ **x2**

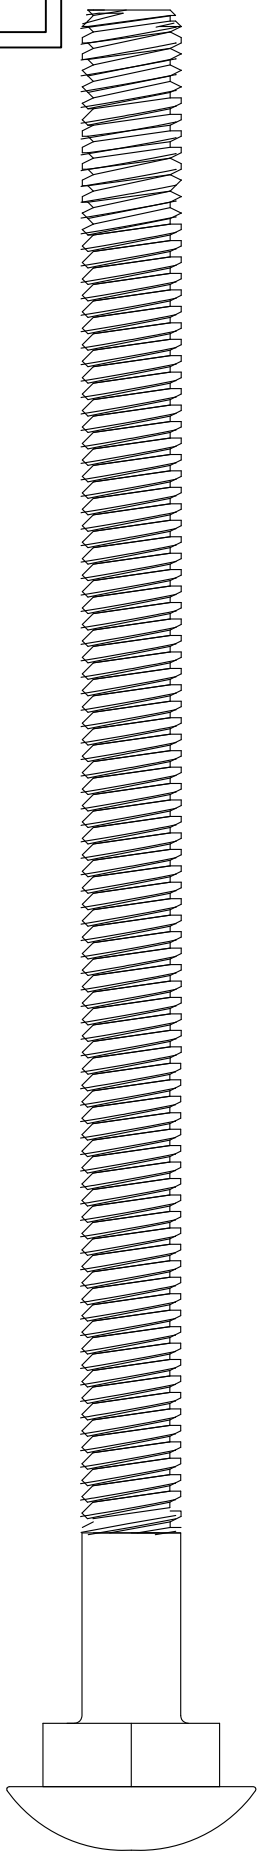

1/2 x 7" Carriage Bolt

☐ **x10**

PARTS LIST

NOTE: Each wood part is stamped with part identification number.

1-1/2 x 5-1/2 x 74"

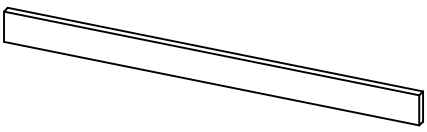

101 x22

1-1/2 x 3-1/2 x 39 -1/2"

104 x2

1-1/2 x 3-1/2 x 61-1/8"

102 x4

1-1/2 x 3-1/2 x 74"



27A x1

3-1/2 x 3-1/2 x 90"

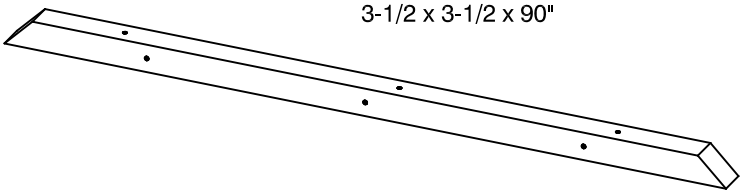

26A x2

ROOF SUPPORT

PARTS REQUIRED:
(4) 102 Rafter
(2) 26A Wood Roof Support
(1) 27A Top Roof Support

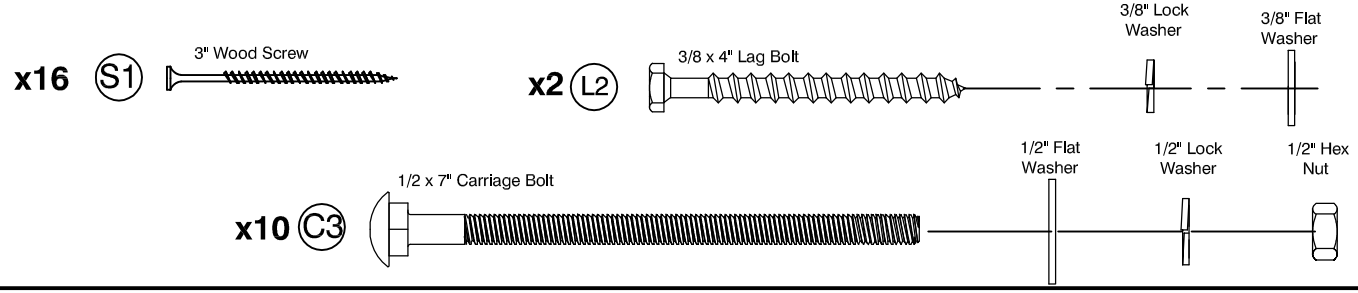

Note: See Steps Below

Install 102 flush with upright on top & outside edges

Pre-drill 102 at peak to avoid splitting wood.

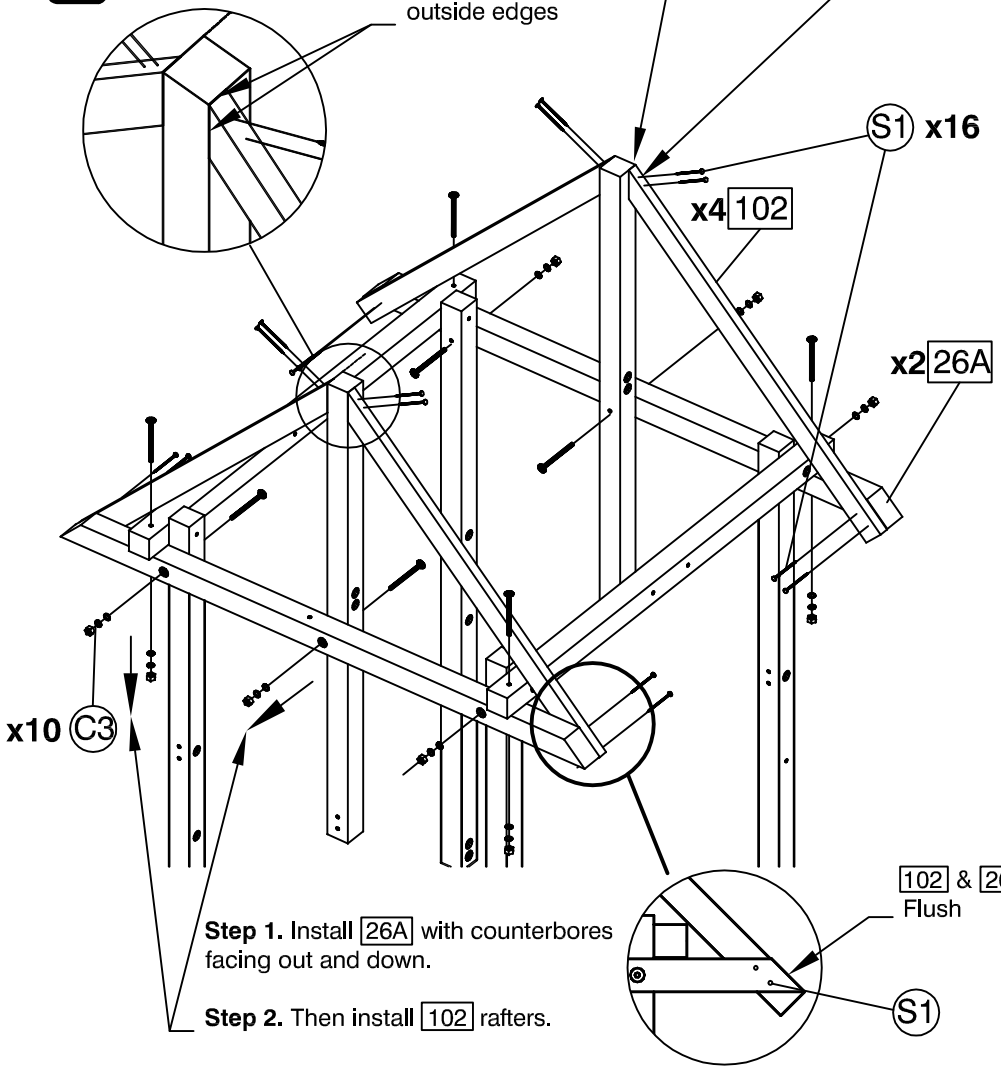

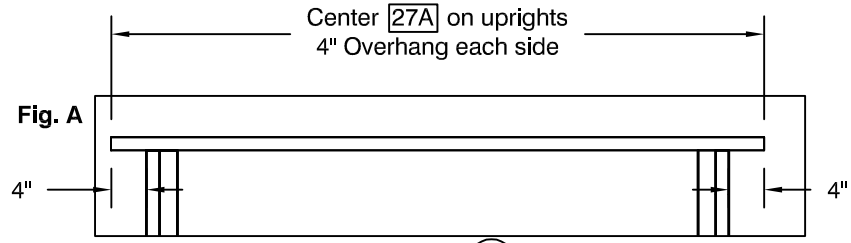

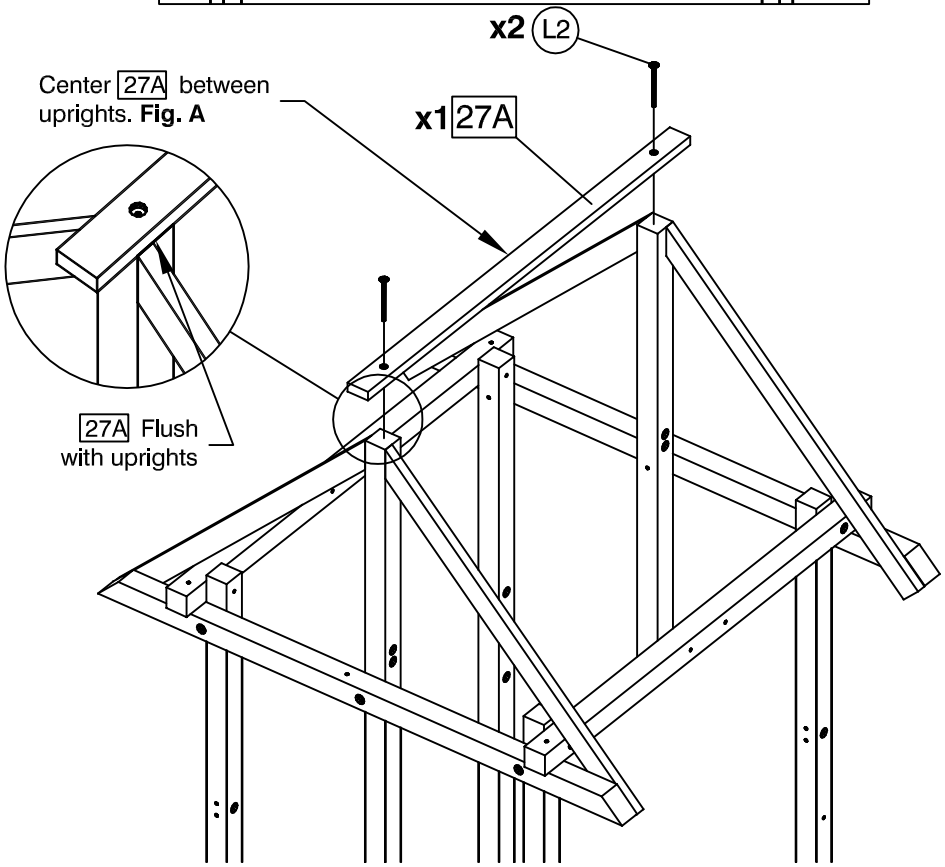

WOOD ROOF INSTALL

PARTS REQUIRED:
(22) 101 Wood Canopy Shingle Boards
(2) 104 Canopy Facer Board

x96 S1 — 3" Wood Screw

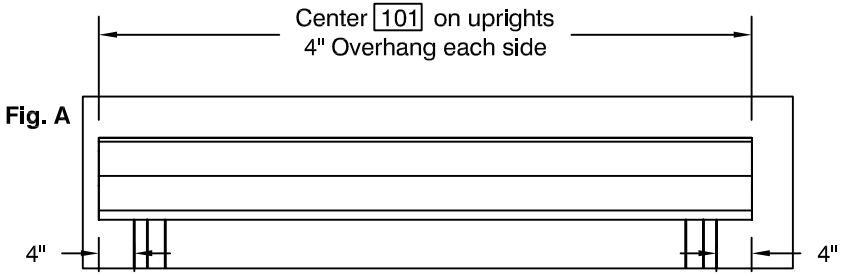

Fig. A

Begin at top and install all roof boards flush to each other with a 4" overhang on each end.
Fig. A

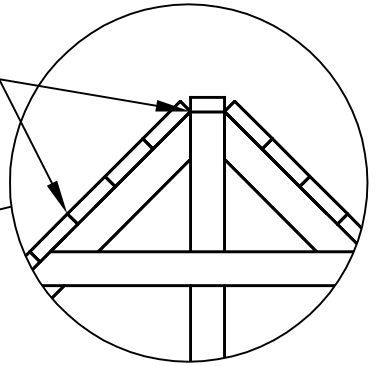

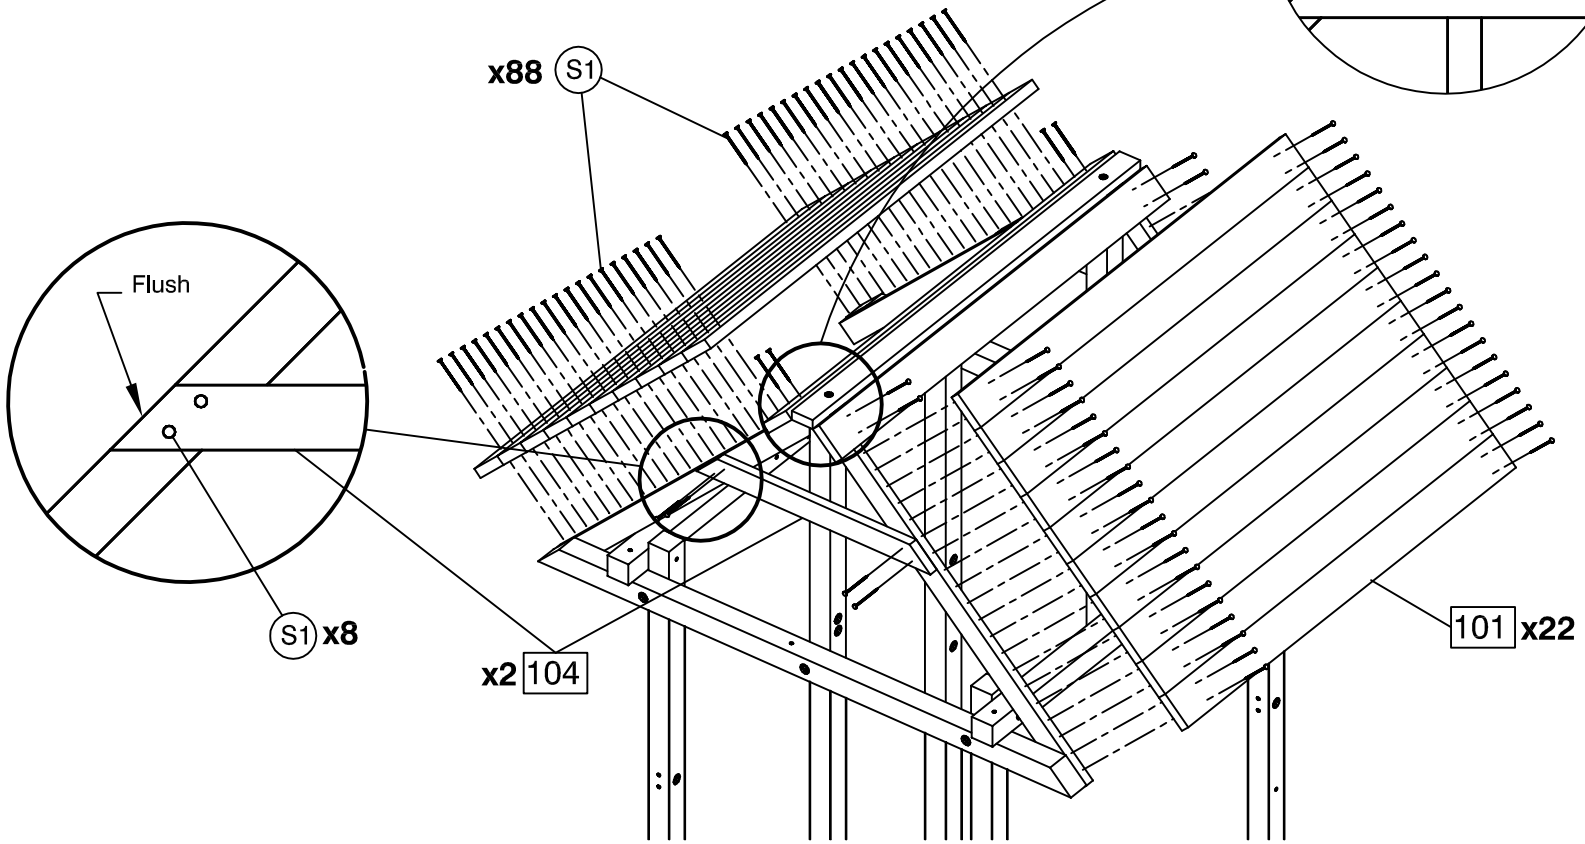

kid's creations
QUALITY REDWOOD SWING SETS

Trapeze Arm
5' or 7' Decks

16616PLAY

LDR: 1-14-2013

Recommended for ages 3 to 11

- BEFORE YOU BEGIN -

First...

- Check with your homeowner's association before assembling.
- Read instructions thoroughly before you begin. If you have purchased accessories to accompany this play set, please read all installation instructions before beginning assembly of this structure.

Check All Parts

- If a part is missing, circle the part in question and call 1-800-437-0784.

Adult Assistance required
Assistance is necessary to handle, fit, and secure some components.

Squareness is very Important!
Start with a level surface and keep 90° corners and 90° perpendiculars throughout the assembly to ensure all components fit together.

Safety!

- Check for protruding screws and bolts, verify all screw and bolt lengths during assembly.

Always wear OSHA-APPROVED safety glasses throughout assembly process.

STOP!

CALL US FIRST!! DO NOT RETURN TO STORE!!
For immediate help with assembly, damaged or missing parts call us toll free at 1-800-437-0784

STOP!

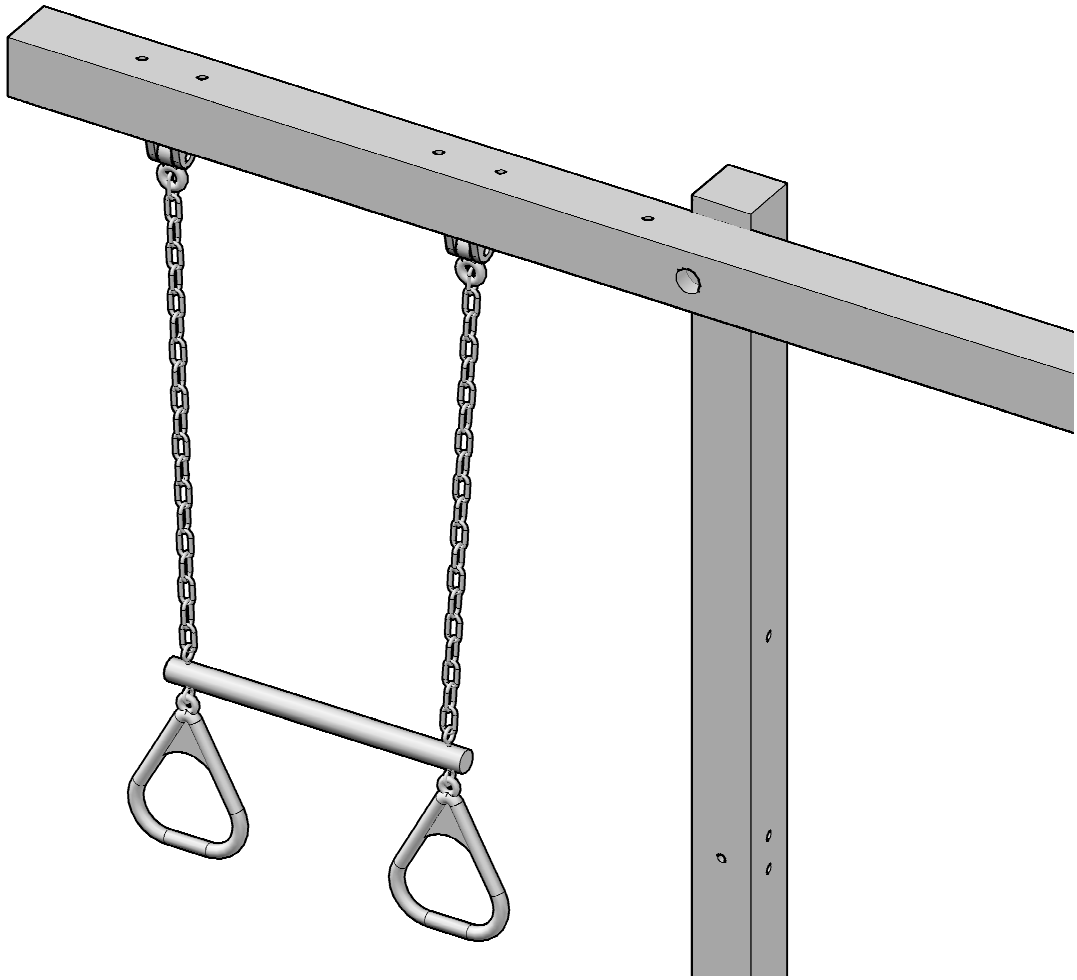

PARTS LIST

NOTE: Each wood part is stamped with part identification number.

3-1/2 x 3-1/2 x 110"

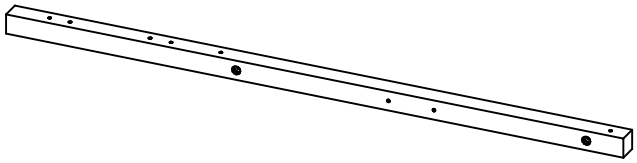

40 x1

ACCESSORIES

Swing Hanger 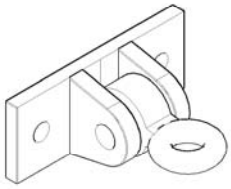 **2433** x2	Trapeze 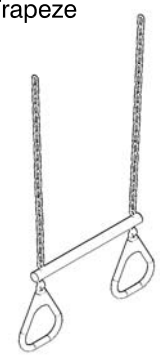 **2435** x1	24" Extension Chains (USE WHEN ATTACHING TO 7' DECK HEIGHT) **2591** x2
	Spring clip 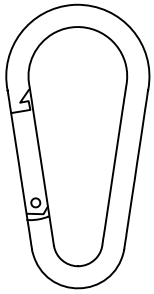 **2004** x2	Quick Clip (USE WHEN ATTACHING TO 7' DECK HEIGHT)  **2020** x2

FASTENER/HARDWARE IDENTIFICATION (Shown Actual Size)

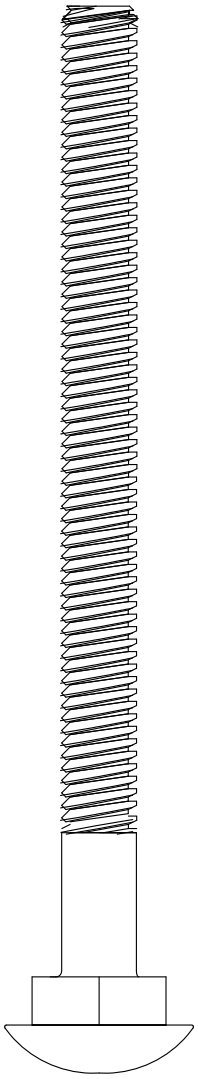

3/8 x 5" Carriage Bolt

☐ **x4**

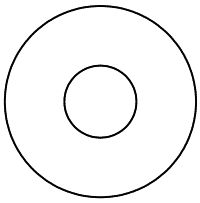

3/8" Flat Washer

☐ **x4**

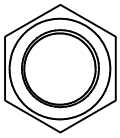

3/8" Lock Nut

☐ **x4**

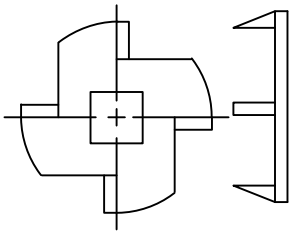

⅜" Torque Washer

☐ **x4**

TRAPEZE ASSEMBLY

PARTS REQUIRED:
(1) 40 Trapeze Top Beam
(1) 2435 Trapeze
(2) 2004 Spring Clips

Note: For 7' Deck height use chain extensions and clips



x2 24" Chain Extensions

x2 Quick Clip

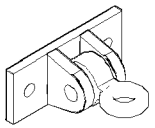

x2 2433 Swing Hanger

x4 C14





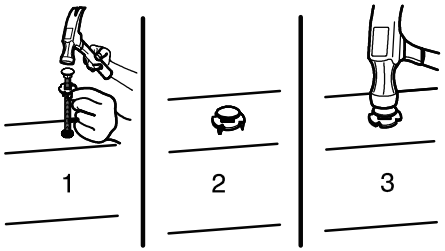

1) Place torque washer with teeth facing down. Insert Bolt and tap through hole
2) Make sure torque washer and bolt are centered over hole.
3) Pound Bolt to seat torque washer

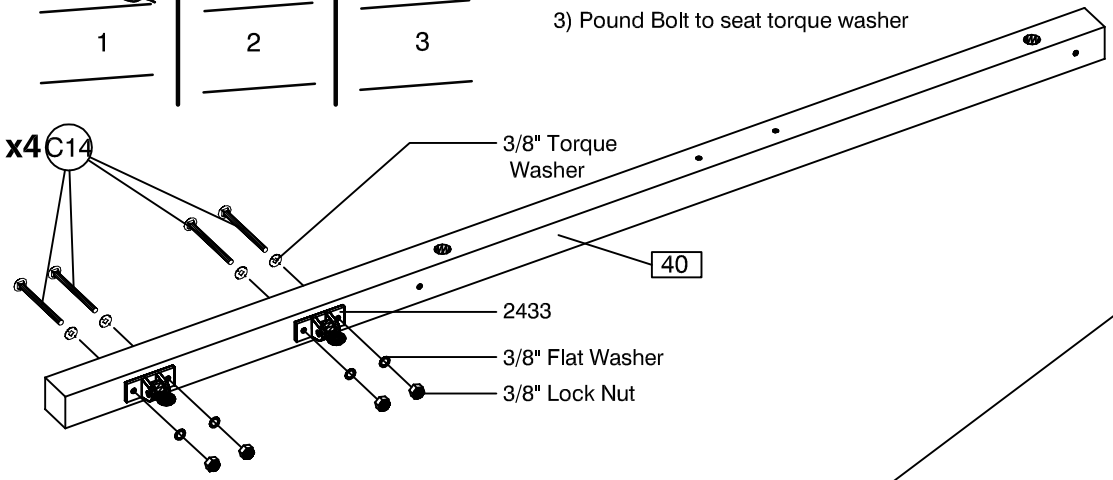

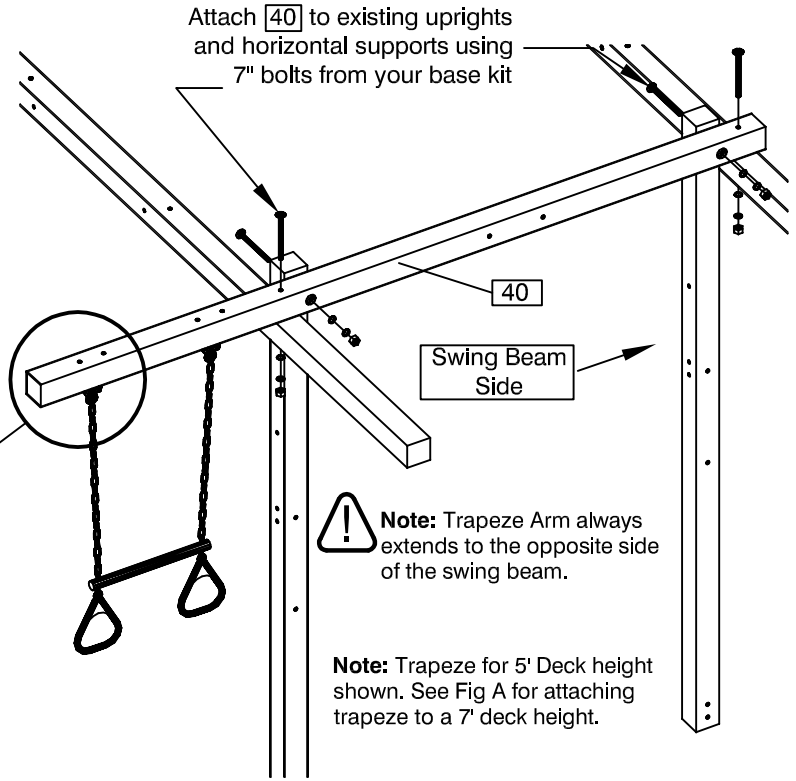

Note: Trapeze Arm always extends to the opposite side of the swing beam.

Note: Trapeze for 5' Deck height shown. See Fig A for attaching trapeze to a 7' deck height.

Attach a Spring Clip to the top of each trapeze chain and attach spring clip to swing hanger

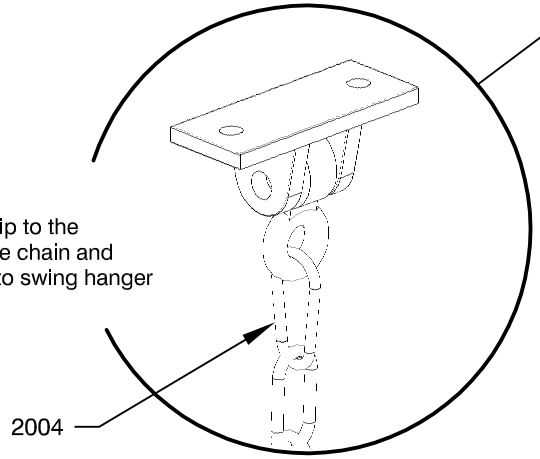

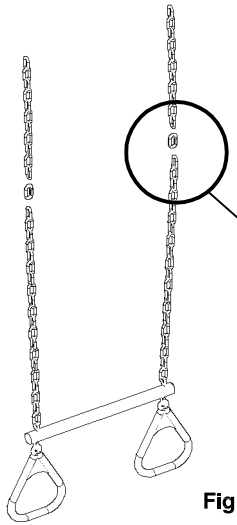

7' Deck Trapeze:
Use the chain extensions and quick clips for attaching the trapeze to a 7' deck height.

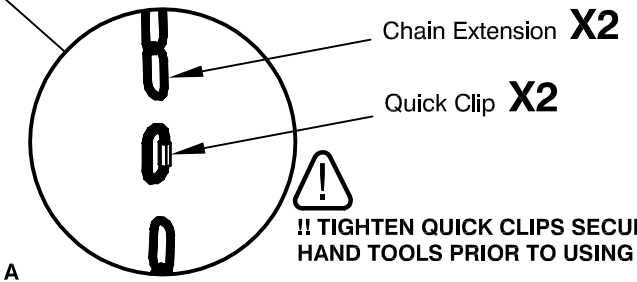

!! TIGHTEN QUICK CLIPS SECURELY USING HAND TOOLS PRIOR TO USING YOUR TRAPEZE !!

Fig. A

kid's creations
QUALITY REDWOOD SWING SETS

Rope Ladder for 5' Deck

16617PLAY

LDR: 1/15/2013

Recommended for ages 3 to 11

- BEFORE YOU BEGIN -

First...

- Check with your homeowner's association before assembling.
- Read instructions thoroughly before you begin. If you have purchased accessories to accompany this play set, please read all installation instructions before beginning assembly of this structure.

Check All Parts

- If a part is missing, circle the part in question and call 1-800-437-0784.

Adult Assistance required
Assistance is necessary to handle, fit, and secure some components.

Squareness is very Important!
Start with a level surface and keep 90° corners and 90° perpendiculars throughout the assembly to ensure all components fit together.

Safety!

- Check for protruding screws and bolts, verify all screw and bolt lengths during assembly.

Always wear OSHA-APPROVED safety glasses throughout assembly process.

STOP

CALL US FIRST!! DO NOT RETURN TO STORE!!
For immediate help with assembly, damaged or missing parts call us toll free at 1-800-437-0784

STOP

Note: Additional parts shown to indicate rope ladder location.

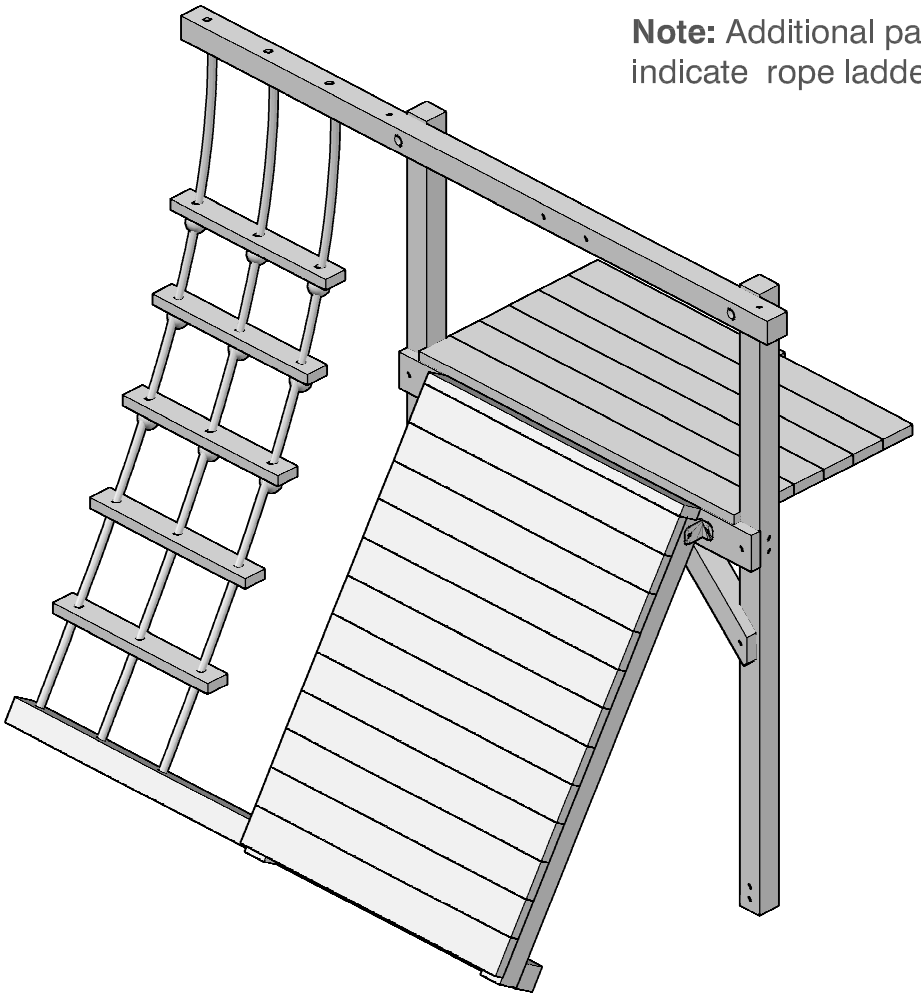

PARTS LIST

NOTE: Each wood part is stamped with part identification number.

1-1/2 x 3-1/2 x 29"

99 x5

3-1/2 x 3-1/2 x 95-3/4"

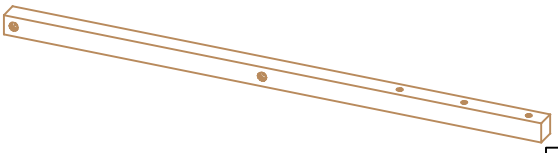

135 x1

3-1/2 x 3-1/2 x 110"

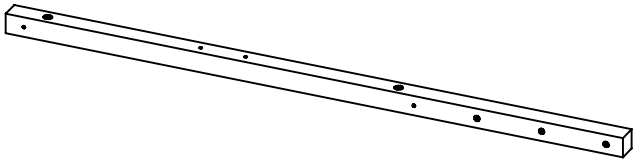

38 x1

13' Rope

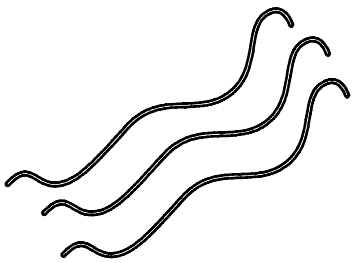

2638 x3

FASTENERS (Shown actual size)

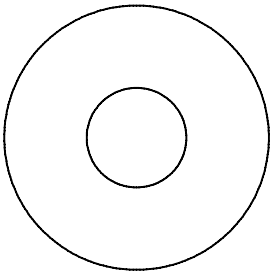

1/2" Flat Washer

☐ **x2**

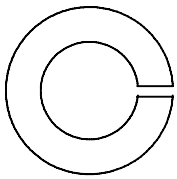

1/2" Lock Washer

☐ **x2**

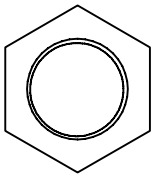

1/2" Hex Nut

☐ **x2**

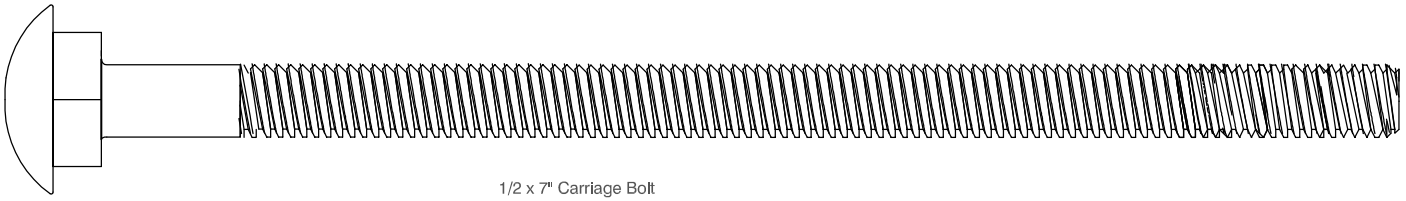

1/2 x 7" Carriage Bolt

☐ **x2**

ROPE LADDER

PARTS REQUIRED:

(5) 99 Rope Ladder Tread
(1) 38 Rope Ladder Top Beam
(1) 135 Rope Ladder Base
(3) 2438 13' Rope

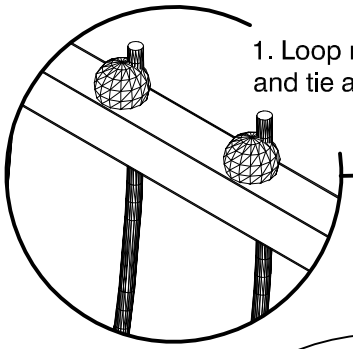

1. Loop rope through top of 113 and tie a double knot.

2. Put rope through 99 and tie knot 16" **UNDER** 99 . Continue installing 99's at spacing shown below.

16" Under 38 to first knot

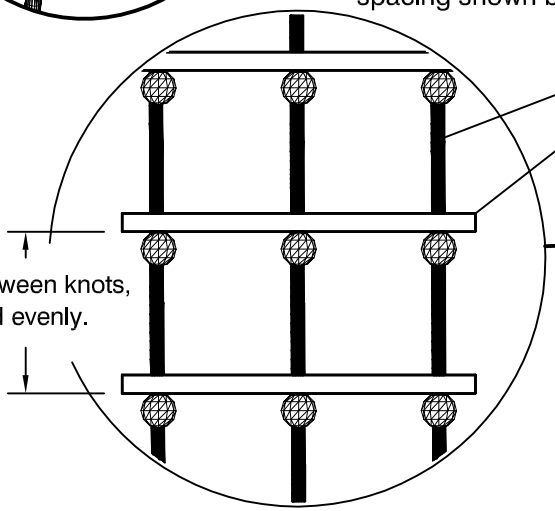

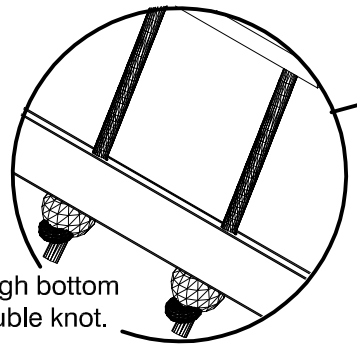

3. Loop rope through bottom brace and tie a double knot.

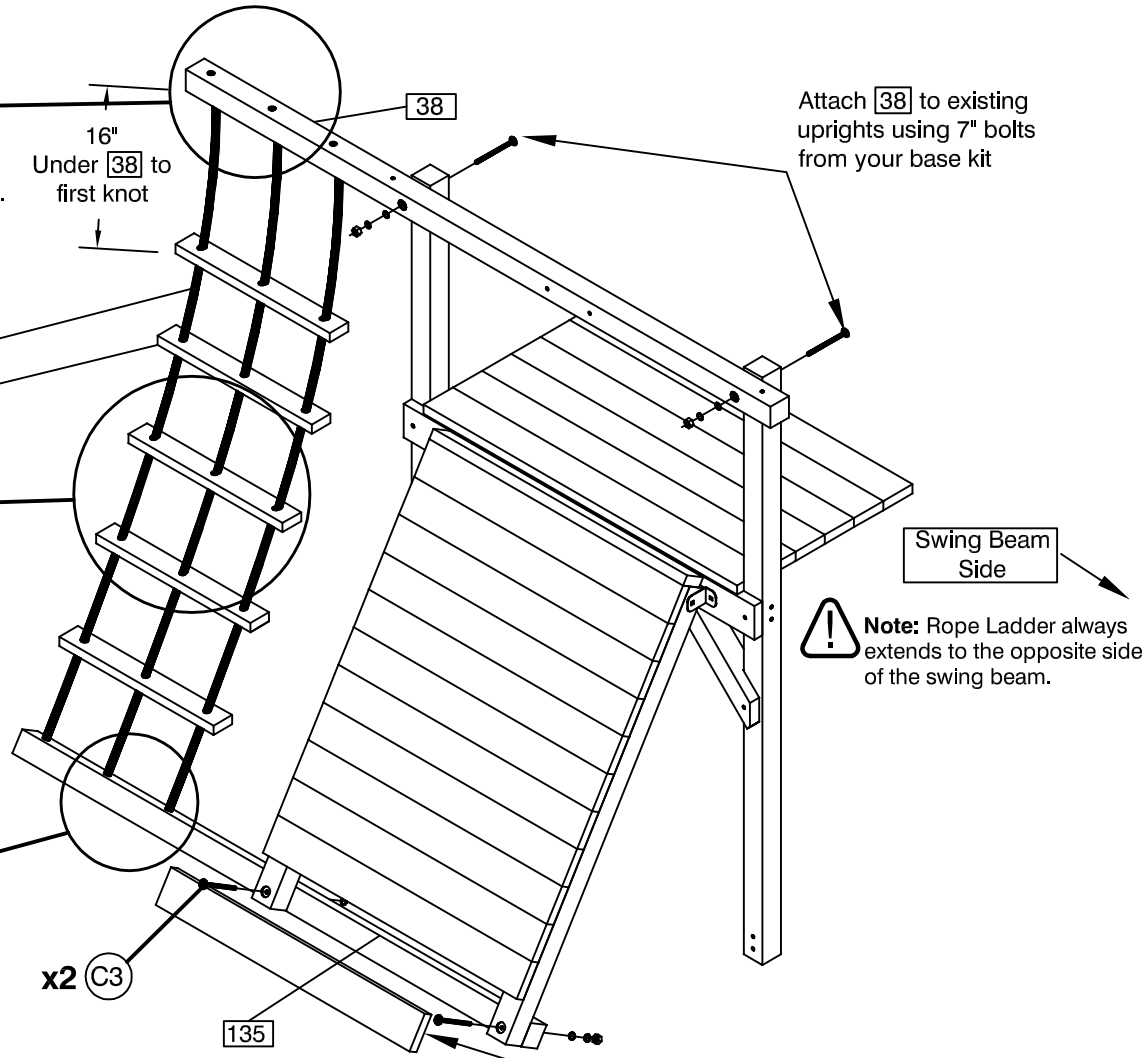

NOTE: Some parts removed for clarity.

kid's creations
QUALITY REDWOOD SWING SETS

Swing Beam
2-Position + Extension

16619PLAY

LDR: 2-1-2013

Recommended for ages 3 to 11

- BEFORE YOU BEGIN -

First...
- Check with your homeowner's association before assembling.
- Read instructions thoroughly before you begin. If you have purchased accessories to accompany this play set, please read all installation instructions before beginning assembly of this structure.

Check All Parts
- If a part is missing, circle the part in question and call 1-800-437-0784.

Adult Assistance required
Assistance is necessary to handle, fit, and secure some components.

Squareness Is very Important!
Start with a level surface and keep 90° corners and 90° perpendiculars throughout the assembly to ensure all components fit together.

Safety!
- Check for protruding screws and bolts, verify all screw and bolt lengths during assembly.

Always wear OSHA-APPROVED safety glasses throughout assembly process.

STOP

CALL US FIRST!! DO NOT RETURN TO STORE!!
For immediate help with assembly, damaged or missing parts call us toll free at 1-800-437-0784

STOP

STOP

YOU WILL NEED A 5/16" DIAMETER X 6" LONG MINIMUM DRILL BIT (Not included) TO COMPLETE YOUR INSTALLATION.

STOP

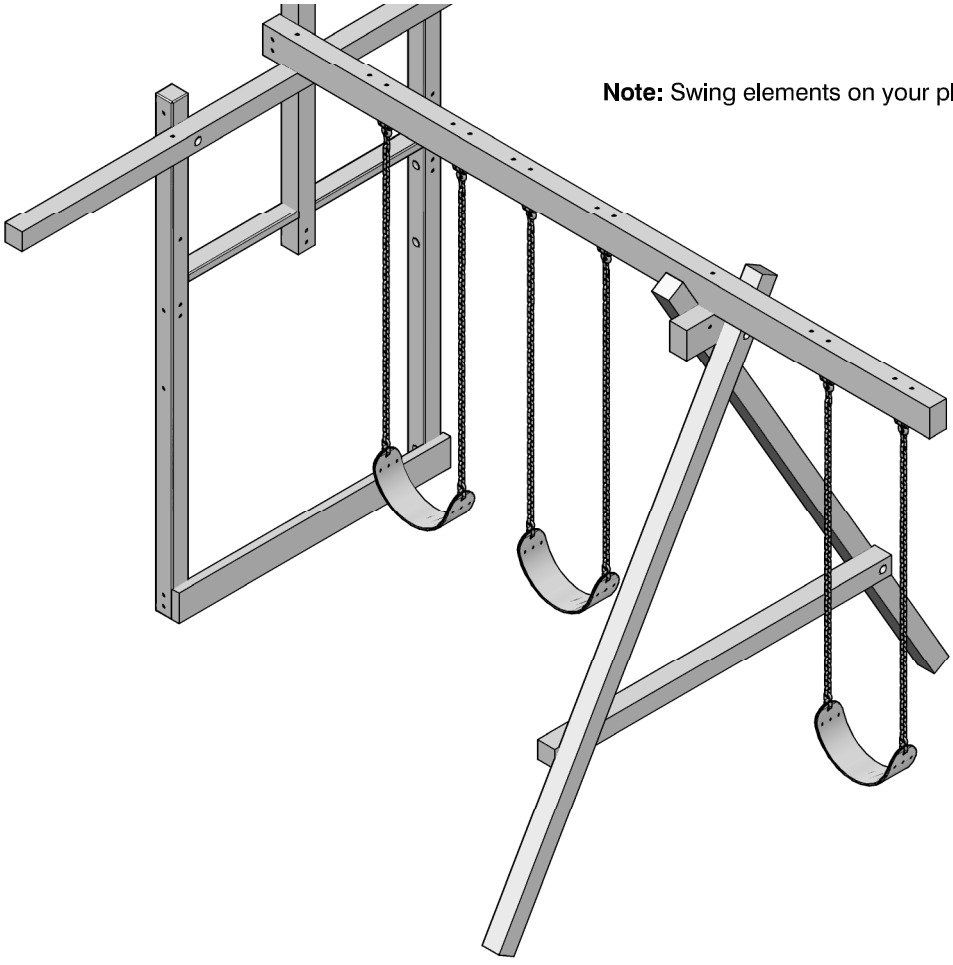

Note: Swing elements on your playset may vary.

FASTENER/HARDWARE IDENTIFICATION (Shown Actual Size)

1/2 x 7" Carriage Bolt ☐ x4

3/8 x 7" Carriage Bolt ☐ x12

1/2 x 12" Carriage Bolt ☐ x1

1/2 x 9" Carriage Bolt ☐ x1

1/2 x 5-1/2" Lag Bolt ☐ x4

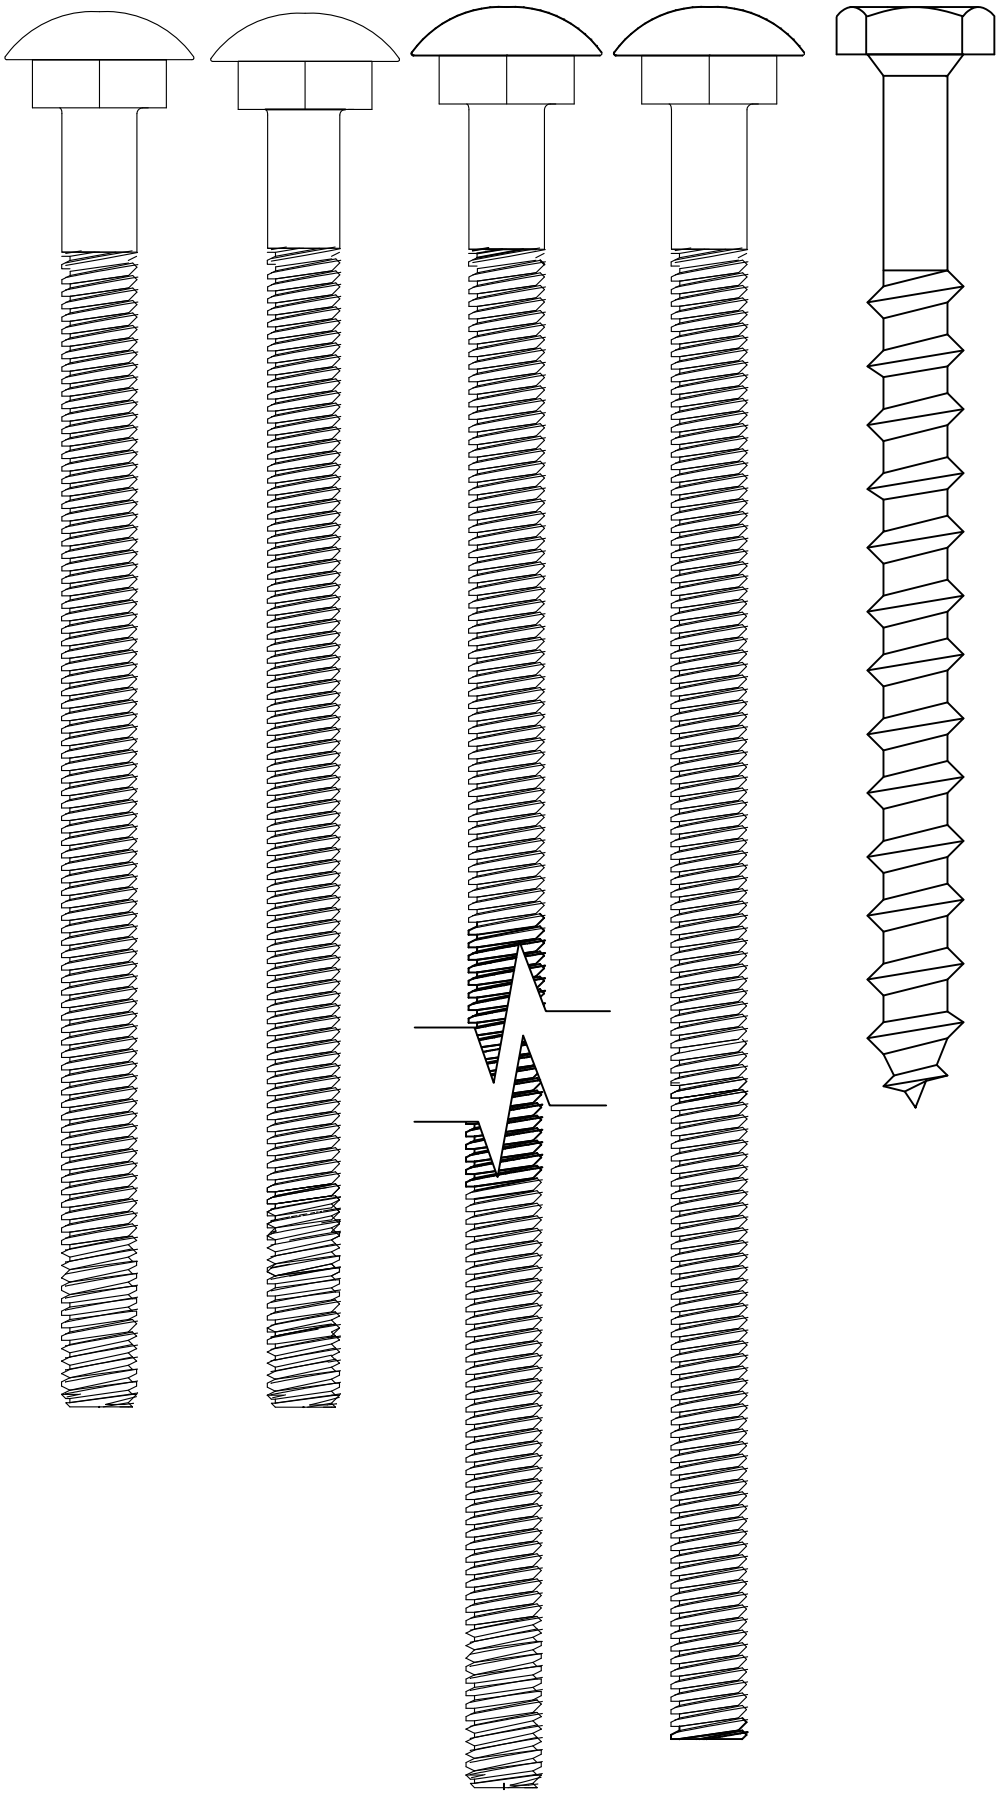

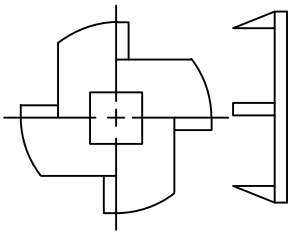

3/8" Torque Washer ☐ x12

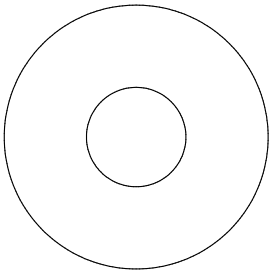

1/2" Flat Washer ☐ x10

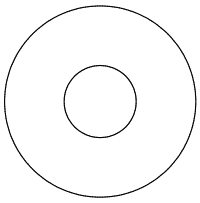

3/8" Flat Washer ☐ x 12

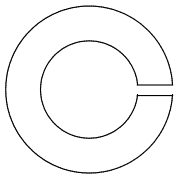

1/2" Lock Washer ☐ x10

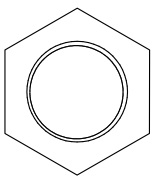

1/2" Hex Nut ☐ x 6

3/8" Lock Nut ☐ x12

PARTS LIST

NOTE: Each wood part is stamped with part identification number.

3-1/2 x 3-1/2 x 119"

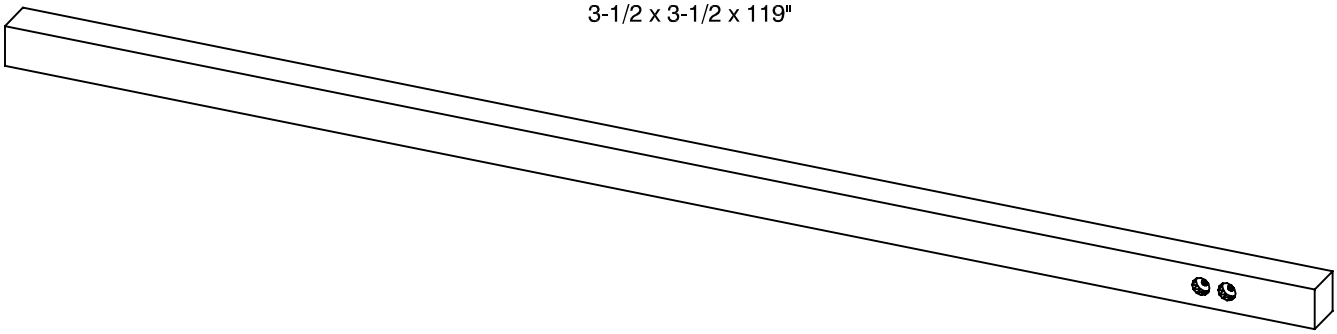

131 x2

3-1/2 x 5-1/2 x 142-1/2"

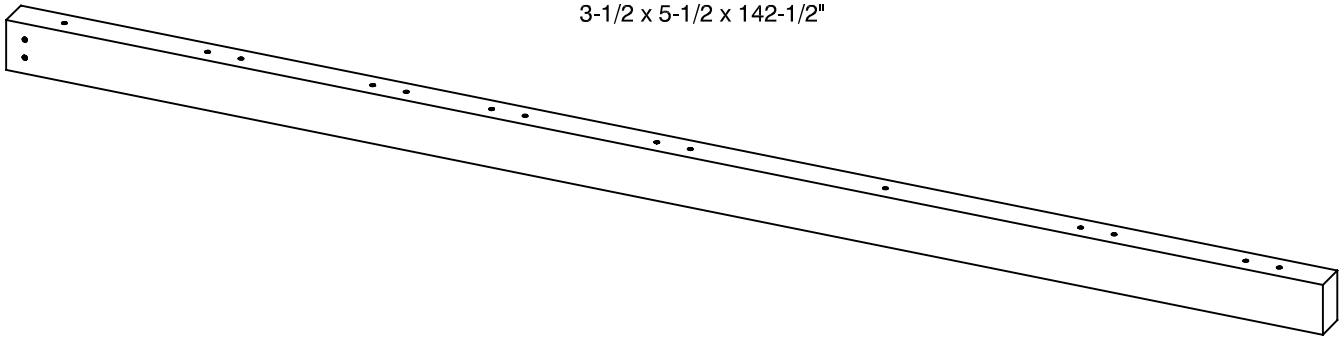

47 x1

3-1/2 x 3-1/2 x 72"

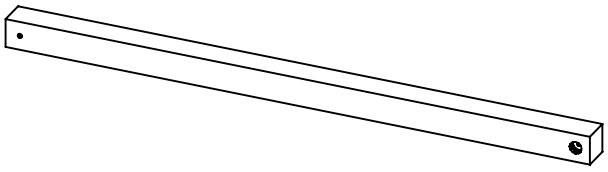

132 x1

3-1/2 x 5-1/2 x 15-1/2"



130 x1

16" Rebar Stakes With 2-1/2" Lag

2601-A x2

ACCESSORIES

Swing Hanger

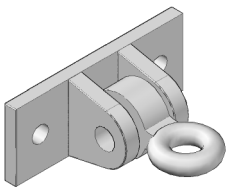

2433 x6

Spring clip



2607 x6

SWING BEAM ASSEMBLY

PARTS REQUIRED:
(1) 47 Swing Beam

x12 C7



x6 2433

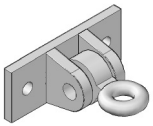

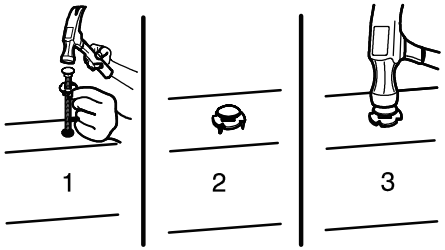

1) Place torque washer with teeth facing down. Insert Bolt and tap through hole
2) Make sure torque washer and bolt are centered over hole.
3) Pound Bolt to seat torque washer

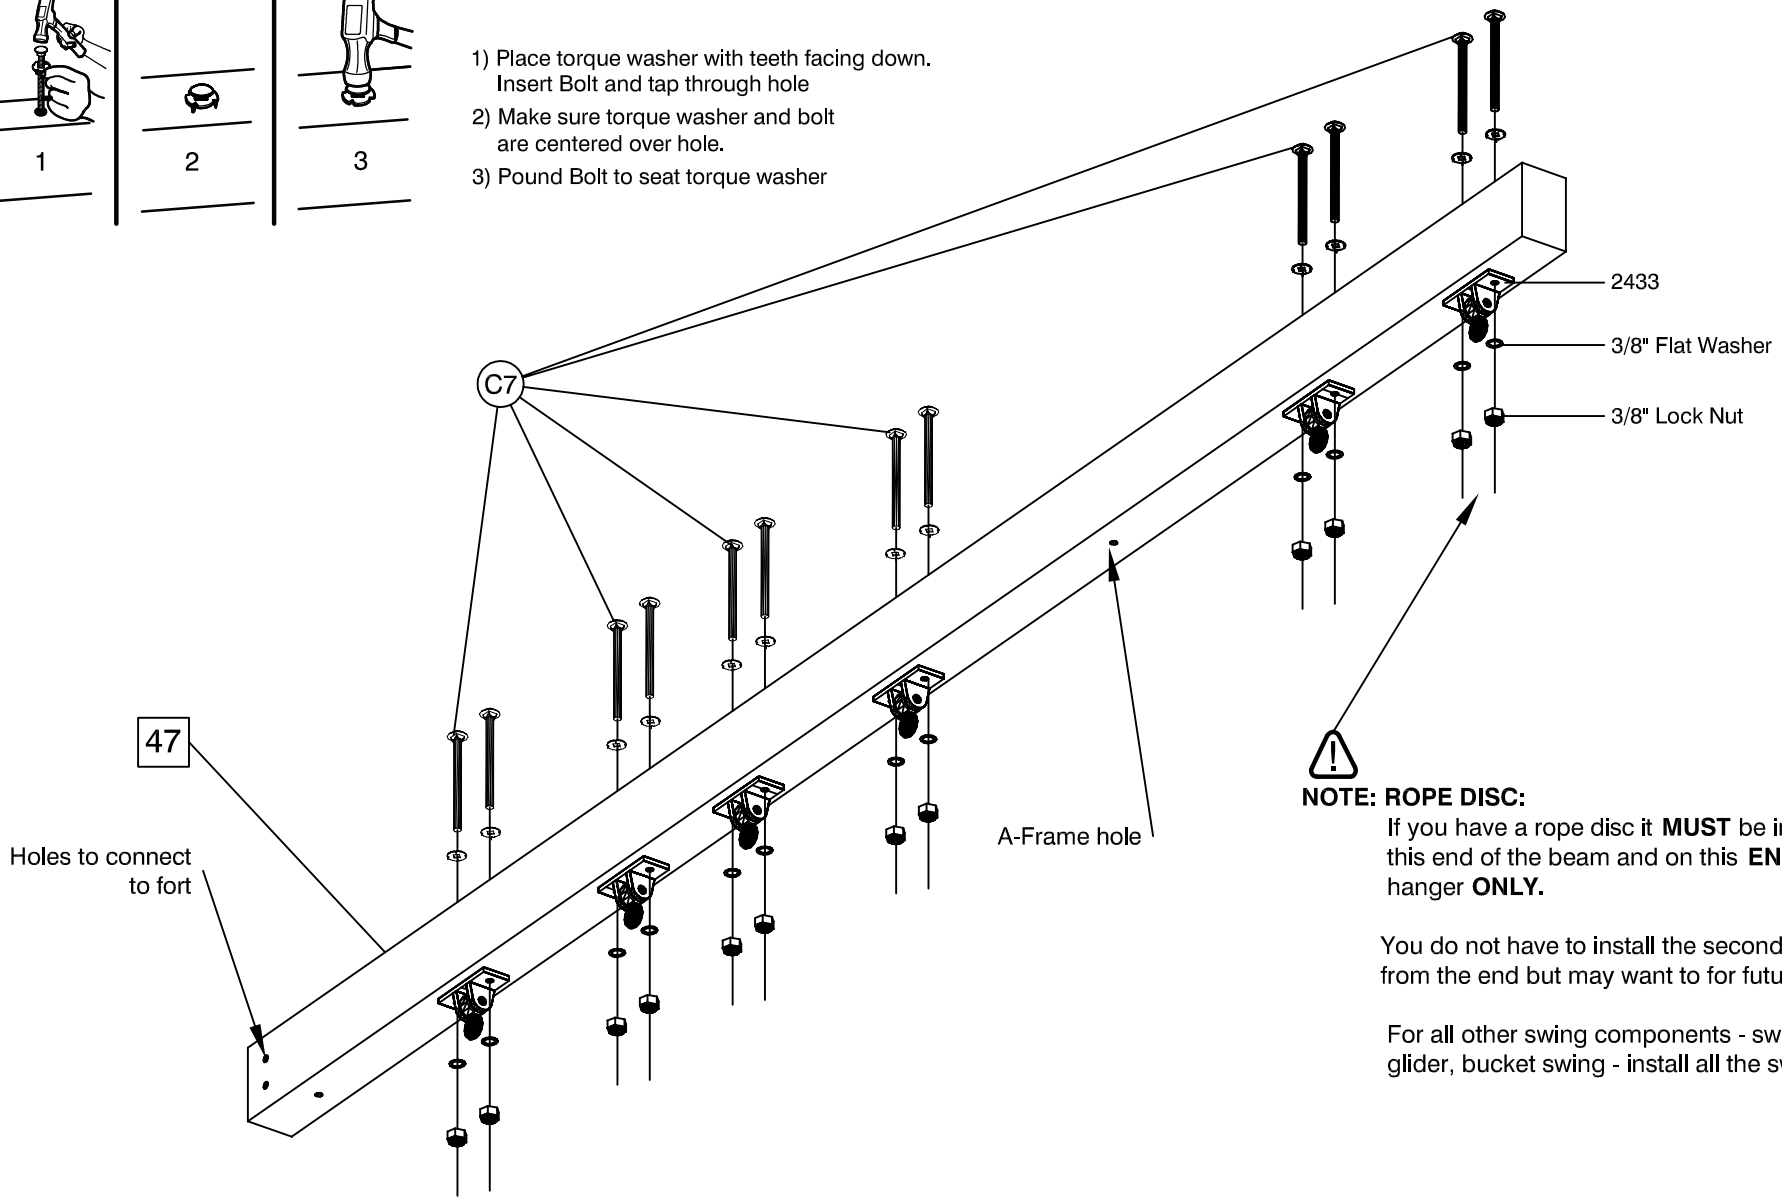

NOTE: ROPE DISC:
If you have a rope disc it **MUST** be installed on this end of the beam and on this **END** swing hanger **ONLY.**

You do not have to install the second swing hanger from the end but may want to for future swing use.

For all other swing components - swing, trapeze, glider, bucket swing - install all the swing hangers.

A-FRAME ASSEMBLY

PARTS REQUIRED:
(1)130 A-Frame Block
(2)131 A-Frame Leg

TWO PEOPLE REQUIRED FOR ASSEMBLY

x1 C1

x2 C3



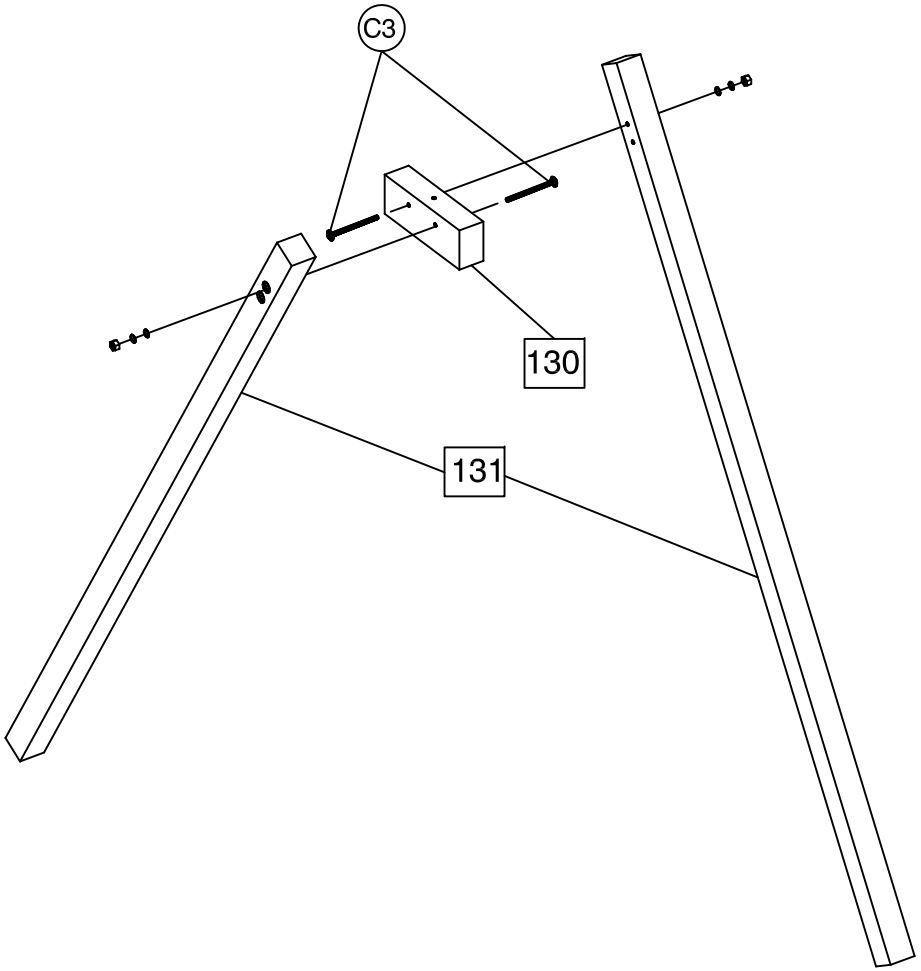

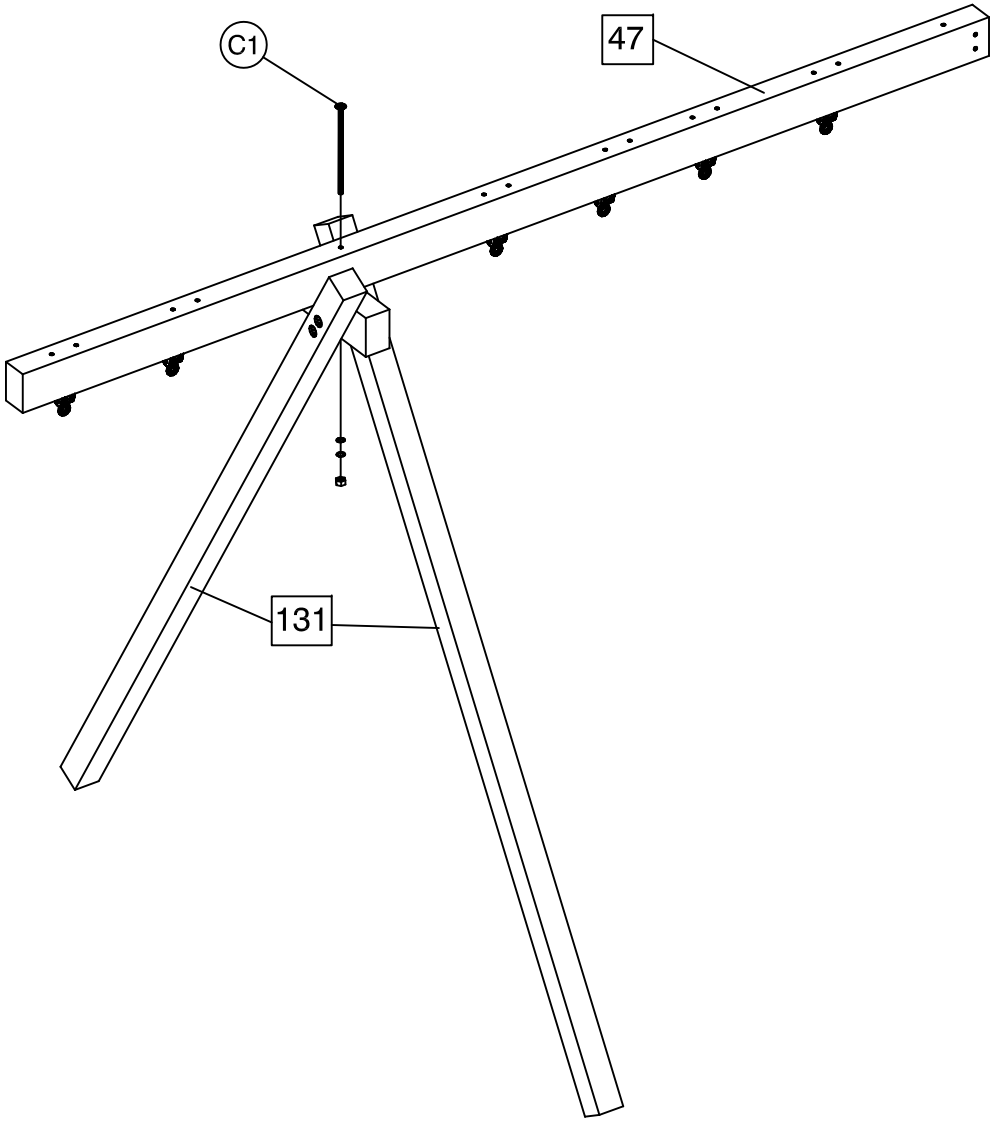

A-FRAME ASSEMBLY

PARTS REQUIRED:
(1) 132 A-Frame Support
(2) 2601-A Rebar Stakes w/2-1/2" Lag
(1) 5/16" x 6" Minimum Length Drill Bit (Not included)

x2

x4 L1 

Note: The swing beam A-Frame is designed to allow minor leveling. Depending on your playset model and ground conditions once the swing beam is **LEVEL** the A-frame width at the ground should be between the measurements shown.

TWO PEOPLE REQUIRED FOR ASSEMBLY

Step 1: Move A-Frame Legs 131 in or out to level the Swing Beam.

MAKE SURE THE A-FRAME IS NOT OUTSIDE THE MEASUREMENTS SHOWN.

Step 2: With the swing beam level attach 132 A-Frame support to A-Frame legs with 5-1/2" Lag Bolts.

MAKE SURE A-FRAME SUPPORT 132 HOLE IS IN CENTER OF A-FRAME LEG 131. (FIG. B)

PRE-DRILL A 5/16" X 2-1/2" DEEP HOLE TO AVOID SPLITTING WOOD.

Step 3: Secure A-Frame block 130 using 5-1/2" Lag Bolts. **(FIG. A)**

USE THE 5/16" X 6" DRILL BIT (Not included) TO PRE-DRILL A 5/16" X 2-1/2" DEEP HOLE TO AVOID SPLITTING WOOD.

Step 4: Stake the A-Frame legs with Rebar stakes and 2-1/2" Lag Bolt

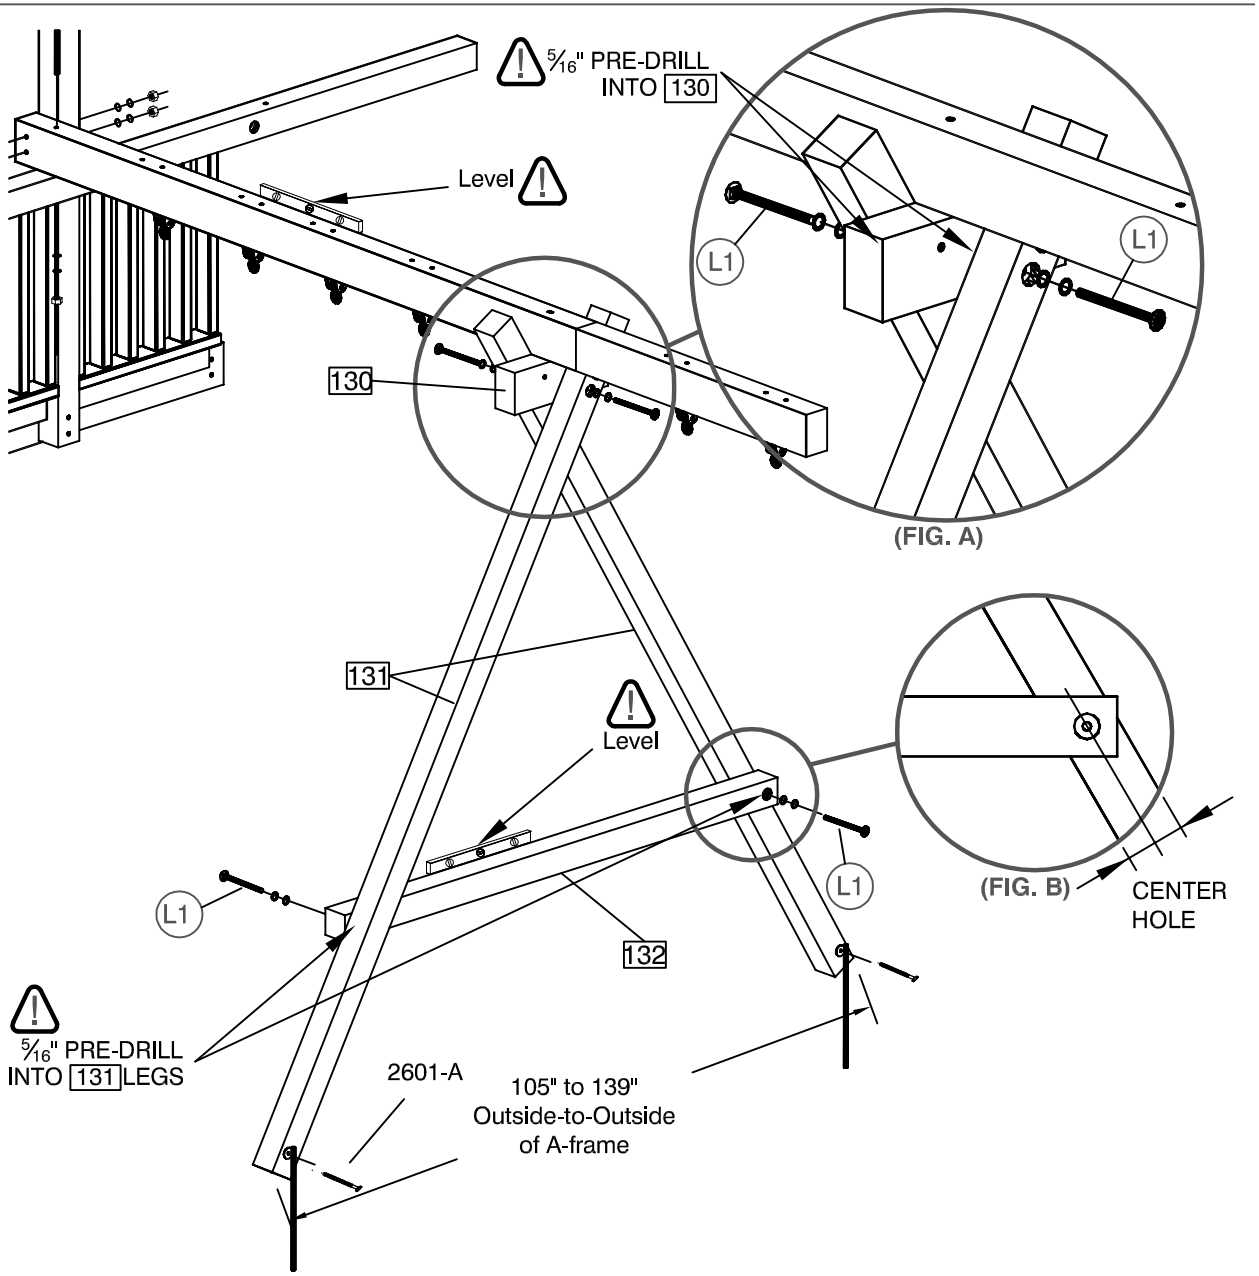

SWING ASSEMBLY

PARTS REQUIRED:

(6) Spring Clips
Nameplate w/ hardware

SWING BEAM COMPONENTS:

The swing components shown are for installation purposes. Your swing beam components may vary depending on your playset model. Refer to the instructions packed into other swing beam components for proper installation.

IF YOU HAVE A ROPE DISC:
The rope disc **MUST** only be installed on the swing hanger at the **END** of the beam.

You do not need to install the second swing hanger from the end but may choose to for a future swing.

Step 1: Tie a double knot at the end of the rope and thread thru the rope disc hole from underneath.

Step 2. Thread the rope thru the swing hanger and tie a few knots so the rope will not pull thru the swing hanger hole. **(Fig. A)**

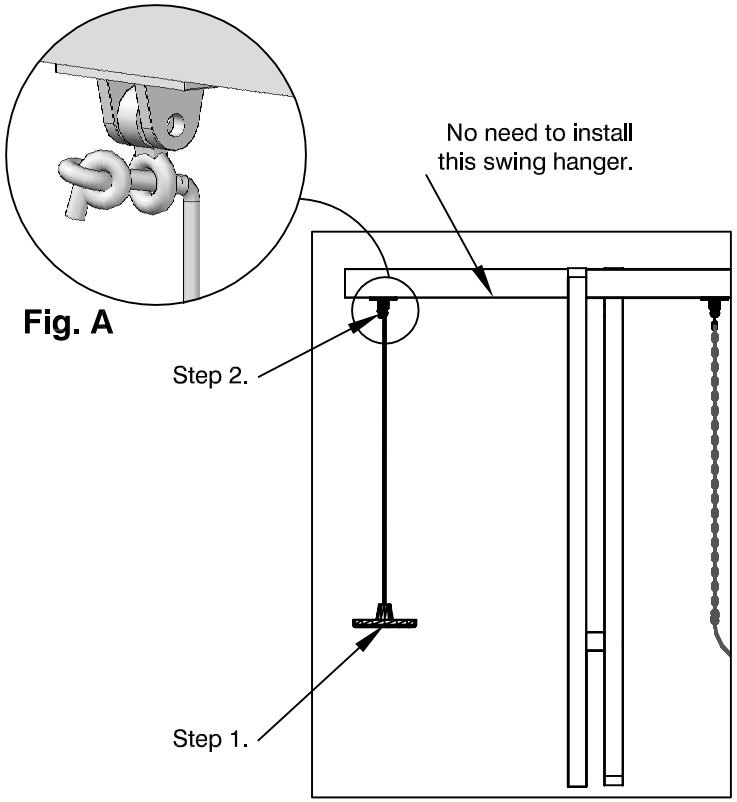

Fig. A

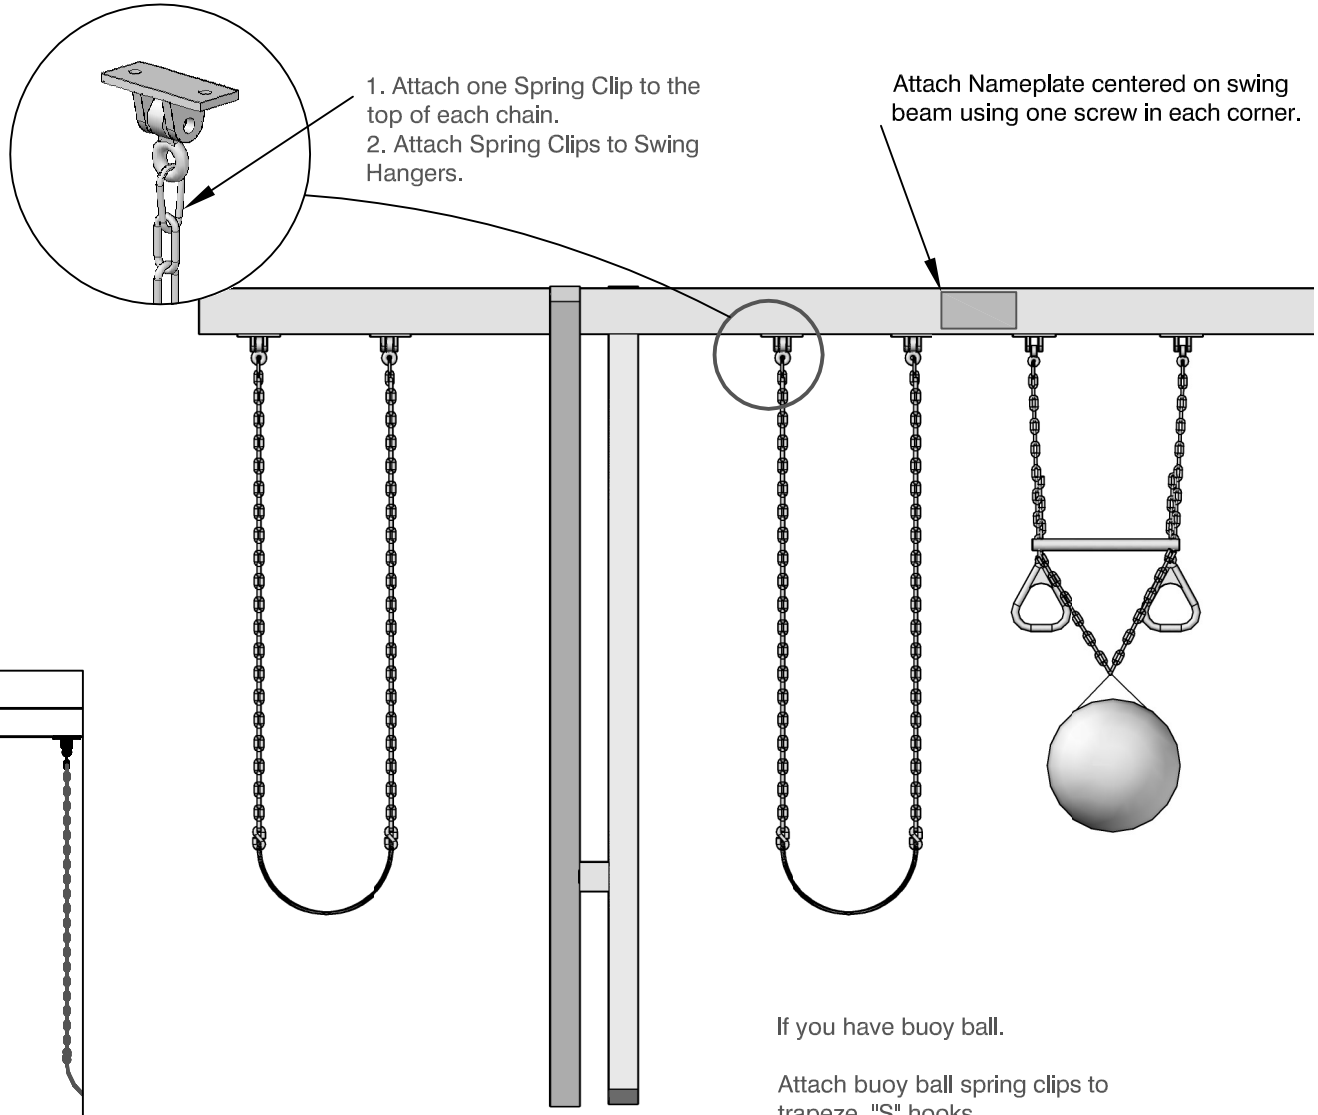

If you have buoy ball.

Attach buoy ball spring clips to trapeze "S" hooks.